

SIGNIFY

High Powered Entertainment System with Karaoke Function and Bluetooth®

Model Number: EA0749

INSTRUCTION MANUAL



AFTER SALES SUPPORT

☎ AUS 1300 777 137 EMAIL service@unclebills.com.au

Contents

Welcome	03
Important Safety Instructions	04
Box Content	06
Product Overview	07
Top Panel	07
Panels	08
Remote Control	09
Before First Use	12
Instructions	13
Using the Audio Modes	13
Preparing the FM Antenna	13
Auto-Search for FM Radio Stations	13
Manual Searching for AM/FM Radio Stations	13
Using the USB Input Function	13
Using the SD Card Input Function	14
Using the Bluetooth® Function	15
Using the Microphone	17
Technical Specifications	18
Tips and Troubleshooting	18
Warranty Details	19

AFTER SALES SUPPORT

 **AUS** 1300 777 137  **EMAIL** service@unclebills.com.au

Welcome

Congratulations on choosing to buy a Signify® product.

All products brought to you by Signify® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

This comprehensive instruction manual will provide you with a detailed guide on how to operate your product and will also assist you in troubleshooting any problems that you may encounter.

If you have any queries regarding the use of this product, please feel free to phone our technical support line for advice. If you are experiencing difficulties or believe that the product may have a technical fault, we will also assist you in rectifying the issue. We can generally solve most problems simply and quickly over the phone, so please always phone us first!

We are sure that you will enjoy using this product and you can expect to gain years of service from this product when it is used and maintained in the correct manner.

IMPORTANT: Only audio files in MP3 format can be played successfully on your Entertainment System. Please ensure your audio files loaded on your USB drive and SD card are converted to MP3 format before playing on the Entertainment System.

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Important Safety Instructions

RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

1. Before installing the Entertainment System, ensure the electrical voltage and circuit frequency correspond to the voltage stated on the rating label of your product and your power outlet is properly earthed.
2. Do not use the Entertainment System with an extension cord unless this cord has been checked and tested by a qualified electrician. If an extension cord is used, please ensure that it has a rating equal or exceeding the rating of this product.
3. Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Check the power cord regularly for visible damage. If it is damaged, please contact the After Sales Support line for further advice.
4. Check the power cord regularly for visible damage. If it is damaged, please contact the After Sales Support line for further advice.
5. When the Entertainment System is not in use, switch it off and unplug from the power outlet. Do not leave the product unattended when connected to the power supply. To unplug, grip the plug and pull from the power outlet. Never pull by the cord.
6. This product is not user-serviceable. Contact with high voltage components may cause a risk of electric shock, therefore do not attempt to open the back cover of the Entertainment System.
7. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical devices. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the device. See your qualified electrician for professional advice.
8. This Entertainment System is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
9. Install and operate the Entertainment System in a cool and sufficiently ventilated room to ensure it does not overheat.

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Important Safety Instructions (cont)

10. Never block the ventilation holes and openings. Do not place this product against soft surfaces, drapery or fabric that may block the ventilation holes. The product should not be placed in an "in-built" installation unless all ventilation holes are provided with adequate ventilation.
11. Do not expose the Entertainment System near water, rain moisture, liquids or dust. Do not store or use the Entertainment System in high moisture environments. Moisture can damage the speaker cone and surround and cause corrosion of electrical contact and metal parts.
12. Unplug the Entertainment System in cases of electrical storms to protect against the possibility of power surges damaging the device.
13. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
14. This Entertainment System is intended to be used indoors, for household use only. Do not use the device outdoors.
15. The Entertainment System and its power adaptor have no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the Entertainment System. This will void the warranty.
16. Never operate the Entertainment System with wet hands, submerge under water or spill liquids into or onto the device.
17. Do not place the Entertainment System near a hot burner (gas or electric), other heat emitting sources or open flames.
18. Always position the Entertainment System on a flat and stable surface.
19. Be careful when transporting the Entertainment System. This unit is equipped with wheels and will roll if it's not secure. Please ensure it is secure so it does not come into contact with any other items or people.
20. If the Entertainment System has been exposed to strong fluctuations in temperature (for example, after transport), do not switch it on immediately. Moisture and condensation could damage the equipment. Do not switch on the equipment until it has reached room temperature.



To prevent possible hearing damage, avoid listening at high volume levels over long periods of time. Even exposure to short bursts of loud noise can result in hearing loss. Please keep the volume consistently at a comfortable level.

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Box Content

Please ensure you carefully unpack the product package and check you have the below accessories before you dispose the package:


1. Signify High Powered Entertainment System with Karaoke Function and Bluetooth®
2. AC Power cord
3. Remote Control
4. Wireless Microphone
5. RCA Stereo Audio Cable
6. 2 x AAA batteries (included)
7. 2 x AA batteries (included)
8. User manual

AFTER SALES SUPPORT

 **AUS** 1300 777 137 **EMAIL** service@unclebill's.com.au

Product Overview

Top Panel

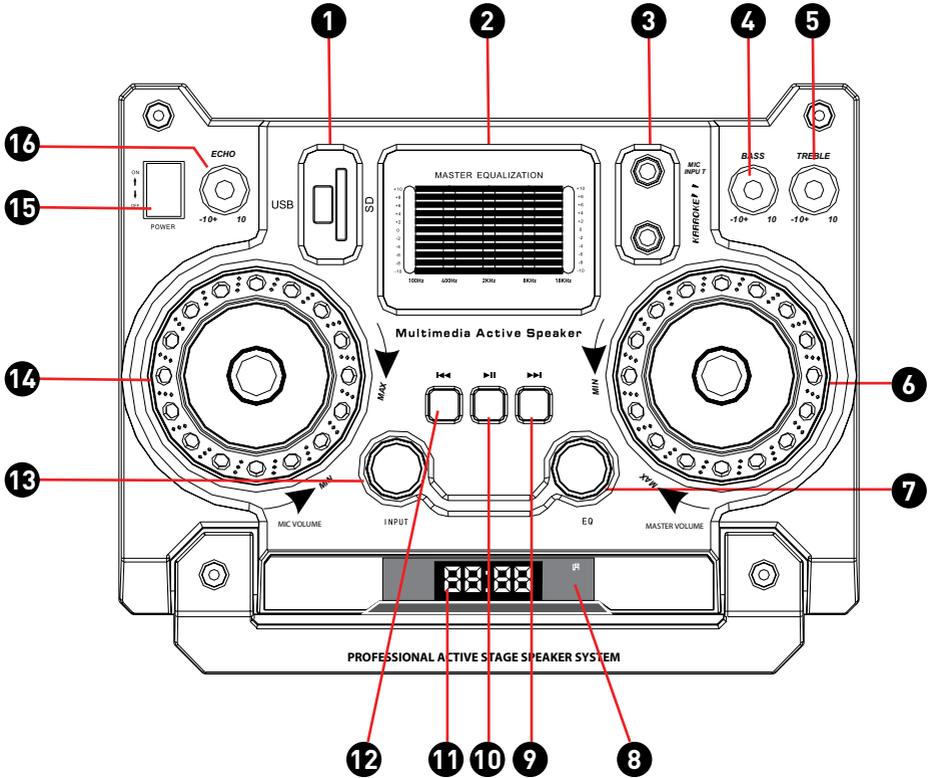


- | | |
|-----------------------------|---|
| 1. USB/SD Input | 9. Next Song/FM Next Frequency |
| 2. 5 Band Equaliser | 10. Pause/Play/FM Search |
| 3. Microphone Input Sockets | 11. Mode Display |
| 4. Bass Control | 12. Previous Song/FM Previous Frequency |
| 5. Treble Control | 13. AUX/BT/FM/USB/SD Mode Select |
| 6. Master Volume Control | 14. Microphone Volume Control |
| 7. EQ Selector | 15. Power On/Off |
| 8. Remote Control Receiver | 16. Microphone Echo Control |

AFTER SALES SUPPORT

☎ AUS 1300 777 137 EMAIL service@unclebills.com.au

Product Overview (cont)

Rear Panel

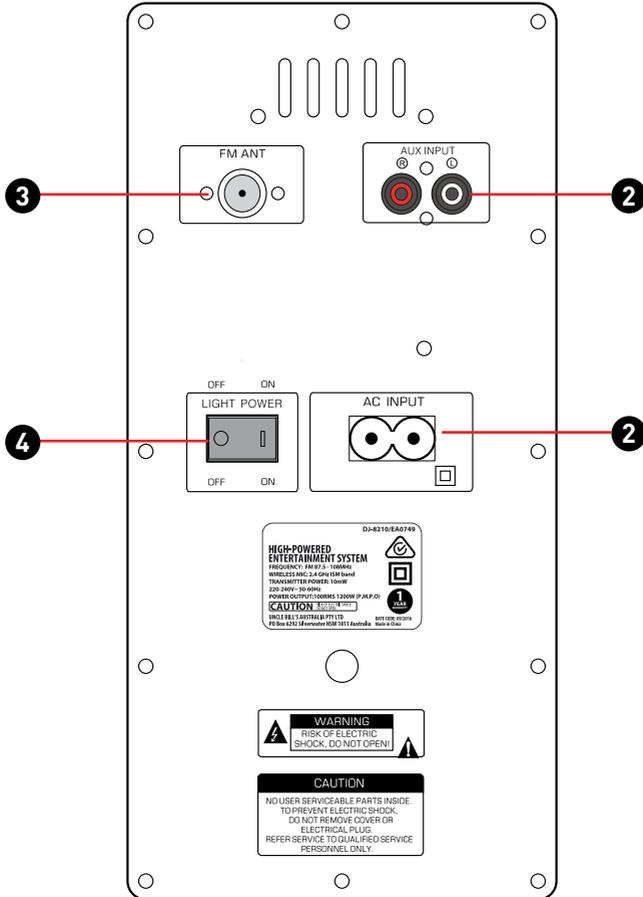


1. RCA Audio Input: Connect a CD player, TV, DVD, or other audio play equipment
2. AC Power Input
3. FM Antenna Input
4. LED Light Power Switch On/Off

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Product Overview (cont)

Remote Control

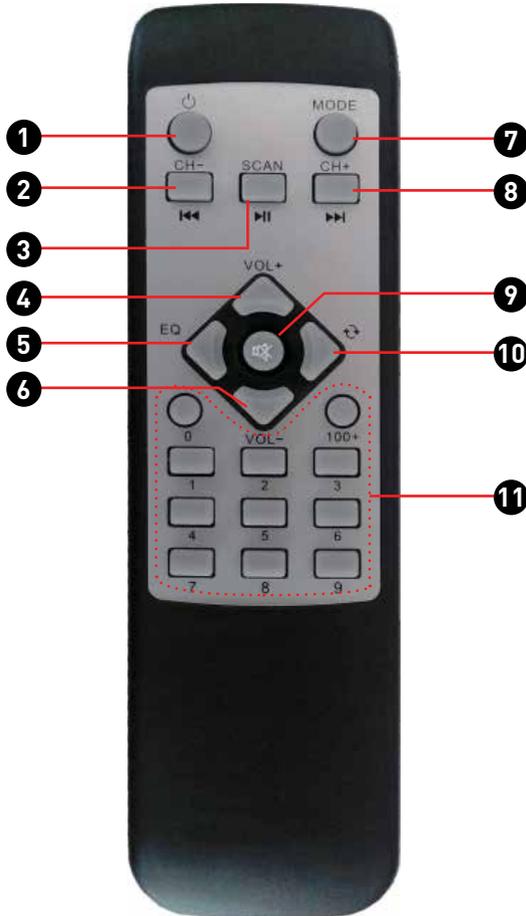

- | | |
|---|--|
| 1. Standby | 7. Mode Selection: AUX/BT/FM/USB/SD |
| 2. Previous Track/FM Previous Frequency | 8. Next Track/Next FM Frequency |
| 3. MP3 Pause/Play/FM Auto Scan | 9. Mute |
| 4. Volume Control Up (+) | 10. Select Repeat Function
(Single Repeat or All Repeat) |
| 5. EQ Selector | 11. 0~9: Song Selection/Manual FM Radio
Frequency Selection. 100+ skips 100 tracks. |
| 6. Volume Control Down (-) | |

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Product Overview (cont)

USB/SD Input

Use the USB/SD input to play tracks directly from your USB or SD device. To use the USB/SD function, simply turn the Entertainment System on and insert a USB or SD device and the device will automatically begin to play.

Master Equalization

The Entertainment System features a 5 band custom equalizer. This allows you to increase or decrease the gain for specific frequency ranges and adjust the audio output to your own personal listening preferences.

To adjust the equalizer settings, move the slider bars for each of the 5 frequency ranges.

Microphone

Included with your Entertainment System is a wireless microphone. Two Microphone Input Sockets have also been included in your Entertainment System, for your enjoyment.

To use the microphone, ensure the batteries are correctly inserted into the bottom of your microphone (refer to page 12 for more detailed instructions) and slide the on/off button all the way up to switch on. The green indicator light will illuminate.

To connect your wired microphone (not included) to the Microphone Input Socket located on the front panel, you will require an adaptor if your wired microphone does not use a 1/4" plug.

Select a mode to play and adjust the volume of the microphone by turning the Mic Volume Adjustment dial located on the top of the Entertainment System. If you want to hear the music at the same time, then ensure you also adjust the Master Volume Control up to your preferred volume level.

Bass Control

To enhance the bass of your tracks and audio sounds you can manually adjust the bass by turning the bass adjustment dial clockwise till you reach a preferred bass setting.

Treble Control

To enhance the treble of your tracks and audio sounds you can manually adjust the treble by turning the treble control dial clockwise till you reach a preferred treble setting.

Master Volume Control

Use the Master Volume dial to control the volume of the Entertainment System. To increase the volume, turn the Master Volume dial clockwise and to decrease, turn the dial anticlockwise.

EQ Selector

Press the EQ button to select from a range of EQ (tone) settings (Classic, Rock, Jazz, Pop and Country).

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Product Overview (cont)

Previous Song/FM Previous Frequency

Use the previous song/previous frequency button to skip to the previous track while it is playing and to scroll through tracks (applicable for MP3 USB or SD card playback modes). The previous song/previous frequency is also used in FM mode to skip to the previous pre-set radio station. When the previous song/previous frequency button is held down this will also decrease the music volume to a desired setting, U00 being no volume.

Pause/Play/FM Search

Use the pause/play button to play or pause tracks while in MP3 audio playback (AUX/USB/SD CARD), FM radio, or Bluetooth®. The play/pause button is also used to auto-search for radio stations with a strong enough signal to play. The stations found will automatically be allocated in order, to the presets (up to 20 channels).

Next Song/FM Next Frequency

Use the next song/next frequency button to skip to the next track while it is playing and to scroll through tracks (applicable for MP3 USB or SD card playback modes). The next song/next frequency is also used in FM mode to skip to the next pre-set radio station. When the next song/next frequency button is held down this will also increase the music volume to a desired setting, U30 being full volume.

LED Light Display Effects

The Entertainment System features colour changing LED lights on the front panel of the device. To turn on the LED lighting effects, simply switch the LED light power switch located on the rear of the unit. The LED lights will illuminate and follow the rhythm of the music.

Power On/Off

Plug the power cord into a suitable power outlet, then turn on the power switch on at the outlet. Press the power switch on the top panel to turn on the speaker. The display on the top panel will illuminate and display into default mode AUX (except if there is a USB or SD card loaded).

Standby Mode

Press the power button on the remote to enter into standby mode on the Entertainment System. Press again to turn the Entertainment System on from the standby mode.

Please note that to disconnect the Entertainment System completely from power, you will need to switch off the power switch on the top panel and then turn off the power at the outlet.

AFTER SALES SUPPORT

☎ AUS 1300 777 137 EMAIL service@unclebills.com.au

Before First Use

Prior to using your Entertainment System, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product. We recommend you keep the original packaging for storing your Entertainment System when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Entertainment System is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children so ensure all packaging materials are out of their reach.
2. Remove the twist-tie which is securing the electrical cord. Uncoil the cord and straighten it to remove any kinks. Do not use the product if the cord, plug or unit is damaged, please call the After Sales Support line for further advice.
3. Please remember that the Entertainment System has wheels for easy portability. At times, a wheel chock or brick may have to be used to ensure that it doesn't roll around or shift position.
4. Plug the AC power cord into the AC power input located on the back of the Entertainment System, then plug into an appropriate power outlet and turn on.
5. To install batteries into the remote control, slide the battery cover down on the back of the remote control. Check the inside of the remote control battery chamber for the polarity symbols, then insert the 2 x AAA batteries that have been provided.
6. To install batteries into the microphone, grasp the top of the microphone with one hand and rotate the bottom anticlockwise to unscrew and access the battery compartment. Check the inside of the microphone battery chamber for the polarity symbols, then insert the 2 x AA batteries that have been provided.

NOTE: Please pay attention to the polarity markings before inserting the batteries into the remote control and microphone.

NOTE: Do not mix old and new batteries, different types of battery (alkaline, carbon-zinc or rechargeable), or rechargeable batteries of different capacities. Mixing different types of battery could cause battery leaks or ruptures.

WARNING: Keep batteries away from children. If you suspect a battery may have been swallowed, seek immediate medical assistance.

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Instructions

Using the Audio Modes

This Entertainment System has several different modes for audio playback. Select between MP3 audio playback (AUX/USB/SD CARD), FM radio, or Bluetooth®. First ensure that the Entertainment System is powered on by pressing the power switch located on the top panel. The display will illuminate, and if no MP3/SD/USB audio device is connected it will default into AUX mode.

Press the INPUT button to navigate from AUX to Bluetooth® to FM radio mode. You can use a variety of audio devices with the Entertainment System such as stereos, DVD players, mobile phones, MP3 players using the RCA connections on the back of the unit. You can also connect the supplied Wireless Microphone while playing your songs for some portable karaoke fun!

Preparing the FM Antenna

On the rear of the Entertainment System, there is an FM antenna, which will need to be extended and adjusted to the ideal direction. Once adjusted, the antenna will be much more effective in picking up FM radio signals. Press the INPUT button to navigate through to FM radio mode.

Auto-Search for FM Radio Stations

The Entertainment System features an auto-search FM tuner to assist in finding radio stations with a strong enough signal to play. To auto-search using the tuner press the pause/play button to scan the entire FM band frequency. The auto-search will also save the stations into the 20 station memory of the Entertainment System which are labelled P00 – P20 (program 1 – program 20). The first station that the tuner finds will be saved under P01, the second station that the auto-search finds will be saved under P02, and so on. This will continue until the tuner has scanned the entire frequency or until it has saved stations into all 20 program pre-sets.

To navigate through the saved stations, use the CH+ button on the top panel to the skip forward to the next station and the CH- button to skip backwards to the previous channel.

Manual Searching for AM/FM Radio Stations

The only way to manually select a radio station is to use the numbered buttons on the remote control. For example to listen to 96.1 simply press the "9", "6" and "1" buttons on the remote control and the Entertainment System will automatically start to play the selected station.

Using the USB Function

The Entertainment System features a USB input which enables MP3 files to be loaded on to a USB flash drive and played back through the Entertainment System.

IMPORTANT: Only audio files in MP3 format can be played successfully on your Entertainment System. Please ensure your audio files loaded on your USB drive and SD card are converted to MP3 format before playing on the Entertainment System.

In order to play your MP3 files on the Entertainment System, first load them on to a compatible USB storage device. We suggest using a USB flash drive and access by simply inserting the drive into your computer's USB port then copying and pasting (or drag and drop) compatible MP3 files on to the USB drive.

AFTER SALES SUPPORT

☎ AUS 1300 777 137 EMAIL service@unclebills.com.au

Instructions (cont)

Once all files have been loaded, you can remove the USB drive from the computer, however, please ensure that the USB drive has been correctly ejected from the computer otherwise the files that have been transferred on to the drive may be damaged. If you are using a Windows PC, eject the USB device by clicking the "SAFELY REMOVE HARDWARE" icon in the Windows system tray, then select the corresponding name of USB device and if required choose "STOP" and "CONFIRM" if prompted by the pop up window. Physically disconnect the USB drive when your computer prompts you that it is safe to remove your hardware. If you are using a Mac, you can safely remove the drive by dragging the USB icon on the desktop to the "Trash".

Switch on the Entertainment System and insert the USB drive into the USB input on the top panel. The Entertainment System will automatically start playing from the USB drive.

NOTE: If the USB drive contains audio files which are not compatible with the Entertainment System, the Entertainment System will not be able to read them, so they will not be included in the count of tracks on the drive, and they will not play.

IMPORTANT: For optimum performance it is recommended to only use a USB 2.0 flash drive (not a 3.0 version).

Controlling the Playing Tracks

To control the tracks that are being played to customise and enhance your listening experience, please follow these instructions.

Playing and Pausing a Track

To either pause tracks that are playing or play a track when it is paused; press the play/pause button.

To Skip to the Next Track

To skip to the next track, press the  button on the control panel. It will skip to the next track on the USB device.

To Skip to the Previous Track

To skip to the previous track, press the  button on the control panel. It will skip to the previous track on the USB device.

Using the SD Card Input Function

This Entertainment System features an SD card input which enables MP3 files to be loaded on to an SD card and played back through the Entertainment System.

IMPORTANT: Only audio files in MP3 format will play successfully on your Entertainment System. Please ensure your audio files loaded on your SD card are converted to MP3 format before playing on the Entertainment System.

AFTER SALES SUPPORT

 **AUS** 1300 777 137 **EMAIL** service@unclebills.com.au

Instructions (cont)

In order to play your MP3 files on the Entertainment System, first load them on to a compatible SD card. Simply insert the drive into the computers SD card input then copy and paste (or drag and drop) compatible MP3 files on to the SD card. Switch on the Entertainment System and insert the SD card into the USB input on the top panel. The Entertainment System will automatically start playing from the SD card.

NOTE: If the SD card contains audio files which are not compatible with the Entertainment System, the Entertainment System will not be able to read them, so they will not be included in the count of tracks on the disc, and they will not play.

Controlling the Playing Tracks

To control the tracks that are being played to customise and enhance your listening experience, please follow these instructions.

Playing and Pausing a Track

To either pause tracks that are playing or play a track when it is paused; press the play/pause button.

To Skip to the Next Track

To skip to the next track, press the  button on the control panel. It will skip to the next track on the SD card.

To Skip to the Previous Track

To skip to the previous track, press the  button on the control panel. It will skip to the previous track on the SD card.

Using the Bluetooth® Function

This Entertainment System features a Bluetooth® receiver which enables it to be connected to compatible Bluetooth® enabled devices such as smart phones and media players. Bluetooth® enables a wireless connection between a device (such as a smart phone) and the Entertainment System, enabling the user to play and control tracks directly from their Bluetooth® enabled device.

Firstly, the user must ensure that they have a compatible Bluetooth® enabled device with Bluetooth® capability. Secondly, the user must ensure that they have loaded audio files that are compatible with the device's media player on to the device, in order to play through the Entertainment System. Once these have both been confirmed, the user can connect their device to the Entertainment System.

To pair with a Bluetooth® enabled device, simply turn the Entertainment System on by pressing the power switch on the top panel. Press the input button until "bBLUE" is flashing on the LCD display. The Entertainment System will now be "discoverable" to nearby Bluetooth® devices.

On the Bluetooth® enabled device, activate (or turn ON) Bluetooth® wireless connection, and search for nearby devices. When the device discovers "BT Audio", select and connect to "BT Audio". This process should take a few seconds to connect – no PIN or pass code will be required. When the Entertainment System and Bluetooth® enabled device have connected, you will notice that "bBLUE" will stop flashing on the display and the Bluetooth® enabled device should also show it is connected to "BT Audio".

AFTER SALES SUPPORT

 **AUS** 1300 777 137  **EMAIL** service@unclebills.com.au

Instructions (cont)

Once connected, use the media player on your Bluetooth® enabled device to play the tracks you wish to hear on the Entertainment System. Instead of playing the tracks on the built-in speaker of the devices, it will play wirelessly through the Entertainment System. Depending on the device that is connected, there may be additional steps required to select the Entertainment System as the device that the audio is playing through. Please consult the instruction manual from the device if any problems are encountered with playing the audio files through the Entertainment System via Bluetooth® wireless technology. If this does not assist, please phone the After Sales Support phone number listed in this instruction manual for assistance.

The tracks can be controlled via the media player on the phone. Depending on the device being used, the device should be able to control skipping tracks, fast forward/backward, increasing and decreasing the volume, repeating tracks etc. The control via the Bluetooth® enabled device depends solely on the device and its capabilities.

Automatic reconnection will ONLY happen if:

1. The Bluetooth® enabled device was the last device that the Entertainment System was connected.
2. The Bluetooth® enabled device has maintained "BT Audio" as one of its paired devices (the device should show a list of paired devices in the Bluetooth® menu or settings).
3. The Bluetooth® enabled device and the Entertainment System are in close proximity to one another. Generally Bluetooth® wireless technology is only operable over an unobstructed distance of approximately 10m.

Disconnecting and Reconnecting via Bluetooth®

To end the connection between the Bluetooth® enabled device and the Entertainment System, either:

1. Press the input button on the top control panel to enter a different function on the Entertainment System. This will disable the Bluetooth® function on the Entertainment System and end the connection.
2. Switch OFF the Entertainment System by pressing the power switch located on the top panel.
3. On the Bluetooth® enabled device, turn Bluetooth® connection OFF.

NOTE: If the last connecting device is within the Bluetooth® reception range of the Entertainment System, you will not be able to pair new Bluetooth® enabled device to the Entertainment system. You will need to turn off the Bluetooth connection on the last connecting device in order to connect a new device.

AFTER SALES SUPPORT


☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Instructions (cont)

Using the Microphone

This Entertainment System has two microphone input sockets which allows you to connect two wired microphones. It also comes with a wireless microphone for announcements or karaoke entertainment. Before first use, you will have to install two AA batteries (Please see page 12 for specific instructions).

NOTE: Remove the batteries when the microphone is not in use for a long time to avoid leakage. Batteries can leak chemicals that can damage electronic parts.

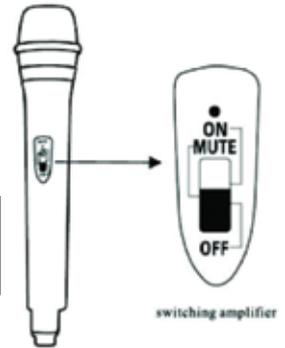

The microphone has one switch at the front, as illustrated above.

- Push the switch all the way up to the top to switch ON the microphone; the indicator light on the microphone will illuminate.
- For best reception, do not move the wireless microphone further than 15 metres away from the Entertainment System.
- Push the switch to the middle position to mute the sound temporarily; the indicator light on the microphone will dim.
- Push the switch down to switch OFF the microphone.

NOTE: While using the microphone, avoid being close to metal surfaces or walls, as they may affect the wireless transmission.

- For the best singing quality, keep the microphone within 5-15cm of the mouth and at a 45 degree angle.
- When using the microphone, always pay attention to the battery. If the battery is low, the indicator light will start to blink and the performance will progressively become poor.

* Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Uncle Bill's (Australia) Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

AFTER SALES SUPPORT

☎ AUS 1300 777 137 EMAIL service@unclebills.com.au

Technical Specifications

Unit:

Power source:	AC 220 - 240V ~ 50-60Hz
Output power:	100W RMS
Peak music power output:	1200W
Bluetooth:	Version 2.1
Loudspeaker:	2x 10'' Speaker + 2x 3'' High Frequency Tweeters
FM Frequency	FM 87.5 – 108MHz
Wireless Effective Range:	15 metres
Weight:	18.5Kgs

Wireless microphone:

Operating Range:	2.4GHz
Transmitter Power:	10mW
Battery:	DC 3V (1.5V AA x 2)

Tips and Troubleshooting:

Problem

Solution

I can't hear anything from my microphone through the Entertainment System	<ul style="list-style-type: none">- Ensure that you adjust the Microphone Volume Control dial to increase microphone volume.- Check that the mic is turned on.- Change the batteries.
There is humming or buzzing through the Entertainment System	<ul style="list-style-type: none">- Try to keep any audio signal cables or mobile phones away from the Speaker power cords. This can sometimes result in a humming or buzzing from the speaker system.
My Entertainment System won't turn on	<ul style="list-style-type: none">- Ensure that you have correctly connected the Power cable to the rear of the unit. It should not be loose.- Ensure the power switch on the top panel of the unit is switched ON.- Make sure the power is on at the outlet.
The LED light won't turn on	<ul style="list-style-type: none">- Ensure the light switch on the rear panel of the unit is switched ON.- Make sure the power cord is correctly connected and the power is on at the outlet.
I am not picking up any radio stations	<ul style="list-style-type: none">- The Entertainment System will only receive FM radio stations not AM.- You can extend the telescopic antennas at the rear of the unit to increase the reception.
The speaker makes a noise when I first turn it on	<ul style="list-style-type: none">- This is normal when the system first initialise.- Try to keep any audio signal cables or mobile phones away from the Speaker.
I can't connect my mobile phone to the Entertainment System via Bluetooth	<ul style="list-style-type: none">- Ensure the Entertainment system has been switched to Bluetooth mode with "bLUE" showing on the Mode Display- Ensure the last mobile phone or Bluetooth device has been disconnected to the Entertainment System. If they are in the range, the Entertainment will pick up the last connection as default (please see page 15-16 for details).

AFTER SALES SUPPORT

 **AUS** 1300 777 137 **EMAIL** service@unclebills.com.au

Warranty Details

High Powered Entertainment System with Karaoke Function and Bluetooth®

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Exclusions

This warranty does not cover:

- Normal wear and tear to the products or parts;
- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor;
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product; or
- Any product that has been used for purposes other than domestic use; or
- Any damage caused by improper power input or improper cable connection.

Item # EA0749

Model # DJ8210

Imported By:
Uncle Bill's (Australia) Pty Ltd
48B Egerton Street
Silverwater NSW 2128
Australia



AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au

Warranty Details (cont)

If you have any issues with this product or require further information, please contact our helpful customer support team via phone or email (details below). The product comes with a full 12 months warranty for your piece of mind. In many cases we will resolve the issue without you having to return the product. Our friendly staff can also help you with troubleshooting or advice in relation to the use of this product.

Customer Support Details:

Australian Customers: **1300 777 137**
Email: **service@signifyelectronics.com.au**

Hours of Operation: 9am – 4:30pm Monday – Friday
9am – 3pm Saturday
** Hours of Operation are Australian Eastern Standard Time.*



ATTENTION: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste.



Disposing or recycling of electronic products correctly will help save valuable resources and prevent any potential negative effects on the environment. For drop-off or collection of your e-waste, please contact your local council for further details of your nearest designated collection point.



www.planetark.org

AFTER SALES SUPPORT

☎ AUS 1300 777 137 **EMAIL** service@unclebills.com.au