

SIGNIFY™




Mini Retro Jukebox

Model Number: EA0588

QUICK START GUIDE

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA0588 PRODUCT CODE: 51830 11/2016

Getting Started

Please refer to the instruction manual for full instructions on how to operate the Jukebox.

Remove the Jukebox and all accessories from the packaging and place the Jukebox on a stable, level surface.




1. Plug in the Power

Plug the DC connector into the DC power input found on the rear of the Jukebox, then plug the AC connector (standard mains power plug) into a power outlet and switch on.



2. Switching on the Jukebox

Press the Power  / Mode button on the Jukebox. This will power ON the Jukebox and it will default to FM radio mode.




3. Turning on the LED Lights

Press the Light button once to turn ON. There is a Light Mode switch at the rear of the Jukebox to select from either changing colour effects (Play) or single colour (Hold).



4. Choose Playback Mode

Press the Power  / Mode button on the Jukebox to scroll through to your desired playback mode. You can choose from RADIO/CD/USB/SD/BLUETOOTH®.



5. Input Media Device


Insert CD, USB or SD if that is your chosen mode, or set up BLUETOOTH® (consult the Instruction Manual for full details).



6. Play Music

Use the playback control buttons on the Jukebox to control your music.

NOTE: Only audio files in MP3 format will play successfully on your Jukebox. Please ensure your audio files on your burnt CD, USB drive or SD card are converted to MP3 format before playing on the Jukebox.

Model Number	EA0588
Size (cm)	27L x 17W x 39.5H
Weight	2.8Kg
Warranty	1 Year
Power Consumption	9W
Power Supply	DC 9V  1A



SIGNIFY™

For more information
call 1300 777 137