

SIGNIFY



Jukebox with Turntable

Model Number: EA0863

INSTRUCTION MANUAL



AFTER SALES SUPPORT

  1300 777 137

Welcome

Congratulations on choosing to buy a Signify product.

All products brought to you by Signify are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty and customer technical support line.

This comprehensive instruction manual will provide you with a detailed guide on how to operate your product and will also assist you in troubleshooting any problems that you may encounter.

If you have any queries regarding the use of this product, please feel free to phone our technical support line for some friendly advice. If you are experiencing difficulties or believe that the product may have a technical fault, we will assist you in rectifying the issue. We can generally solve most problems simply and quickly over the phone, so please always phone us first!

We are sure that you will enjoy using this product and you can expect to gain years of service from this product when it is used and maintained in the correct manner.

Contents

Welcome	02
Warranty Details	04
General Information and Safety Instructions	05
Product Overview	08
Front Jukebox	08
Rear Jukebox	08
Turntable	09
Control Panel	09
Remote Control	10
Getting Started	12
Instructions	13
Turning On the Jukebox	13
Setting the Correct Time	13
Lighting Effects	13
Switching Between Audio Modes	14
Audio Operations	15
Turntable	15
FM Radio	18
CD Player	19
USB Flash Drive/SD Card	21
Recording onto a USB Flash Drive/SD Card	23
Bluetooth®	24
Frequently Asked Questions	27
Repair and Refurbished Goods or Parts Notice	29
Other Useful Information	30
Cleaning and Maintenance	30
Storage	30
Responsible Disposal	31
Trademarks	31
Specification Table	31



SIGNIFY

Jukebox with Turntable

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA0863 PRODUCT CODE: 59016 12/2017



General Information and Safety Instructions

RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire; electric shock and injury when correctly adhere to. Please keep this user manual in a safe place along with your purchase receipt, warranty card and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the product. Always follow basic safety precautions and accident prevention measure when using an electrical product.

1. Read all instructions before using the Jukebox.
2. Never allow children to play with Electrical Equipment.
3. Do not use the Jukebox for anything other than its intended use.
4. Before turning the Jukebox on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the power adaptor.
5. Do not allow the Jukebox, its power adaptor, cord or plug to come into contact with water or any other liquid.
6. The Jukebox is not intended to be operated by means of an external timer or any type of separate remote control system.
7. The use of attachments not recommended or sold by the manufacturer is dangerous and may cause fire, electric shock or injury.
8. The remote control is powered by a button cell battery.



DANGER if swallowed

WARNING: Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. **If swallowed, go straight to a hospital emergency room.** Dispose of used batteries immediately.

9. This Jukebox is intended to be used indoors, for household use only. Do not use the Jukebox outdoors.
10. Keep the Jukebox, its power adaptor, cord and plug out of direct sunlight.
11. Do not use an extension cord with this Jukebox unless completely necessary. If an extension cord is used please ensure that it has a rating equal or exceeding the rating of the power adaptor.
12. Do not pull or carry by the power cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
13. Do not bend or damage the power cord.
14. Always unplug the Jukebox when not in use. To disconnect from the power supply, first ensure the power switch is turned off, then grip the plug and pull from the power socket. Never pull by the cord. The power plug must be removed from the power socket before cleaning, servicing, or maintenance.

General Information and Safety Instructions (cont.)

15. Unplug the Jukebox in cases of electrical storms to protect against the possibility of power surges damaging the Jukebox.
16. Never force the plug into an outlet.
17. Ensure that power sockets are not overloaded by operating several electrical products that exceed the power supply of the socket. Review the rating label of each electrical product being operated to ensure that they do not exceed the capacity of the power socket. Always turn off and unplug any electrical product that is not being used.
18. Never operate the Jukebox with wet hands, submerge under water or spill liquids into the Jukebox.
19. Always turn the Jukebox off and disconnect from the power source before cleaning. Never use liquid cleaners, use a soft dry (or slightly damp) cloth to wipe over.
20. Do not place the Jukebox near a hot burner (gas or electric), heat sources or open flames.
21. Improper installation may result in the risk of fire, electric shock and/or injury to persons.
22. If the power adaptor or its cord or plug is damaged, do not use the Jukebox. Please contact the After Sales Support line for assistance.
23. Always ensure that the power adaptor and cord are placed in a safe location to ensure that they cannot be stepped on or cannot pose as a tripping hazard. Do not place any items on or against the power adaptor and cord.
24. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
25. The Jukebox and its power adaptor have no user serviceable parts contained within. Do not attempt to repair, disassemble or modify the Jukebox or its power adaptor.
26. This Jukebox is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Jukebox by a person responsible for their safety. Children should be supervised to ensure they do not play with the Jukebox.
27. Ensure that all packaging and plastic bags that were included in the Jukebox giftbox are kept out of reach from children to avoid potential danger of suffocation.
28. Do not use the Jukebox on an unstable surface.
29. Never block the ventilation holes and openings that can be found on the front and back of the Jukebox. These ventilation holes have been specifically included in the design of the Jukebox to assist the product to cool down and to prevent overheating. Do not place this product against soft surfaces, drapery or fabric that may block the ventilation holes. The product should not be placed in an "in-built" installation unless all ventilation holes are provided with adequate ventilation.

General Information and Safety Instructions (cont.)

30. The Jukebox must ONLY be powered by the power adaptor that is supplied with the product. Do not use any other power adaptor. If you experience difficulties with the power adaptor supplied, please contact the customer support line for assistance.
31. Be extremely careful when unpacking or relocating the Jukebox and its power adaptor. Ensure that the Jukebox and power adaptor are not dropped, bumped or have excessive force applied. Impacts such as these can damage the product and its internal components.
32. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
33. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

WARNING

Do not ingest the battery. Chemical Burn Hazard

(The remote supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek medical attention.

Product Overview

Front Jukebox

Rear Jukebox



Jukebox Parts List

- | | |
|--------------------------------------|--|
| 1. Turntable | 10. Remote Sensor |
| 2. Transparent Turntable Window | 11. LIGHT (On/Off) Button |
| 3. LCD Display Panel | 12. SD Card Input |
| 4. Control Panel | 13. LED Light Tube |
| 5. CD Player | 14. LED Light Tube |
| 6. ON/OFF (Main Power) Button | 15. LIGHT MODE (Play/Hold) Switch |
| 7. USB Input | 16. FM Radio Antenna |
| 8. Speakers | 17. DC Power Input |
| 9. Feet | |

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA0863 PRODUCT CODE: 59016 12/2017

Product Overview (cont.)

Turntable



Control Panel




Jukebox Parts List (cont.)

- 18. Cue Lever
- 19. Tone Arm
- 20. **AUTO STOP** (On/Off) Switch
- 21. **SPEED** (33 $\frac{1}{3}$, 45, 78 RPM) Switch
- 22. Tone Arm Lock
- 23. Stylus
- 24. 45 RPM Adaptor
- 25. **STANDBY** (Audio On/Off) Button
- 26. **MODE** (Audio Source) Button
- 27. **▶||** (Play/Pause) Button
- 28. **■** (Stop) Button
- 29. **◀◀** (Tune-/Previous Station or Track/Rewind) Button
- 30. **▶▶** (Tune+/Next Station or Track/Fast Forward) Button
- 31. **F-10** (Skipping Previous Tracks) Button
- 32. **F+10** (Skipping Next Tracks) Button
- 33. **VOL-** (Decrease Volume) Button
- 34. **VOL+** (Increase Volume) Button
- 35. **AUTO** (Radio Auto Search) Button
- 36. **MEM** (Radio Memory) Button
- 37. **PRE+** (Next Preset Station) Button
- 38. **PRE-** (Previous Preset Station) Button
- 39. **ST/MONO** (Stereo/Mono Selection) Button
- 40. **EQ** (Equalizer Button)
- 41. **PROG** (Program) Button
- 42. **RPT** (Repeat) Button
- 43. **REC** (Record) Button
- 44. **▲** (CD Loader Open/Close) Button

Product Overview (cont.)

Remote Control

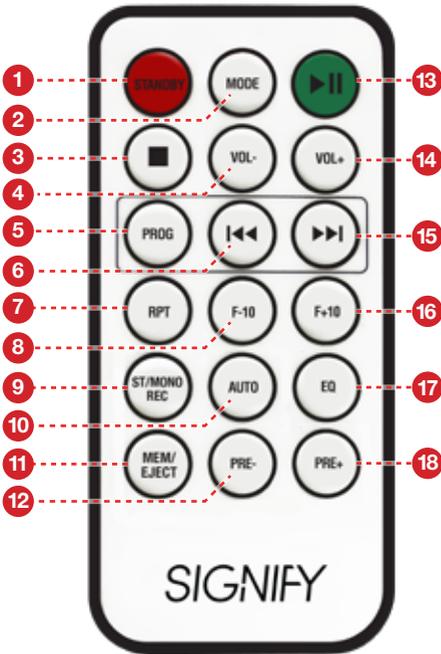

DANGER if swallowed

WARNING: Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. **If swallowed, go straight to a hospital emergency room.** Dispose of used batteries immediately.

Remote Control Function List

1. **STANDBY** (Audio On/Off) Button
2. **MODE** (Audio Source) Button
3. **■** (Stop) Button
4. **VOL-** (Volume Decrease) Button
5. **PROG** (Program) Button
6. **I<<** (Tune-/Previous Station or Track/Rewind) Button
7. **RPT** (Repeat) Button
8. **F-10** (Skipping Previous Tracks) Button
9. **ST/MONO REC** (Stereo/Mono for Radio) Button
10. **AUTO** (Radio Auto Search) Button
11. **MEM** (Memory) Button
12. **EJECT** (CD Eject) Button
13. **▶||** (Play/Pause) Button
14. **VOL+** (Increase Volume) Button
15. **▶▶I** (Tune+/Next Station or Track/Fast Forward) Button
16. **F+10** (Skipping Next Tracks) Button
17. **EQ** (Equalizer) Button
18. **PRE+** (Next Preset Station) Button

Product Overview (cont.)

This Signify Jukebox has many great features and enables the user to play music in a variety of ways. Some of the handy features that this Jukebox includes are:

1. Built-in 3 Speed Turntable (33 1/3, 45 and 78 RPM).
2. Built-in Bluetooth® receiver to stream music wirelessly when paired to a compatible device.
3. USB 2.0 input to playback MP3 audio files stored on your USB storage device.
4. SD card input to playback MP3 audio files stored on your SD card.
5. FM radio tuner with digital display and auto search function and a 20 station programmable memory. FM frequency range from 87.5 – 108MHz.
6. Single CD player with MP3 audio file compatibility.
7. Attractive colour changing LED light tubes.
8. Attractive LED Lighting effects in the turntable compartment.
9. Transparent turntable window with hinge and a magnetic catch to hold it securely in place.
10. Great sound from the 2 x 20 Watt RMS audio output.
11. 5 selectable equalizer settings to adjust the sound to enhance the music being played. The equalizer settings preloaded on to the Jukebox are Flat (FLA), Rock (ROC), Pop (POP), Jazz (JAZ), and Classical (CLA).
12. Remote control to operate many of the functions of the Jukebox.
13. Standalone direct MP3 recording from vinyl records, Bluetooth® and CDs.

Getting Started

Remove the Jukebox from its packaging and place carefully on a level surface so that the Jukebox is sturdy and there is no risk of the Jukebox tipping or falling over. The Jukebox has rubber feet on each of its legs for added stability. As the Jukebox is quite heavy and large (as is its packaging) we suggest that several people assist in removing the Jukebox from its packaging and locating it on a suitable surface. Be sure not to drop, bump or apply any force or impact to the Jukebox and be sure to remove all packaging from the Jukebox and its accessories.

Once all packaging has been removed and the Jukebox is located in a suitable position on a stable and secure surface, plug the power adaptor in to a power socket and connect the other end to the Jukebox. The DC power input of the Jukebox is located on the rear panel of the Jukebox. Once each end of the power adaptor has been correctly and securely connected, switch the power socket on.

Instructions

Turning On the Jukebox

1. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
2. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
3. To return to standby mode, press the **STANDBY** button again.

NOTE: The Jukebox will not function unless BOTH the **ON/OFF** button (press first) and the **STANDBY** button (press second) has been pressed.

Setting the Correct Time

1. Press the **ON/OFF** (Main Power) button to turn the Jukebox on. The unit will automatically enter standby mode and the time "00:00" will appear on the LCD display.
2. Press and hold the **PROG** button until "24-H" is shown on the LCD display screen.
3. Press the **◀◀** or **▶▶** button to select between "24-H" (24-hour time format) and "12-H" (12-hour time format), then press the **PROG** button confirm the selection.
4. The LCD display will show "00:00" (if 24-H was selected) or "12:00" (if 12-H was selected), with the first 2 digits flashing, indicating that the time hour is to be set.
5. Press the **◀◀** or **▶▶** button repeatedly to select the correct hour, then press the **PROG** button to confirm the selection.
6. The LCD display will now show the second 2 digits flashing, indicating that the time minute is to be set.
7. Press the **◀◀** or **▶▶** button repeatedly to select the correct minute, then press the **PROG** button to confirm the selection.

Lighting Effects

The Jukebox features two sets of colour changing LED light tubes on the front of the Jukebox. There are also several other multi-coloured LED lighting effects that are located in the turntable compartment.

1. To turn on the LED lighting effects simply press the **LIGHT** button located on the front control panel. All LED lighting effects will illuminate.

NOTE: The lighting effects operate independently of the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list). The **LIGHT** button controls the power to the lighting effects and the **ON/OFF** (Main Power) button controls the power to the audio functions and LCD display of the Jukebox.

Instructions (cont.)

2. Use the **LIGHT MODE** switch on the rear panel of the Jukebox to change the LED lighting effects between “PLAY” and “HOLD” mode.
 - When set to “PLAY” mode, the LED light tubes will fade in and out across several different colours continuously.
 - When set to “HOLD” mode, the LED light tubes will illuminate in only one colour.

NOTE: When using the **LIGHT MODE** switch to change from “PLAY” mode to “HOLD” mode, the colours in “HOLD” mode have been predetermined and may not be the exact same colour as the LED light tubes were in “PLAY” mode.

3. To turn off the LED lighting effects, press the **LIGHT** (On/Off) button again. All the LED lighting effects will no longer be illuminated.

Switching Between Audio Modes

The Jukebox has several different functions for audio playback. To select between the CD player, USB input, SD card input, analogue FM radio, Bluetooth® audio streaming and turntable, follow the steps below.

1. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
2. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
3. Cycle through the audio modes by pressing the **MODE** button repeatedly until the desired function is displayed on the LCD display.

Audio Mode	LCD Display
FM Radio	--. MHz
CD	----
USB	USb
SD	Sd
Bluetooth®	bLUE
Turntable	PH

Instructions (cont.)

Audio Operations

Adjusting the Volume

1. To increase the volume, press the **VOL+** button repeatedly or press once and hold down until you reach the desired volume level.
2. To decrease the volume, press the **VOL-** button repeatedly or press once and hold down until you reach the desired volume level.

WARNING: Check the volume level before playing music to prevent children, those who are infirm or pregnant women, from being shocked by the sudden and loud sound emitted from the Jukebox.

IMPORTANT: Using the Jukebox for an extended period at high volumes can cause the Jukebox to overheat and may cause damage to the internal components. DO NOT operate the Jukebox at a high volume for extended periods of time.

Equalizer Settings

The Jukebox features 5 selectable equalizer settings to adjust the sound levels, which will enhance the specific type of music being played. The equalizer settings preloaded on to the Jukebox are Flat (FLA), Rock (ROC), Classical (CLA), Pop (POP), and Jazz (JAZ).

1. Enter any audio mode (see "Switching Between Audio Modes" on page 14 further instructions).
2. Press the **EQ** button until you reach the desired equalizer setting. The sound will change immediately when each equalizer setting is selected.

Turntable

Handling Vinyl Records

NOTE: Only handle vinyl records with clean hands and hold them by the edge or the label. Do not touch the record grooves.

1. Keep your vinyl records in protective sleeves when not in use to avoid dust and scratches.
2. Store vinyl records upright. Records stored horizontally may bend and warp.
 - Avoid placing vinyl records in direct sunlight, close to any heat source (radiator, stoves etc.) or in a location that may be subject to vibration, excessive dust, heat, cold or moisture.
 - To clean a vinyl record, gently wipe the surface in a circular motion using a soft anti-static cloth.

Instructions (cont.)

Playing Vinyl Records

To play a vinyl record, follow the steps below.

1. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
2. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
3. Press the **MODE** button repeatedly until the LED display shows “PH” for phonograph mode.

IMPORTANT: Before playing a vinyl record, turn down the volume of the Jukebox to avoid possible loud crackling noises. The crackling noises made by the stylus coming into contact with the vinyl record could damage the Jukebox. Wait until the stylus is completely placed on the vinyl record, and then turn up the volume.

4. Open the transparent window by carefully lifting it up from the bottom all the way until it stops. The transparent window will now stay open.
5. Remove the protective cover from the stylus cartridge (see Fig. 1).
6. Set the **AUTOSTOP** switch (No. 20 on the Jukebox parts list) to the ON position. The turntable will now be set to automatically stop after the completion of play of the vinyl record. If the **AUTOSTOP** switch is set to the OFF position, the turntable will not stop automatically.
7. Choose the desired playing speed using the SPEED switch between 33, 45 and 78 RPM.

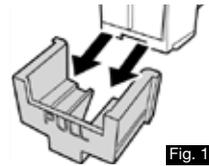


Fig. 1

NOTE: When playing a 45 RPM record, use the included 45 RPM adaptor on the record spindle.

8. Carefully place the vinyl record on the turntable.
9. Unlock tone arm lock by moving it up and away from the tone arm itself.
10. Raise the tone arm using the arm raise lever or carefully with your hand.
11. Place the tone arm vertically over the first track of the record or over the outer edge of the vinyl record. The turntable will start spinning.
12. Lower the stylus onto the vinyl record.
13. Carefully close the transparent window.
14. Adjust the volume by pressing the **VOL-** or **VOL+** button.
15. To stop playing, open the transparent window, lift the tone arm and place it back into the armrest. Secure the tone arm once more by engaging the arm lock. Cover the stylus with the protective cover if needed.


NOTE: Always ensure that the tone arm is secured by the arm lock before transporting the Jukebox.

Instructions (cont.)

Replacing the Stylus

It is recommended that the stylus is replaced as soon as you notice a change in the sound quality. Prolonged use of a worn-out stylus may damage the record. Wear and tear on the stylus will be accelerated when playing 78 RPM records.


1. Remove the stylus by pulling it straight down and out, in the opposite direction of the tonearm (see Fig. 2).

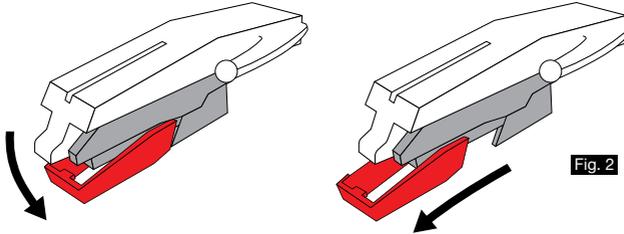

2. Find a compatible replacement stylus.

NOTE: If purchasing the replacement stylus in a store, it will be helpful to bring the old stylus with you for your reference. Most good Electronic and Music stores will have replacement styluses.

3. With the point facing down, align the new stylus and gently press it back into place (see Fig. 3).

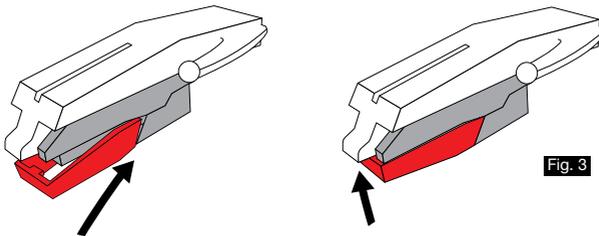

WARNING:

- Do not bend the stylus.
- To avoid injury, do not touch the needle.
- Keep out of reach of children.
- Handle with care as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause malfunction.
- Do not expose the stylus to extreme heat.
- Contact a qualified repair person if you are having difficulties changing the stylus.

Instructions (cont.)

FM Radio

The Jukebox features a built-in FM tuner with an auto-tuning function and a 20 station programmable memory.

Preparing the FM Antenna

On the rear panel of the Jukebox, there is a FM antenna (a single length of insulated wire), which will be wound up and connected to the internals of the Jukebox. Gently unwind this wire and allow it to hang down the back panel of the Jukebox. When unwinding, or touching the antenna in general, be extremely careful not to pull or apply force that may dislodge the antenna wire from the internals of the Jukebox. Once unwound, the antenna will be much more effective in picking up FM radio signals.

Listening to the Radio

1. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
2. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
3. The LCD display will show FM 87.5MHz and the speakers will emit a fuzzy sound (unless the frequency 87.5MHz contains a radio station in your area).
4. Tune the radio by using the auto-tuning function, or by manually tuning the frequency.
5. To turn off the radio, simply press the **STANDBY** button or switch to other audio playing mode by pressing the **MODE** button.

Auto-tuning

Option 1 - Auto Search and Save. Press the **AUTO** button to perform an auto-search from 87.5MHz upwards. The first 20 stations found will be stored in memory (labelled as P01 to P20). Press the **PRE-** or **PRE+** buttons to navigate through all preset stations.

NOTE: All saved radio stations will be lost if the main power of the Jukebox has been switched off or the Jukebox is unplugged from the power outlet.

Option 2 - Auto Search Only: Press and hold the **◀◀** or **▶▶** button to search up or down the FM frequency to find a station with strong reception. This auto-search function will NOT save the stations found automatically and it will NOT continue to search past the first radio station found.

NOTE: Depending on the area the Jukebox is located, you may need to either adjust the antenna position or the Jukebox location to gain better reception.

NOTE: Stations with a weak signal can only be tuned in manually.

Instructions (cont.)

Manual-tuning

Press (do not hold) the **◀◀** or **▶▶** button repeatedly. The FM tuner will search up or down the FM band by 0.05Mhz increments for each press.

NOTE: Be sure not to press and HOLD the **◀◀** or **▶▶** button – if you hold the buttons down the tuner will commence the auto-search function.

NOTE: Depending on the area the Jukebox is located, you may need to either adjust the antenna position or the Jukebox location to gain better reception.

CD Player

The Jukebox features a CD player with MP3 compatibility. To play a CD, follow the steps below.

1. Ensure to remove all protective packing material from the CD player. If these are not removed, the CD tray will not open.
2. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
3. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
4. Press the **MODE** button repeatedly until the LED display shows “----” for CD player mode.
5. Press the **▲** (Open/Close) button on the control panel, or the **EJECT** button on the remote control to open the CD tray.
6. Load the CD on the CD tray, with the label facing up and the shiny side facing down.
7. Press the **▲** (Open/Close) button on the control panel, or the **EJECT** button on the remote control again to close the CD tray.

NOTE: Do not forcibly push the CD tray to close it as this may cause a malfunction.

Instructions (cont.)

CD Playback Controls

Button	Action	Function	LCD Display
▶ button	Short Press Once	Play	▶
	Short Press Once	Pause	
■ button	Short Press Once	Stop	Total number of tracks on the CD
	Short Press Once	Skip to the next track * [⊛]	Track number
▶▶ button	Short Press Once	Skip to the next track * [⊛]	Track number
	Press and Hold	Fast forward within a track	No change in display
◀◀ button	Short Press Once	Restart the current playing track or skip to the previous track * [⊛] ** [⊛]	Track number
	Press and Hold	Rewind within a track	No change in display
F+10 button	Short Press Once	Skip forward 10 tracks on the CD	Track number
	Press and Hold	Skip to the next folder on the MP3 ripped CD	Folder number
F-10 button	Short Press Once	Skip backward 10 tracks on the CD	Track number
	Press and Hold	Skip to the previous folder on the MP3 ripped CD	Folder number
RPT button *** [⊛]	Short Press Once, Twice, Three Times, Four Times or Five Times (Depending on whether using a regular audio CD, or a MP3 ripped CD, the number of times the RPT buttons needs to be pressed will vary)	Repeat the current playing	REP (flashing)
		Repeat all tracks in the current playing folder (MP3 Ripped CD's only)	REP, FOLDER
		Repeat all tracks on the CD	REP
		Play tracks in random order (random mode)	RAN
		Remove all repeat/random functions	No change in display
VOL+ button	Short Press Repeatedly or Press and Hold	Increase Volume	Volume level
VOL- button	Short Press Repeatedly or Press and Hold	Decrease Volume	Volume level

* ** *** Please see page 21 for further information.

Instructions (cont.)

- ⊛ If the Jukebox is set in random ("RAN") mode, the Jukebox will play the tracks on the CD in random order.
- ⊛⊛ If the current playing track is more than 2 seconds from the beginning, pressing the **I◀◀** button once will simply restart the track. If the currently playing track is less than 2 seconds from the beginning, pressing the **I◀◀** button once will skip to the previous track.
- ⊛⊛⊛ All actions in this table relating to the **RPT** button are assuming the button itself has not been pressed at all yet.

USB Flash Drive/SD Card

The Jukebox features a USB port and a SD card input which enables MP3 files to be loaded on to a USB flash drive or a SD card and played back through the Jukebox. To play MP3 files from a USB flash drive or SD card, follow the steps below.

1. Insert the USB flash drive or SD card into the relevant input.
2. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
3. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
4. Press the **MODE** button repeatedly until the LED display shows "USB" for USB mode, or "Sd" for SD card mode.
5. If the tracks have been loaded on to the USB flash drive/SD card correctly, the LCD display will show the number of folders loaded on to the USB flash drive/SD card (example "F0004" indicates there are 4 folders loaded in total), and then display the number of individual tracks loaded on to the USB flash drive/SD card (example, "027" indicates that there are 27 tracks loaded in total). The Jukebox will automatically start playing from the first track on the USB flash drive/SD card.
6. To safely remove the USB flash drive or SD card from the Jukebox, press the **■** button and select a different audio mode by pressing the **MODE** button.

Playable File Requirements

MP3/WMA Music File requirements.

MP3/WMA file compatibility with this unit is limited as follows:

- Frequency: within 32 to 48 kHz.
- Bit rate: within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA).
- Maximum files: under 999.
- Maximum folders: under 99.
- File extensions: .mp3 or .wma.

Compatible USB Devices Or SD Cards

- USB Flash Drive: supports USB2.0 or USB1.1.
- File System: FAT16/32 (NTFS file system is not supported).
- Maximum files: under 999.
- External HDD, card readers and locked devices are not supported.

Instructions (cont.)

USB Flash Drive/SD Card Playback Controls

Button	Action	Function	LCD Display
▶ button	Short Press Once	Play	▶
	Short Press Once	Pause	
■ button	Short Press Once	Stop	Total number of tracks on the USB flash drive/SD card
	Short Press Once	Skip to the next track [⊕]	Track number
▶▶ button	Press and Hold	Fast forward within a track	No change in display
	Short Press Once	Rewind within a track	Track number
◀◀ button	Press and Hold	Restart the current playing track or skip to the previous track [⊕] ^{⊕⊕}	Track number
	Short Press Once	Rewind within a track	No change in display
F+10 button	Press and Hold	Skip forward 10 tracks on the USB flash drive/SD card	Track number
	Short Press Once	Skip to the next folder on the USB flash drive/SD card	Folder number
F-10 button	Press and Hold	Skip backward 10 tracks on the USB flash drive/SD card	Track number
	Short Press Once	Skip to the previous folder on the USB flash drive/SD card	Folder number
RPT button ^{⊕⊕} ^{⊕⊕⊕}	Short Press Once	Repeat the current playing track	REP (flashing)
	Short Press Twice	Repeat all tracks in the current playing folder	REP, FOLDER
	Short Press Three Times	Repeat all tracks on the USB flash drive/SD card	REP
	Short Press Four Times	Play tracks in random order (random mode)	RAN
	Short Press Five Times	Remove all repeat/random functions	No change in display
VOL+ button	Short Press Repeatedly or Press and Hold	Increase Volume	Volume level
	Short Press Repeatedly or Press and Hold	Decrease Volume	Volume level

[⊕] ^{⊕⊕} ^{⊕⊕⊕} Please see page 21 for further information.

Instructions (cont.)

- ⊛ If the Jukebox is set in random ("RAN") mode, the Jukebox will play the tracks on the USB flash drive/SD card in random order.
- ⊛⊛ If the current playing track is more than 2 seconds from the beginning, pressing the **I◀◀** button once will simply restart the track. If the currently playing track is less than 2 seconds from the beginning, pressing the **I◀◀** button once will skip to the previous track.
- ⊛⊛⊛ All actions in this table relating to the **RPT** button are assuming the button itself has not been pressed at all yet.

Recording onto a USB Flash Drive/SD Card

The Jukebox features a recording function to encode your traditional music media (vinyl records, Bluetooth® and CDs) into a digital format and record it onto a USB device or SD card as an MP3 file(s).

1. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
2. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
3. Press the **MODE** button repeatedly until the LED display shows the desired media source:

Audio Mode	LCD Display
CD	----
Bluetooth®	bLUE
Turntable	PH

4. Insert the USB flash drive or SD card into the relevant input.

NOTE: When inserting a USB flash drive or SD card, please ensure that there is adequate space to save tracks on to the drive and that there is no write protection on the drive as this will prevent saving any files to the drive.

5. Start playing media from the audio source (CD, PH (Vinyl) or Bluetooth®).
6. Press the **REC** button to start recording. The LCD display will show "REC", indicating the audio is now being recorded onto the USB flash drive/SD card.

NOTE: The Jukebox will save any recorded media as one long file, the tracks WILL NOT be split into separate files on the USB flash drive/SD card.

NOTE: The recording speed is 1:1. Recording will take as long as the playing vinyl record, Bluetooth® device or CD.

Instructions (cont.)

7. Press the **■** button to stop recording.
8. Once finished, pull the USB flash drive/SD card out from the Jukebox.
9. To playback the recorded files, either load the USB flash drive/SD card back into the Jukebox itself and follow regular playback instructions (see page 21 for further instructions), or load the USB flash drive/SD card into a PC and search for the newly created folder called "REC". All recorded files will be in there.

NOTE: The MP3 tracks can only be played back on devices that are capable of reading and playing MP3 files.

Bluetooth®

The Jukebox features a Bluetooth® receiver which enables it to be wirelessly connected to compatible Bluetooth® enabled devices such as smart phones and Bluetooth® enabled media players. To pair the Jukebox with a compatible Bluetooth® enabled device, follow the steps below.

1. Press the **ON/OFF** (Main Power) button (No. 6 on the Jukebox parts list) to turn the Jukebox on. The unit will automatically enter standby mode.
2. Press the **STANDBY** button (No. 25 on the Jukebox parts list or No. 1 on the Remote Control Function List) to wake the Jukebox from standby mode. The unit will automatically enter FM Radio mode.
3. Press the **MODE** button repeatedly until the LED display shows "bLUE" for Bluetooth® mode.
4. On the Bluetooth® enabled device, activate (or turn ON) Bluetooth® function, and search for nearby devices. When the device discovers "JUKE BOX", select and connect to "JUKE BOX". This process should take a few seconds to connect – no PIN or pass code will be required.
5. When the Jukebox and the Bluetooth® enabled device have connected, you will notice that "bLUE", which was initially flashing on the LCD display, is now solid (not flashing), and the Bluetooth® enabled device should also show "JUKE BOX" as "Connected".
6. Now you can open the media player on your Bluetooth® enabled device to stream the desired tracks on the Jukebox.

NOTE: If the last connected device is within the Bluetooth® reception range of the Jukebox, you will not be able to pair a new device to the Jukebox. You will need to turn off the Bluetooth® connection on the last connected device in order to connect a new device.

Instructions (cont.)

Bluetooth® Wireless Technology Playback Controls

Button	Action	Function
▶▶ button	Short Press Once	Skip to the next track
◀◀ button	Short Press Once [⊛]	Restart the current playing track or skip to the previous track
VOL+ button	Short Press Repeatedly or Press and Hold	Increase Volume
VOL- button	Short Press Repeatedly or Press and Hold	Decrease Volume

[⊛] If the current playing track is more than 2 seconds from the beginning, pressing the ◀◀ button once will simply restart the track. If the currently playing track is less than 2 seconds from the beginning, pressing the ◀◀ button once will skip to the previous track.

NOTE: When listening to tracks via Bluetooth®, always be aware that you may need to adjust the volume on both the Jukebox AND the Bluetooth® enabled device to reach the required volume level.

Disconnecting and Reconnecting the Bluetooth® Enabled Device

To end the connection between the Bluetooth® enabled device and the Jukebox follow the steps below.

1. Press the **MODE** button to enter a different audio function on the Jukebox; or
2. Press the **STANDBY** button to set the Jukebox into standby mode; or
3. On the Bluetooth® enabled device, select “JUKE BOX” and then “Disconnect” or “Forget This Device”; or
4. Simply turn Bluetooth® function off on the Bluetooth® enabled device.

NOTE: If Bluetooth® is activated on both the Jukebox and the Bluetooth® enabled device once again, the Jukebox may automatically reconnect to the Bluetooth® enabled device. If this does happen, the Bluetooth® enabled device will show as being connected to “JUKE BOX” and the Jukebox will show a solid display of the letters “bLUE” on the LCD display (it will not be flashing). This will mean that the tracks on the Bluetooth® enabled device can now be streamed through the Jukebox immediately.

Automatic reconnection will ONLY happen if:

1. The Bluetooth® enabled device was the last device that the Jukebox was connected.

Instructions (cont.)

2. The Bluetooth® enabled device has maintained “JUKE BOX” as one of its paired devices (the device should show a list of paired devices in the Bluetooth® menu or settings).
3. The Bluetooth® enabled device and the Jukebox are in close proximity to one another. Generally Bluetooth® is only operable over an unobstructed distance of approximately 10m.

Tips for Operating Bluetooth® Connection

1. When pairing the Jukebox with your Bluetooth® enabled device, please place the Bluetooth® enabled device as close as possible to the Jukebox.
2. The Bluetooth® connection may not work well due to the below:
 - There is an obstacle between the Jukebox and the Bluetooth® enabled device.
 - There is a device using the same Bluetooth® frequency as the Jukebox such as medical equipment, microwave ovens or wireless LAN devices.
 - Pairing is limited to one Bluetooth® enable device. Multi-pairing is not supported.

Frequently Asked Questions

Problem	Possible Solution
FM Radio	
No radio reception or sound?	The FM radio antenna on the back panel of the unit may not be unwound. Unwind the FM radio antenna and rescan.
	The audio mode may not have not been set to FM radio. Set the Jukebox to FM radio mode (see page 18 for further instructions).
	Volume may not be turned up. Press VOL+ to increase volume.
	The Jukebox may be located in an area with poor FM reception. Relocate the Jukebox to an area with better FM reception and rescan.
CD Player	
The CD does not play, or the sound skips?	The CD may have been inserted the wrong way up. Reload the CD with the label side up and the shiny side down.
	Check the CD to ensure it is not a DVD or contains audio files that are not compatible with the Jukebox. Note that for burnt CD's, only audio files in MP3 format will work.
	The CD may be dirty or scratched. Check to ensure the CD is free from smudges/dirty marks or scratches.
Bluetooth®	
Cannot connect the Bluetooth® enabled device to the Jukebox?	Ensure that Bluetooth® on your device is turned on and the Jukebox is set to Bluetooth® mode (see page 24 for further instructions).
The volume is very low?	Turn the volume up on both the Bluetooth® enabled device and the Jukebox.

Frequently Asked Questions (cont.)

Bluetooth® (cont.)	
The track skips and “breaks up” or stops playing altogether?	It is likely that the Bluetooth® enabled device is located too far away from the Jukebox and is out of range or its range is impeded by objects such as walls. Move the device closer to the Jukebox and ensure that it has a clear line of sight to the Jukebox.
USB or SD Inputs	
Audio files will not play correctly?	The file type may not be compatible with the Jukebox, please load standard MP3 files on to the USB drive or SD card and try again.
	The USB drive or SD card may not have been ejected from the computer correctly which can cause damage to the files. Please reload the files via the same PC and electronically eject (or safely remove hardware) the USB drive or SD card before physically removing.
	The audio files may be copyright protected and therefore will not play correctly as an MP3 file.
General	
No Power?	Check that the power adaptor has been correctly and securely connected (see page 12 for further instructions), and that the power socket has been switched on.
	Check that you have pressed the ON/OFF (Main Power) Button (No. 6 on the Jukebox parts list).
	The Jukebox may still be in standby mode. Press the STANDBY button to wake the Jukebox from standby mode.
No sound?	Press the VOL+ button to turn the volume up.
The LED lighting effects are not working?	Press the LIGHT button on the front of the Jukebox.



Jukebox with Turntable

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD
PO Box 6292
Silverwater NSW 1811 Australia

1300 777 137
Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)
service@unclebills.com.au
www.signifyelectronics.com.au

AFTER SALES SUPPORT

1300 777 137

service@unclebills.com.au

MODEL: EA0863 PRODUCT CODE: 59016 12/2017



Other Useful Information

Cleaning and Maintenance

Before cleaning the Jukebox, ensure the Jukebox is switched off and disconnected from the power source.

The Jukebox is likely only to require regular “dusting” to keep it clean. Use a standard duster, or dry soft microfibre cloth to remove the dust from the Jukebox. Remove dust from the Jukebox regularly.

If the Jukebox becomes soiled with anything other than dust on its exterior, clean the exterior of the Jukebox by wiping over the surface with a slightly damp cloth and then polish with a soft dry cloth. Ensure that no moisture or liquid enters the Jukebox, particularly around the control panel and buttons.

Be careful when wiping over the Jukebox (especially the transparent window), that you do not apply too much pressure, as there is a risk that you may break parts.

Do not use detergents or abrasive cleaners, and do not allow moisture, water or other liquid to enter the Jukebox.

Storage

When the Jukebox is not in use, disconnect it from the power source and store in a cool, dry and well ventilated location out of direct sunlight. Ensure that it is not subject to humidity.

Other Useful Information (cont.)

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require another copy of this instruction manual, please contact service@unclebills.com.au to obtain an electronic copy.

The Jukebox with Turntable has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 60065

Trademarks

App Store®, iPhone® and their logos are registered trademarks of Apple Inc.

Google Play™ store, Android™ and their logos are trademarks of Google, Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Referenced brands and trademarks are for compatibility listing only, not associated with this product.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by the manufacturer is under license. Other trademarks and trade names are those of their respective owners

Specification Table

MODEL:	EA0863
FREQUENCY RANGE:	FM 87.5 – 108MHz
AC ADAPTOR MODEL:	K65S130500E2
MAINS INPUT VOLTAGE:	100-240V~ 50/60Hz 1.8A
OUTPUT VOLTAGE:	DC 13V $\overline{\overline{=}}$ 5A
POWER CONSUMPTION:	65W
REMOTE CONTROL BATTERY:	CR2025 3V Lithium Battery
DIMENSIONS:	105 x 57 x 30cm
NET WEIGHT:	21.5kg
VERSION NO:	1.0
ISSUE DATE:	19 th June, 2017

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT NOTICE.

AFTER SALES SUPPORT

 1300 777 137

 service@unclebills.com.au

MODEL: EA0863 PRODUCT CODE: 59016 12/2017