

Signify[®]

DIGITAL RADIO

WITH CD PLAYER



Read this instruction manual carefully before using the Digital Radio and keep it in a safe place for future reference.

Model Number: EA2370



INSTRUCTION MANUAL

Welcome

Congratulations on choosing to buy a Signify® product.

All products brought to you by Signify® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty and customer technical support line.

This comprehensive instruction manual will provide you with a detailed guide on how to operate your product and will also assist you in troubleshooting any problems that you may encounter.

If you have any queries regarding the use of this product, please feel free to phone our technical support line for some friendly advice. If you are experiencing difficulties or believe that the product may have a technical fault, we will assist you in rectifying the issue. We can generally solve most problems simply and quickly over the phone, so please always phone us first!

We are sure that you will enjoy using this product and you can expect to gain years of service from this product when it is used and maintained in the correct manner.

Contents

Welcome	02
Warranty Details	04
General Information and Safety Instructions	05
Product Overview	07
Front of Digital Radio Diagram	07
Rear of Digital Radio Diagram	08
Overview of the Buttons and Dials	09
Audio Modes	10
Getting Started	11
Before First Use	11
Instructions	12
Power On-Off / Standby Mode	12
Prepare the Antenna	12
System Menu	13
Alarm Setting	14
Sleep Timer	15
DAB+ Mode	15
FM Mode	17
BT (Bluetooth®) Mode	18
CD Mode	19
USB Mode	20
AUX (Auxiliary) Mode	20
Using the Headphone Output	21
Frequently Asked Questions	22
Other Useful Information	24
Cleaning and Maintenance	24
Storage	24
Trademarks	24
Responsible Disposal	25
Specification Table	25
Repair and Refurbished Goods or Parts Notice	26



Signify[®]

Digital Radio with CD Player

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

General Information and Safety Instructions

RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire; electric shock and injury when correctly adhere to. Please keep this instruction manual in a safe place along with your purchase receipt, warranty card and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

Electrical Safety and Cable Handling

1. Read all instructions before using the Digital Radio.
2. Do not pull or carry the Digital Radio by the power cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
3. Check the power adaptor regularly for visible damage. If it is damaged, please contact the After Sales Support line for further advice.
4. When the Digital Radio is not in use, switch it off and unplug from the power supply. Do not leave the product unattended when connected to the power supply.
5. Do not attempt to open any part of the Digital Radio. This will void the warranty.
6. This product is not user serviceable. Contact with high voltage components may cause a risk of electric shock. Do not attempt to repair, disassemble, or open any part of the Digital Radio.

Usage Conditions and Restrictions

1. This Digital Radio is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
2. Never block the ventilation holes and openings of the Digital Radio. These ventilation holes have been specifically included in the design of the device to assist the product to cool down and to prevent overheating. Do not place this product against soft surfaces, drapery or fabric that may block the ventilation holes. The product should not be placed in an 'in-built' installation unless all ventilation holes are provided with adequate ventilation.
3. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
4. Do not expose the Digital Radio to rain, moisture, liquids, or dust. Do not store or use the Digital Radio anywhere near water, or where water drips and may come in contact with this product.
5. Unplug the Digital Radio in cases of electrical storms to protect against the possibility of power surges damaging the device.
6. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.

General Information and Safety Instructions (cont.)

7. Be extremely careful when unpacking or relocating the Digital Radio. Ensure that the Digital Radio is not dropped, bumped or excessive force is not applied. Impact such as these can damage the product and its internal components.
8. The Digital Radio is not a toy. Supervise children to ensure they do not play with this product. Do not allow children to insert foreign objects into the holes or slots on the unit.
9. Do not place objects filled with liquids, such as vases or jugs on or near the unit.
10. The Digital Radio is not intended to be operated by means of an external timer or any type of separate remote control system.
11. Do not expose the Digital Radio to microwaves.
12. Do not place the Digital Radio's speaker too close to ears. Damage may occur to ear drums, especially in young children.

 
Handling and Usage

1. This Digital Radio is intended to be used indoors, for household use only and should not be used for any commercial purposes. If using outdoors, please ensure that it is brought inside after use.
2. Do not expose the Digital Radio to excessive heat, direct sunlight, open flames, or any other heat sources.
3. Never operate the Digital Radio with wet hands, submerge under water or spill liquids into or onto the device.
4. Before cleaning, servicing, maintenance or moving the device please ensure the Digital Radio is switched off and the power adaptor is unplugged from the power supply. Never use liquid or abrasive cleaners on the Digital Radio, for more detailed instructions on how to clean the Digital Radio please see Cleaning and Maintenance on page 24 of this manual.
5. Do not place or store the Digital Radio near a hot burner (gas or electric), heat sources or near naked flame sources (such as candles, stoves, or BBQ's).
6. Always position and operate the Digital Radio on a dry, flat, and stable surface. Operating on sinks or uneven surfaces should be avoided.
7. Do not use the Digital Radio for anything other than its intended use.
8. Do not use the Digital Radio if it has been dropped or damaged in any way.
9. Do not cover the Digital Radio whilst in use.

CAUTION: Excessive sound pressure from earphones and headphones can cause hearing loss. If you listen to music for a long time, your hearing may be impaired. Set to a moderate volume.

Product Overview

Front of Digital Radio Diagram

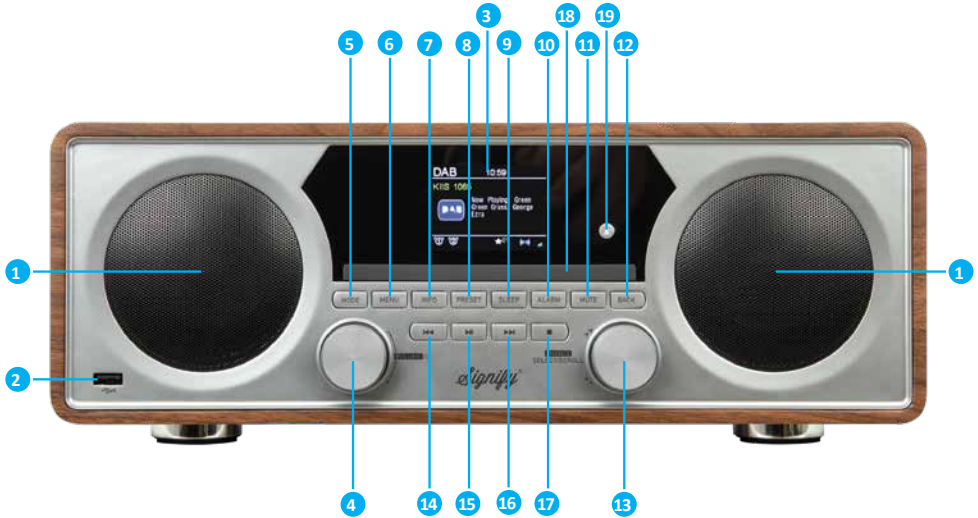 


- | | |
|--|--|
| 1. Speakers | 11. Mute Button |
| 2. USB Media Port | 12. Back Button |
| 3. LCD Display Screen | 13. Select / Scroll Dial / Snooze Button |
| 4. Volume Control Dial / Standby / ON Button | 14. Previous Track / Tune- Button |
| 5. Mode Button | 15. Play / Pause Button |
| 6. Menu Button | 16. Next Track / Tune+ Button |
| 7. Info Button | 17. Stop Button |
| 8. Preset Button | 18. CD Tray |
| 9. Sleep Button | 19. CD Open/Close Button |
| 10. Alarm Button | |

Included (not pictured): Power Adaptor, Instruction Manual, Warranty Certificate.

Product Overview (cont.)

 


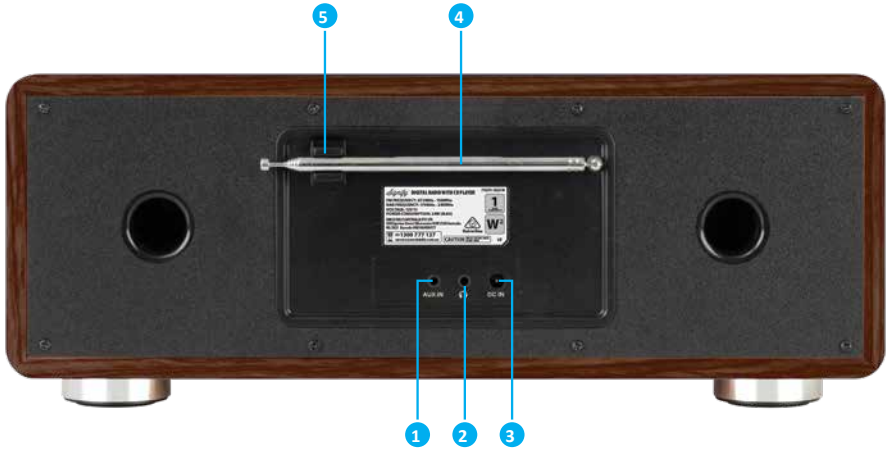

 

 
 
 


 


Rear of Digital Radio Diagram



1. Auxiliary Input
2. Headphone Output
3. DC Power Input
4. Telescopic Antenna
5. Antenna Clip

Product Overview (cont.)

Overview of the Buttons and Dials

Button/Dial	Functions
 Mode Button	<ul style="list-style-type: none">• Press to switch between audio modes.
 Menu Button	<ul style="list-style-type: none">• Press to enter/exit menu settings.
 Info Button	<ul style="list-style-type: none">• Press to view information in an audio mode.
 Preset Button	<ul style="list-style-type: none">• Press to recall saved DAB+/FM stations.• Press and hold to save DAB+/FM station.
 Sleep Button	<ul style="list-style-type: none">• Press repeatedly to select appropriate sleep timer or turn off sleep timer.
 Alarm Button	<ul style="list-style-type: none">• Press to enter alarm settings (Alarm 1 and Alarm 2).
 Mute Button	<ul style="list-style-type: none">• Press to mute/unmute sound in any audio mode.
 Back Button	<ul style="list-style-type: none">• Press to return to previous menu screen.
 CD Open/Close Button	<ul style="list-style-type: none">• Press to open/close CD tray.
 Previous Track / Tune- Button	<ul style="list-style-type: none">• Press to skip to previous track in Bluetooth®, CD, USB, and Auxiliary modes.• Press to tune to a station in DAB+ or FM mode.• Press to navigate through the menu list.
 Play / Pause Button	<ul style="list-style-type: none">• Press to play/pause current track in Bluetooth®, CD, USB, and Auxiliary modes.
 Next Track / Tune+ Button	<ul style="list-style-type: none">• Press to skip to next track in Bluetooth®, CD, USB, and Auxiliary modes.• Press to tune to a station in DAB+ or FM mode.• Press to navigate through the menu list.
 Stop Button	<ul style="list-style-type: none">• Press to stop playing current track in Bluetooth®, CD, USB, and Auxiliary modes.
 Volume Control Dial / Standby Button	<ul style="list-style-type: none">• Press to enter/exit standby mode.• Turn clockwise/anticlockwise to increase/decrease volume.
 Select / Scroll Dial / Snooze Button	<ul style="list-style-type: none">• Press to snooze alarm.• Turn to scroll through options. Press to enter selection.• Turn to scroll to station in DAB+ mode. Press to select station.• Turn to tune in intervals of 0.05MHz in FM mode.• Turn to skip to previous/next track in Bluetooth®, CD, USB, and Auxiliary modes.

Product Overview (cont.)

Audio Modes

The Digital Radio has different audio modes that enables the user to play music in a variety of ways. Please see below a summary of the different audio modes.

DAB+ (Digital Radio)	The built-in DAB+ tuner, auto-scan function, and large 30 station programmable memory, allows you to listen to your favourite DAB+ radio stations.
FM	The built-in FM tuner, auto-scan function, and large 30 station programmable memory, allows you to listen to your favourite FM radio stations.
BT (Bluetooth®)	Listen to music from a compatible Bluetooth® enabled device such as a smartphone or tablet.
CD	Playback compatible audio files stored on an audio CD, CD-R and CD-RW.
USB	Playback compatible audio files that are saved on a USB flash drive.
AUX (Auxiliary)	Playback audio files from various media devices with a 3.5mm audio jack such as MP3 players, smartphones, tablets, computers and many more, by connecting the device to the Digital Radio via a 3.5mm AUX cable (not included).

Getting Started

Before First Use

Prior to using your Digital Radio, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product. We recommend you keep the original packaging for storing your Digital Radio when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Digital Radio is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.
2. Remove the twist-tie which is securing the cord of the power adaptor. Uncoil the cable and straighten it to remove any kinks. Do not use the product if the power adaptor is damaged, please call the After Sales Support line for further advice.
3. Place the Digital Radio on a flat, level surface. Make sure it is not subject to vibrations or movement.
4. Peel the thin plastic film off the LCD display screen before use.

Instructions

Power On-Off / Standby Mode

1. Once all the packaging has been removed and the Digital Radio has been placed on a flat, level surface, insert the Power Adaptor (supplied) into a power socket and connect the other end to the DC Power Input (located on the rear panel) of the Digital Radio.
2. Next, switch the power socket on and the Digital Radio will power on.
3. The Digital Radio will display a welcome message 'Welcome to Digital Radio' followed by entering the standby mode.
4. To power off the Digital Radio simply switch the power socket off.

NOTE: When the Digital Radio is powered on for the first time (or after performing a factory reset), you will be prompted to set the time and date right after the welcome message. Refer to instructions in section 'System Menu' (on page 13) to set the time and date of the Digital Radio.

Prepare the Antenna


On the rear panel of the Digital Radio there is a telescopic antenna. For best radio reception in DAB+ or FM mode, we recommend that you gently pull the antenna away from the antenna clip and then fully extend it upwards.

NOTE: To prevent any interference, position the antenna as far as possible from any other radiation sources.

Instructions (cont.)

System Menu

The Digital Radio has a system menu which can be accessed to setup the basic settings of the Digital Radio. The system menu can be accessed through the different audio modes or from the standby mode.

1. Press the  button to access the different menu options.
2. Select 'System' from the on-screen display.
3. You can now access and modify the following functions from the system menu to your preference.

Equaliser	<p>Select one of the pre-defined sound equaliser options or customize according to your taste. Best universal pre-defined equaliser setting is Normal.</p> <p>Options: Rock, Speech, My EQ...(Customize level of Treble, Bass and Loudness), Normal, Classic, Jazz and Pop.</p> <div style="border: 1px solid blue; padding: 5px;"><p>NOTE: This menu option will not appear unless the Digital Radio is out of standby mode.</p></div>
Time (Time and Date)	<ul style="list-style-type: none">• Set Time/Date: To set time and date.• Auto Update: To select a source (DAB, FM, Any, or no update) for automatic time update.• Set 12/24 hour: To set 12 or 24 hour time format.• Set date format: To set date format as DD-MM-YYYY or MM-DD-YYYY.
Backlight	<ul style="list-style-type: none">• Timeout: Set the timeout of the LCD display screen backlight. Options: 10, 20, 30, 45, 60, 90, 120, 180 seconds and On (always on).• On level: Brightness level of the display. Options: High, Medium, and Low.• Dim level: Select the backlight dimmer level after timeout. Options: High, Medium, and Low.
Language	<p>Set the language for the on screen display of the Digital Radio.</p> <p>Options: English (Default), Deutsch (German), Italiano (Italian) and Français (French).</p>
Factory Reset	<p>Restore the Digital Radio back to its default settings.</p>
Software Upgrade	<p>The Digital Radio is shipped by the manufacturer with the most up to date software. However, from time to time the manufacturer may release software updates. Contact the after sales support at 1300 777 137 to find out if you have the most up to date software and if required, how to carry out any software updates. See next function to find out the current software version of the Digital Radio.</p>
SW Version	<p>Find out the current software version for the Digital Radio.</p>




NOTE: If you access the system menu from the standby mode you will not be able to see the equaliser function. To access the equaliser function, ensure that you access the system menu from any one of the audio modes of the Digital Radio, eg. when the Digital Radio is operating and not in standby mode.

Instructions (cont.)

Alarm Setting

The Digital Radio has 2 alarms that can be activated together for 2 different alarm settings (Alarm 1 and Alarm 2), or you may wish to activate one alarm at a time. Once an alarm is activated you will find the alarm icon(s) displayed on the LCD display screen. Before setting up the alarm(s) ensure that the time and date of the Digital Radio has been correctly set through the system menu (see page 13).



Alarm Set Up

1. Press the  button to select alarm 1 or press the  button again to select Alarm 2. Press the  **SELECT/SCROLL** dial to confirm selection.
2. Follow prompts below to set up the alarm.


On time	Set the alarm time.
Duration	Set the duration of the alarm. Options: 15, 30, 45, 60 and 90 minutes.
Source	Select the alarm sound source. Options: Buzzer, DAB, FM, CD and USB. For DAB and FM option choose between last listened station or a preset station as the alarm sound source.
Cycle	Set the frequency of the alarm. Options: Daily, Once, Weekends and Weekdays.
Volume	Set the volume of the alarm sound.
Alarm	To turn on or off the alarm.

NOTE: You have approximately 7 seconds to make your selection at each step before your current alarm settings get automatically cancelled and you have to start all over again.

Stop the Alarm

Once the alarm has sounded, you can stop the alarm by pressing the  button or the  **VOLUME** dial. The Digital radio will go to standby mode.


Snooze Function

Press the  **SELECT/SCROLL** dial when the alarm has sounded. The snooze time is 9 minutes. The LCD display screen will show a countdown time and after the timer elapses the alarm will start sounding again. You can then choose to let the alarm play for its duration time, snooze again, or stop the alarm.

Instructions (cont.)

Sleep Timer


The sleep timer returns the Digital Radio to standby mode after a set duration of time.

1. When the Digital Radio is in an audio mode press the **SLEEP** button repeatedly to select the sleep timer period (15, 30, 45, 60, 90 minutes or sleep off).
2. When the sleep timer is active, the sleep timer icon  with the remaining time will be displayed on the LCD display screen.
3. The sleep time will now start counting down and after the timer elapses the Digital Radio will go to standby mode.

DAB+ Mode

Operation

To access the DAB+ Mode





If in standby mode, exit first to the last played audio mode by pressing the  **VOLUME** dial.

Press the **MODE** button repeatedly till you see 'DAB' displayed on the LCD display screen.

To search for DAB+ radio stations





- Press the **MENU** button to see the menu options.
- To automatically perform a full scan and store all available stations select 'Full Scan'.
- To manually tune your favourite station, select 'Manual tune'.

To select a station from station list

Press  or  button or rotate the **SELECT/SCROLL**  dial and then press the **SELECT/SCROLL**  dial.





A maximum of 30 DAB+ stations can be stored.

To store a radio station in the preset list

- Tune in to the station you want to save in the preset list.
- Press **PRESET** button until 'Preset Recall' is shown.
- Press and hold **PRESET** button again for a couple of seconds till 'Preset Store' is shown.
- Press  or  button or rotate the **SELECT/SCROLL**  dial to select a preset slot, and press **SELECT/SCROLL**  dial to confirm.

To recall a radio station in the preset list

Press **PRESET** button.





Press  or  button or rotate the **SELECT/SCROLL**  dial to reach desired station in preset list and then press **SELECT/SCROLL**  dial.

Browse station information (if available)

Press **INFO** button repeatedly.

Instructions (cont.)

Setup Menu





 









In DAB+ mode, press  button to access the DAB+ menu. Press  or  button or rotate the **SELECT/SCROLL**  dial to scroll through menu options.

Full Scan	Scan and store all available DAB+ stations.
Manual tune	Tune to a specific channel/frequency manually and if it is broadcasting add it to station list.
DRC	Some broadcasts offer dynamic range compression (DRC). Compressing the dynamic range of a radio signal can increase the volume of quiet sounds and reduce the volume of loud sounds. Select from off, low, and high.
Prune	Remove all the invalid stations from the station list.
Announcement	Receive DAB announcements (if available in area) during regular broadcast. Choose from Off, On, No TA (Traffic Announcement) and Only TA.
System	Setup system settings for the Digital Radio. Refer to section 'System Menu' on page 13 for details.




Instructions (cont.)

FM Mode

Operation

- To access the FM Mode
- If in standby mode, exit first to the last played audio mode by pressing the  **VOLUME** dial.
 - Press the **MODE** button repeatedly till you see 'FM' displayed on the LCD display screen.
- To manually tune a station
- Press  or  button repeatedly or rotate the **SELECT/SCROLL**  dial to select a frequency.
- To automatically tune to next available station
- Press and hold the  or  button for a few seconds till the Digital Radio tunes to a FM station with strong reception automatically.
- To store a radio station in the preset list
- A maximum of 30 FM stations can be stored.
- Tune in to the station you want to save in the preset list.
 - Press **PRESET** button until 'Preset Recall' is shown.
 - Press and hold **PRESET** button again for a couple of seconds till 'Preset Store' is shown.
 - Press  or  button or rotate the **SELECT/SCROLL**  dial to select a preset slot and press **SELECT/SCROLL**  dial to confirm.
- To recall a radio station in the preset list
- Press **PRESET** button.
 - Press  or  button or rotate the **SELECT/SCROLL**  dial to reach desired station in preset list and then press **SELECT/SCROLL**  dial.
- Browse station information (if available)
- Press **INFO** button repeatedly.

Setup Menu


 
In FM mode, press **MENU** button to access the FM menu. Press  or  button or rotate the **SELECT/SCROLL**  dial to scroll through menu options.

- Scan Setting
- To decide if only stations with strong signals or all stations are scanned during tuning.
- Audio Setting
- Select if you wish to receive the FM station in stereo or mono.
- System
- Setup system settings for the Digital Radio. Refer to section 'System Menu' on page 13 for details.

Instructions (cont.)

BT (Bluetooth®) Mode

Pairing

1. If in standby mode, exit first to the last played audio mode by pressing the  **VOLUME** dial. Press the  button repeatedly till you see 'BT' displayed on the LCD display screen.



NOTE: 'Not Connected' will display on the LCD display screen if no BT enabled device is connected.

2. On your Bluetooth® device, enable Bluetooth and search for Bluetooth devices.
3. Select **EA2370** from search results and tap to connect. After successful connection, the LCD display screen message on the Digital Radio will change to 'Connected'.

IMPORTANT: If the LCD display screen displays 'Connected', this means that the last connected device is within the Bluetooth® reception range of the Radio. You will not be able to pair a new device until the previously connected device has been disconnected. You will need to turn off the Bluetooth® connection on the last connected device in order to connect to a new device. Please see the instructions on the next page, on how to disconnect a 'Connected' device.

Operation



To access the Bluetooth® Mode

- If in standby mode, exit first to the last played audio mode by pressing the  **VOLUME** dial.
- Press the  button repeatedly till you see 'BT' displayed on the LCD display screen.

To start playback

- Select an audio file from the paired Bluetooth® device and start playback from the device.

To pause and then resume playing current track

- Press  button. This will pause current track.
- Next, press  button again to resume playing current track.

To skip to previous or next audio file on playlist



- Press  or  button
- Alternatively, rotate the **SELECT/SCROLL**  dial anticlockwise or clockwise.

NOTE: When listening to tracks via Bluetooth®, always be aware that you may need to adjust the volume on both the Radio and the Bluetooth® enabled device to reach the required volume level. This is **EXTREMELY** important, because without doing this, you may not be able to hear any sound at all. Please ensure this is checked.

Instructions (cont.)

Disconnecting the Bluetooth® Enabled Device

To end the connection between the Bluetooth® enabled device and the Digital Radio, follow the steps below.

1. Press the  button to enter a different audio mode; or
2. Press the  **VOLUME** dial to send the Digital Radio into standby; or
3. On the Bluetooth® enabled device, select **EA2370** and then 'Disconnect' or 'Forget This Device'; or
4. Simply turn the Bluetooth® function OFF on the Bluetooth® enabled device.


 
CD Mode

WARNING: Improper handling may cause damage to the Digital Radio. Do not insert non-supporting format disc into the Digital Radio.



Operation

The Digital Radio can playback audio files stored on an audio CD, CD-R and CD-RW. The playback will depend on the quality of the disc.



To access the CD Mode

- If in standby mode, exit first to the last played audio mode by pressing the  **VOLUME** dial.
- Press the  button repeatedly till you see 'CD' displayed on the LCD display screen.

To insert CD into the Digital Radio

- Press the  button and the CD tray will slide out. Place the CD on the tray (with CD artwork facing up / mirror side facing down).
- Press the  button again to close the CD tray.




To pause and then resume playing current track

- Press  button. This will pause current track.
- Next, press  button again to resume playing current track.



To stop playback

- Press  button.

To skip to previous or next audio file on playlist

- Press  or  button.
- Alternatively, rotate the **SELECT/SCROLL**  dial anticlockwise or clockwise.

To quickly search backward or forward within an audio file

- During playback, press and hold the  or  button.

IMPORTANT: Before playing music from a CD, turn down the volume of the Digital Radio to avoid a possible loud output from the speakers. Wait until the music / media is playing and then turn up the volume.


 
Instructions (cont.)

USB Mode

WARNING: Improper handling may cause damage to the Digital Radio. Do not connect the Digital Radio directly to the USB port of a computer or other external storage media such as external hard disk.

Operation



To access the USB Mode

- If in standby mode, exit first to the last played audio mode by pressing the  **VOLUME** dial.
- Press the  button repeatedly till you see 'USB' displayed on the LCD display screen.

To insert USB into the Digital Radio

- Plug the USB flash drive into the USB media port located on the front panel of the Digital Radio.




To pause and then resume playing current track

- Press  button. This will pause current track.
- Next, press  button again to resume playing current track.



To stop playback

- Press  button.

To skip to previous or next audio file on playlist

- Press  or  button.
- Alternatively, rotate the **SELECT/SCROLL**  dial anticlockwise or clockwise.

To quickly search backward or forward within an audio file


 
- During playback, press and hold the  or  button.

AUX (Auxiliary) Mode

Operation

Your external player (e.g., mp3 player) can be connected to the auxiliary input (AUX IN, located on the rear panel) of the Digital Radio with an audio cable (with 3.5mm connector, not supplied).

To access the Auxiliary Mode

- If in standby mode, exit first to the last played audio mode by pressing the  **VOLUME** dial.
- Press the  button repeatedly till you see 'AUX' displayed on the LCD display screen.

To start and control playback

- Perform all playback operations on the external player.

Instructions (cont.)

Using the Headphone Output

The Digital Radio features one 3.5mm headphone output (located on the rear panel of the Digital Radio) which allows you to listen to the Radio through headphones (not supplied) instead of the Radio speaker.

This is a useful feature if you do not want to disturb others while listening to the Radio. Simply connect the headphones to the headphone output and the Radio will now divert the audio through headphone output instead of the Radio speaker.

NOTE: If the headphones/earphones are not properly connected to the headphone output then the audio will continue to play through the Radio speaker.

NOTE: When listening to tracks via the headphone output, always be aware that you may need to adjust the volume on both the Radio and the headphones to reach the required volume.

NOTE: Do not turn the VOLUME control dial in an extremely fast motion. It is best to turn it slowly for more accurate volume control selection.

IMPORTANT: It is NOT recommended to increase the volume higher than level 5 when listening to audio via headphones connected to the Radio. Listening to audio via headphones at a higher volume than recommended may cause damage to your hearing.



High sound pressure with hearing damage risk. Do not listen at high volume levels for long periods.

Frequently Asked Questions

Problem	Solution
Why is the Digital Radio not powering on?	<p>Check that the power adaptor is connected to a power outlet with the other end properly inserted into the DC input port of the Digital Radio and the power outlet is switched on.</p> <p>Check the power outlet is working by plugging in another appliance into the same power outlet and switching on.</p>
Why does the FM station have static, and the Digital Radio has intermittent cut outs?	<p>The FM station's signal may be too weak. Relocate the Digital Radio to an area with better reception and ensure to adjust the antenna to an optimal position. You may also consider to re-scan the stations.</p>
In DAB+ mode, why is the Digital Radio not picking up DAB+ stations or existing stations having intermittent cut outs?	<p>Relocate the Digital Radio to a position that has better reception and/or adjust the Radio antenna. Then, follow the instructions on pages 15 - 16 to automatic scan DAB+ stations again.</p>
Can I check my area's DAB+ reception coverage?	<p>Visit https://www.digitalradioplus.com.au/can-i-get-digital-radio and enter your postcode to check reception coverage. This Digital Radio is suitable for areas with 'Good Reception'. If your address does not have 'Good Reception', you may not be able to pick up all digital stations with this Radio. Contact our After Sales Service at 1300 777 137 for further advice.</p>
Why is there no sound coming from the speaker?	<p>Ensure the volume is turned up by turning the  VOLUME control dial clockwise.</p> <p>Check that the <u>correct</u> audio mode has been selected by pressing the  button repeatedly.</p> <p>If connected via Bluetooth* or Auxiliary, ensure that the volume is turned up on your connected device.</p> <p>Ensure that there are no headphones connected to the headphone output (located on the back of the Radio).</p>
Why is there distorted sound coming from the speaker?	<p>The volume is too high, please turn the volume of the Digital Radio down.</p>
Can I listen to AM radio?	<p>No. The unit can only broadcast FM and DAB+ stations. Some AM stations that usually appear on the AM band may also be broadcasting via the DAB+ radio band, depending upon your available area.</p>
Why is 'Connected' displaying on the LCD display screen in Bluetooth* mode?	<p>You have selected Bluetooth* playback and the Digital Radio has connected to a previously paired device.</p>

Frequently Asked Questions (cont.)

Problem	Solution
Why can I not connect via Bluetooth®?	<p>Check that your device has Bluetooth® switched on and that you are in range of the Radio.</p> <p>Check that there is no other Bluetooth® enabled device already connected.</p> <p>If a device that was previously connected is within range and has Bluetooth® enabled, the LCD display screen will display 'Connected'. You will need to locate the device that is connected and disconnect the Bluetooth® on the paired device. Please see the instructions on page 19 for how to disconnect a Bluetooth® paired device.</p>
Why won't the USB flash drive play music?	<p>Check that your USB flash drive has a size no greater than 64GB, as flash drives greater than 64GB in size will not play audio files on the Digital Radio.</p> <p>Ensure the music files are in MP3, WMA, WAV, FLAC or APE format; otherwise, they will not play.</p> <p>Check that your USB flash drive is in good working order.</p>
Why won't the CD player play music?	<p>Ensure the music CD in the player is scratch free.</p> <p>Ensure the music CD has been inserted correctly in the CD player i.e. with CD artwork facing up / mirror side facing down.</p>

Other Useful Information

Cleaning and Maintenance

1. Before cleaning the Digital Radio, always turn off the power at the power outlet and unplug the adaptor from the Digital Radio.
2. The Digital Radio will require regular "dusting" to keep it clean. Use a standard duster, or a dry, soft microfibre cloth to remove the dust from the Digital Radio. Remove the dust from the Digital Radio regularly.
3. If the Digital Radio does become soiled with anything other than dust on the exterior, clean the device by wiping over the surface with a slightly damp cloth and then polish dry with a soft cloth. Ensure that no moisture or liquid enters the Digital Radio, particularly around the LCD display screen, speaker, and buttons.
4. Be careful when wiping over the Digital Radio, that you do not apply too much pressure, as there is a risk that you may break parts.
5. Do not use detergents or abrasive cleaners, and do not allow moisture, water, or other liquid to enter the Digital Radio.

IMPORTANT: Ensure that no moisture or liquids enter the Digital Radio, particularly around the front panel.

Storage

- Before packing away the Digital Radio for storage, ensure it is clean and free of dust.
- We recommend storing the Digital Radio in its original carton to protect it from dust, with the power cord (supplied).
- Store the Digital Radio in a clean and dry place, out of children's reach.
- Do not place heavy objects on top during storage.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and are for compatibility purposes only. Other trademarks and trade names are those of their respective owners. These brands are not associated with this product and are not related to Uncle Bill's Australia Pty Ltd.

Other Useful Information (cont.)

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, email, or DVD, please contact service@unclebills.com.au.

The Radio has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 62368

Specification Table

MODEL:	EA2370
FM FREQUENCY RANGE:	87.5MHZ - 108MHZ
DAB+ FREQUENCY RANGE:	174MHZ - 240MHZ
FM MODE PRESETS:	30 SLOTS
DAB+ MODE PRESETS:	30 SLOTS
BLUETOOTH VERSION:	5.0
INPUT VOLTAGE:	12V  2A (Power on through DC Power Input)
USB VOLTAGE (MAX):	5V  0.2A (ONLY WHEN USING USB MODE)
DIMENSIONS:	37.4 x 22.6 x 14 cm
NET WEIGHT:	2.9 kg
WARRANTY:	1 Year
VERSION NO:	11
ISSUE DATE:	6th June, 2023

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.



Signify[®]

Digital Radio with CD Player

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

48B Egerton Street, Silverwater NSW 1811 Australia

1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

service@unclebills.com.au

Notes





ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China

ALDI STORES, 1 SARGENTS ROAD

MINCHINBURY NSW 2770

www.aldi.com.au

AFTER SALES SUPPORT



1300 777 137



service@unclebills.com.au

MODEL: EA2370

PRODUCT CODE: 713374

08/2023

1

YEAR WARRANTY