

signify[®]



BINOCULARS

Model Number: EA2506

INSTRUCTION MANUAL

WELCOME

Congratulations on choosing to buy a Signify® product.

All products brought to you by Signify® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty and customer technical support line.

This comprehensive instruction manual will provide you with a detailed guide on how to operate your product and will also assist you in troubleshooting any problems that you may encounter.

If you have any queries regarding the use of this product, please feel free to phone our technical support line for some friendly advice. If you are experiencing difficulties or believe that the product may have a technical fault, we will assist you in rectifying the issue. We can generally solve most problems simply and quickly over the phone, so please always phone us first!

We are sure that you will enjoy using this product and you can expect to gain years of service from this product when it is used and maintained in the correct manner.

CONTENTS

Welcome	2
Warranty Details	4
General Information and Safety Instructions	5
Product Overview	7
Getting Started	8
Before First Use	8
Attaching the Neck Strap	8
Instructions	11
Folding Down the Eye Cups	11
Interpupillary Distance Adjustment	12
Dioptre Adjustment	13
Using the Binoculars	14
Frequently Asked Questions	16
Other Useful Information	17
Cleaning and Maintenance	17
Storage	18
Responsible Disposal	18
Specification Table	19
Repair and Refurbished Goods or Parts Notice	20



signify®

Binoculars

Warranty Details



REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 service@unclebills.com.au

4   1300 777 137 MODEL: EA2506 PRODUCT CODE: 716013 07/2024

1
YEAR
WARRANTY

GENERAL INFORMATION AND SAFETY INSTRUCTIONS

RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. Please keep this instruction manual in a safe place along with your purchase receipt, warranty card and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the product. Always follow basic safety precautions and accident prevention measure when using this product.

1. Read all the instructions before using the Binoculars.
2. The Binoculars are not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure they do not play with the Binoculars.
3. Do not use the Binoculars for anything other than their intended use.
4. Do not immerse the Binoculars in water or any other liquids.
5. Do not use the Binoculars if they have been dropped or damaged in any way. Contact our After Sales Support Line on 1300 777 137 for further advice.
6. This product is not a toy. Keep the Binoculars out of reach of children.
7. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
8. Do not place the Binoculars near a hot burner (gas or electric), other heat emitting sources or open flames.
9. Never handle the Binoculars with wet or damp hands.
10. Do not place the Binoculars such that there is a risk of them falling into a body of water.
11. Ensure that children not push objects into the housing, the eyepieces or objective lenses of the Binoculars.
12. Never attempt to clean the Binoculars by immersing them in water and do not use a steam cleaner to clean them. Otherwise, you may damage the Binoculars.
13. When the Binoculars are not in use or being cleaned, it is recommended to place them in the carry case (supplied) and store in a clean, dry location.
14. Never look directly at the sun with the naked eye or with your Binoculars. Permanent and irreversible eye damage may result. Eye damage is often painless, so there is no warning to the observer that damage has occurred until it is too late. Never point the Binoculars at or near the sun.

GENERAL INFORMATION AND SAFETY INSTRUCTIONS (CONT.)

- Never use the Binoculars to project an image of the sun onto any surface. Internal heat build-up can damage your Binoculars and/or any accessories attached to them. Furthermore, the image projected by the finder is hot enough to burn skin and clothing.
- Never leave the Binoculars unsupervised, either when children are present or adults who may not be familiar with the correct operating procedures of your Binoculars.
- Handle the Binoculars with care. Protect your Binoculars from impact, falling and other strong mechanical influences.
- Protect your Binoculars from water and high humidity. Penetration of moisture may damage the device.
- Do not expose the Binoculars to strong heat and direct sunlight.
- Do not leave the Binoculars in a car for long periods. Air humidity, vibrations and the high temperature reached in sunshine may cause damage to the optics of the device.
- Do not use the Binoculars while you are walking. This is very dangerous as you may overlook obstacles in the way which could result in serious injury.
- Do not open, alter or modify the Binoculars or insert metal or other objects such as wires, etc. into the Binoculars.
- Do not subject the Binoculars to temperatures greater than 60°C.
- The Binoculars are suitable for outdoor use in temperate climates with fair or overcast weather conditions. The Binoculars are not waterproof. Never use the Binoculars in the rain as this can damage the unit.



Read this instruction manual carefully before using the Binoculars and keep it in a safe place for future reference.



Warning!

Risk of blindness! Never use this device to look directly at the sun or in the direct proximity of the sun. Doing so may result in a risk of blindness.



CAUTION!

FIRE HAZARD! Never place the Binoculars directly in the sun.

PRODUCT OVERVIEW



1. Left Eyepiece (inner objective lens)
2. Left Barrel (optical tube)
3. Objective Lenses and Protective Caps
4. Right Barrel (optical tube)
5. Focus Wheel
6. Dioptre Adjustment Ring (- 0 +) & Right Eyepiece (inner objective lens)
7. Eyepieces Protective Caps
8. Tripod Mount Socket with Cover (tripod not supplied)
9. Brackets (for neck strap)

Included (not pictured): Instruction Manual, Getting Started Guide, Warranty Certificate, Carry Case, Neck Strap, Lens Cleaning Cloth.

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA2506 PRODUCT CODE: 716013 07/2024

GETTING STARTED

Before First Use

Prior to using your Binoculars, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product.

1. Unpack the product but keep all packaging materials until you have made sure your new Binoculars are undamaged and in good working order.
2. Plastic wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are kept out of their reach.
3. We recommend you keep the original packaging for storing your Binoculars when not in use.

Attaching the Neck Strap

It is recommended to attach the neck strap before using the Binoculars. To attach the neck strap, refer to the instructions below.

1. Place the Binoculars on a flat, dry and stable surface with the brackets facing upwards and the eyepieces facing towards you (Fig. 1).
2. The strap ends come already looped so that you can see how the strap threads through the buckle for attachment (Fig. 2).
3. Unthread the strap from the underside of the buckle on one end of the strap so that you have a single piece of strap. The strap should still be threaded though the buckle only now it is single, not double (Fig. 3).



Fig. 1



Fig. 2



Fig. 3

GETTING STARTED (CONT.)



Fig. 4



Fig. 5



Fig. 6

4. Thread one end of the strap (with the under side of the buckle facing upwards) through one of the brackets located on Binoculars (Fig. 4).

NOTE: The end of the strap may catch when threading through the brackets. If this happens, bend the end of the strap so that the end curls slightly upwards, then try again. It may take a few attempts to thread the end of the strap through the bracket.

5. Release the tension on the strap remaining in the buckle (make sure the top strap is now loose and in a loop, so you can easily feed the bottom strap through the underside of the buckle under the top strap). Thread the end of strap through the underside of the buckle (Fig. 5). Pull the strap until it is tight and secured into place (Fig. 6).
6. Repeat steps 3-5 to attach the strap to the bracket on the other side of the Binoculars.
7. Slide the neck comfort pad to the desired position on the neck strap.

NOTE: Take care not to “twist” the strap when connecting the other end of the strap to the Binoculars. If the strap is “twisted” undo one end of the strap, straighten the strap, and reattach following steps 3-5 starting on page 8.

CAUTION: Never adjust the neck strap length while the Binoculars are hanging around your neck. Always remove the Binoculars and place on a flat, dry, and level surface before making any adjustments to the neck strap length.

NOTE: To adjust the neck strap length, remove the Binoculars from your person and place the Binoculars on a dry, flat, and level surface. Undo the strap from the buckle until it is a single strap. Slide the buckle to the desired position on the strap, then follow steps 3-5 starting on page 8 to secure the strap into position.

GETTING STARTED (CONT.)

CAUTION: Check the neck strap has been attached to the brackets on the Binoculars correctly and securely before lifting the Binoculars and placing the neck strap around your neck. If the strap is not securely attached, the Binoculars may fall and break.

NOTE: The neck comfort pad can be removed from the neck strap, however it is not recommended to do this.

Carry Case Strap Adjustment

The Binoculars come with a carry case for your convenience and to also protect the Binoculars from dirt and dust when not in use.

1. To adjust the length of the strap, simply slide the buckle to the desired position. Then pull the strap to tighten if needed.
2. Slide the shoulder comfort pad to the desired position on the strap.

NOTE: The shoulder comfort pad cannot be removed from the shoulder strap as the shoulder strap is permanently attached to the carry case and cannot be detached.

NOTE: The Binoculars come equipped with a tripod mounting socket, conveniently located at the center front between the left and right barrels. To access this feature, simply unscrew the cap. Most tripods with a 1/4 inch thread are compatible and can be securely attached to the Binoculars tripod mounting socket. For proper and secure usage, it is imperative to strictly adhere to the tripod manufacturer's instructions on how to mount the Binoculars to the tripod. In the event that the tripod does not fit the Binoculars tripod mount socket, we recommend reaching out to the manufacturer of the tripod for further advice.

INSTRUCTIONS

Folding Down the Eye Cups

The Binoculars feature foldable rubber eyecups on the eyepieces for people that wear glasses.

NOTE: Always remove the 4 protective caps from both the eyepieces and the objective lenses before use.

1. Fold down the rubber edge (eyecup) of the left and right eyepieces to make it easier to view the entire image (Fig. 7).
2. After use, return the eyecup to the fully extended position to ensure the rubber of the eyecups retains their shape and flexibility.



Fig. 7

CAUTION: Do not attempt to remove the rubber edge from around the eyepieces! This will damage the rubber edge and affect the use of the Binoculars.

NOTE: If your glasses have a distance section, use this part of your glasses to look through the Binoculars.

NOTE: If you wear contact lenses, there is no need to fold down the rubber eyecups, you can use the Binoculars in the same way as those with normal vision.

INSTRUCTIONS (CONT.)

Interpupillary Distance Adjustment

The distance between the eyes, called the interpupillary distance, varies from person to person. To achieve the perfect alignment of the eyepieces to your eyes, hold the Binoculars in the normal observation (viewing) position, then move the barrels closer together or further apart (Fig. 8) until you see a singular circular field of view (Fig. 9).



Fig. 8



Fig. 9

NOTE: Always remove the 4 protective caps from both the eyepieces and the objective lenses before use.

NOTE: Improper alignment of the interpupillary distance will result in double images.

NOTE: If another person uses the Binoculars, they will need to adjust the interpupillary distance for their eyes.

NOTE: Before each use it is recommended to check and adjust the interpupillary distance for your eyes as needed.

INSTRUCTIONS (CONT.)

Dioptré Adjustment

As individual vision varies from person to person, the Binoculars have a dioptré adjustment ring that enables you to adjust the Binoculars to your eyesight. To adjust the dioptré setting, follow the steps below.

NOTE: Always remove the 4 protective caps from both the eyepieces and the objective lenses before use.

1. Set the dioptré adjustment ring setting to zero (align the marking located on the right eyepiece with the "0") (Fig. 10).
2. Holding the Binoculars in the normal viewing position, look at a distant object. Close your right eye and turn the focus wheel clockwise or anticlockwise until the object you are viewing through the left eyepiece appears sharp and clear (Fig. 11).
3. Still holding the Binoculars in the normal viewing position, open your right eye and close your left eye. Looking at the same object, turn the dioptré adjustment ring clockwise (-) or anticlockwise (+) until the object you are viewing through the right eyepiece appears sharp and clear (Fig. 12).
4. The Binoculars are now adjusted for your vision and ready for use.

CAUTION: Never over-twist or force the dioptré adjustment ring. Excessive force may damage the dioptré adjustment ring or cause it to break off the Binoculars.

NOTE: Once the dioptré is set for your vision, do not change the setting. If the dioptré setting changes, you will need to repeat all steps above to reset the dioptré for your eyes again. It is recommended to take note of the dioptré setting for future reference.

NOTE: If another person uses the Binoculars, they will need to follow the above steps to adjust the dioptré setting for their vision.



Fig. 10



Fig. 11



Fig. 12

INSTRUCTIONS (CONT.)

Using the Binoculars

NOTE: Always remove the 4 protective caps from both the eyepieces and the objective lenses before use.

1. Hold the Binoculars in the normal observation (viewing) position and look through the eyepieces.
2. Locate the object you wish to view.

NOTE: Keep the Binoculars as still as possible when observing the object. It is recommended to hold the Binoculars with both hands and support your elbows on a surface that is free of movement and vibrations.



Fig. 13

3. Turn the focus wheel clockwise or anticlockwise until the object you are viewing appears sharp and clear (Fig. 13).

NOTE: When you first begin using the Binoculars, it may take some time adjusting the dioptre to the correct setting for your eyes and getting the use to using the focus wheel. It may take a few times of using the Binoculars until you master the technique. The more you practice the easier it will become and will eventually become second nature.

NOTE: If you cannot focus the Binoculars, the dioptre setting may not be correctly adjusted for your eyes. Refer to the instructions on page 13 for how to adjust the dioptre setting.

NOTE: Always place the 4 protective caps back on the eyepieces and the objective lenses after use to protect the lenses from dust and damage.

WARNING: Do not expose the Binoculars to direct sunlight for long periods of time. Never leave them in a closed vehicle parked in the sun. The interior of the closed vehicle can reach extremely high temperatures very quickly. Never expose the Binoculars to temperatures greater than 60°C as this will damage the unit.

CAUTION: Do not expose the Binoculars to water and high humidity. Penetration of moisture may damage the glass.

INSTRUCTIONS (CONT.)

CAUTION: Always protect the Binoculars from falling, impact and other strong mechanical influences.

NOTE: It is recommended to always place the neck strap (attached to the Binoculars) around your neck while using the Binoculars. Refer to the instructions starting from page 8 for how to attach the neck strap.

FREQUENTLY ASKED QUESTIONS

Problem	Solution
I cannot see through the Binoculars?	<ul style="list-style-type: none">• Check the rubber protective caps have been removed from the eyepieces and the objective lenses.• The eyepieces or objective lenses may be dirty. Refer to the cleaning instructions on page 17 for how to clean the eyepieces and objective lenses.• If you still cannot see through the Binoculars, please contact the After Sales Support line for further advice.
The object is blurry?	<ul style="list-style-type: none">• The distance between the left and right eye pieces may be too wide or too narrow for your eyes causing the image to be double and blurred. Refer to the instructions on page 12 for how to adjust the interpupillary distance.• The Binoculars may need adjusting to your eyes. Refer to the instruction on page 13 for how to adjust the dioptre setting.• You may need to adjust the focus of the Binoculars, refer to the instructions on page 14 for how to use the Binoculars.• The eyepieces or objective lenses may be dirty. Refer to the cleaning instructions on page 17 for how to clean the eyepieces and objective lenses.
Are the Binoculars waterproof?	<ul style="list-style-type: none">• No, the Binoculars are not waterproof and locations with water should be avoided. Water splashes should be wiped off immediately with a soft, dry cloth. Dry the Binoculars with a clean, dry, soft and lint-free cloth.

OTHER USEFUL INFORMATION

Cleaning and Maintenance

Your Binoculars are a high-quality precision optical instrument. Follow these guidelines to keep your Binoculars in the best condition.

- When you are not using the Binoculars, it is recommended to pack the Binoculars away for safe storage.
- The Binoculars are likely only to require regular "dusting" to keep them clean. Use a soft cloth or standard duster, to remove the dust from the Binoculars. Clean the dust from the Binoculars regularly.
- If the Binoculars become soiled with anything other than dust on their exterior, clean the exterior of the Binoculars by wiping over the surface with a slightly damp cloth and then polish with a soft dry cloth.
- Do not use any cleaning agents on the lenses. Be careful that you do not apply too much pressure when cleaning the lenses of the Binoculars. There is a risk that you may damage the sensitive parts.
- It is recommended to clean all 4 lenses of the Binoculars regularly with the cleaning cloth (supplied).

NOTE: Only use the cleaning cloth supplied with the Binoculars to clean the lenses. This cloth is specifically designed for the lenses and won't harm the coatings. Avoid using other cleaning cloths. Do not use eyeglasses or any other type of cleaning cloths aside from the supplied lens cleaning cloth. Using other cleaning cloths other than the supplied lens cleaning cloth may potentially damage the blue lens coating on the Binoculars.

WARNING: Never take the Binoculars apart for cleaning!

- Water splashes should be wiped off immediately with a soft, dry cloth. Dry the Binoculars with a clean, dry, soft, and lint-free cloth.
- Do not use detergents or abrasive cleaners, and do not allow moisture, water or other liquid to enter the Binoculars.

OTHER USEFUL INFORMATION (CONT.)

Storage

- Ensure that the Binoculars are stored in a cool and dry ventilated location out of direct sunlight and inside the carry case (supplied).
- We recommend storing the Binoculars (inside the carry case) together with all the accessories inside their original carton.
- Store the Binoculars in a clean and dry place, out of children's reach.
- Do not place heavy objects on top of the Binoculars during storage.

NOTE: Always place the 4 protective caps back on the eyepieces and the objective lenses after cleaning and when storing in the carry case (supplied) to protect the lenses from dust and damage.

Responsible Disposal

We encourage you to dispose of your packaging carefully and thoughtfully. Please sort the packaging before you dispose of it. Observe any local regulations regarding the disposal of consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, DVD or by email, please contact service@unclebills.com.au to obtain a copy.

OTHER USEFUL INFORMATION (CONT.)

Specification Table

MODEL:	EA2506
COLOUR:	Black
MAGNIFICATION:	10x
LENS COATING:	Blue Layer Fully Coated
LENS DIAMETER:	50mm
BRIGHTNESS:	25
TWILIGHT FACTOR:	22.35
FIELD OF VIEW (at 1000m):	120m
EYE RELIEF:	16mm
EXIT PUPIL:	5mm
ENTRANCE PUPIL:	50mm
WATERPROOF:	No
DIOPTRRE SETTING RANGE:	-5.0 +5.0
RANGE OF INTERPUPILLARY DISTANCE ADJUSTMENT:	57-73mm
DIMENSIONS:	approx. 19 x 17 x 6.3cm
NET WEIGHT:	approx. 810g (excluding accessories)
VERSION NO:	5
ISSUE DATE:	25th March, 2024

NOTE: All specifications are stated for the Binoculars using the standard accessories. These specifications are approximate and may change without notice.



signify®

Binoculars

Repair and Refurbished Goods or Parts Notice

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD
48B Egerton Street, Silverwater NSW 2128 Australia
1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)
service@unclebills.com.au www.signifyelectronics.com.au

AFTER SALES SUPPORT

 service@unclebills.com.au

20



1300 777 137

MODEL: EA2506

PRODUCT CODE: 716013 07/2024

1
YEAR
WARRANTY

NOTES

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA2506 PRODUCT CODE: 716013 07/2024 **21**

NOTES

AFTER SALES SUPPORT

 service@unclebills.com.au

NOTES

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA2506 PRODUCT CODE: 716013 07/2024 **23**



ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China
ALDI STORES, 1 SARGENTS ROAD
MINCHINBURY NSW 2770
www.aldi.com.au

AFTER SALES SUPPORT



1300 777 137



service@unclebills.com.au

MODEL: EA2506

PRODUCT CODE: 716013

07/2024

1

YEAR WARRANTY