

Signify[®]

**RECHARGEABLE VINTAGE
TURNTABLE**



Model Number: EA0000140



INSTRUCTION MANUAL

Welcome

Congratulations on choosing to buy a Signify® product.

All products brought to you by Signify® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty and customer technical support line.

This comprehensive instruction manual will provide you with a detailed guide on how to operate your product and will also assist you in troubleshooting any problems that you may encounter.

If you have any queries regarding the use of this product, please feel free to phone our technical support line for some friendly advice. If you are experiencing difficulties or believe that the product may have a technical fault, we will assist you in rectifying the issue. We can generally solve most problems simply and quickly over the phone, so please always phone us first!

We are sure that you will enjoy using this product and you can expect to gain years of service from this product when it is used and maintained in the correct manner.

Contents

Welcome	02
Warranty Details	04
General Information and Safety Instructions	05
Product Overview	08
Getting Started	10
Instructions	11
Frequently Asked Questions	19
Other Useful Information	20
Repair and Refurbished Goods or Parts Notice	23



Signify[®]

Rechargeable Vintage Turntable Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 (AU) 1300 777 137

 service@unclebills.com.au

MODEL: EA0000140 PRODUCT CODE: 717772 04/2026

1
YEAR
WARRANTY

General Information and Safety Instructions

RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Please keep this instruction manual in a safe place along with your purchase receipt, warranty card and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

1. Read all instructions before using the Turntable.
2. Never allow children to play with electrical equipment.
3. Do not use the Turntable for anything other than its intended use.
4. Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label.
5. Do not allow the Turntable or the USB-A to USB-C cable (supplied) to come into contact with water or any other liquid. Do not expose the Turntable to spills, drips or splashes from objects filled with liquids, such as vases.
6. The Turntable is not intended to be operated by means of an external timer or any type of separate remote control system.
7. The use of attachments not recommended or sold by the manufacturer is dangerous and may cause fire, electric shock or injury.
8. This Turntable is intended to be used indoors, for household use only. Do not use the Turntable outdoors.
9. Keep the Turntable and the USB-A to USB-C cable out of direct sunlight.
10. Do not use an extension cable while charging this Turntable unless completely necessary. If an extension cable is used, please ensure that it has a rating equal or exceeding the rating of the Turntable.
11. Do not pull or carry by the USB-A to USB-C cable, use the cable as a handle, close a door on the cable, or pull the cable around sharp edges or corners. Keep the USB-A to USB-C cable away from heated surfaces.
12. Do not bend or damage the USB-A to USB-C cable.
13. Always disconnect the USB-A to USB-C cable from the Turntable once it is fully charged.
14. The USB-A to USB-C cable must be removed from the Turntable before cleaning, servicing, or maintenance.
15. Only use a 5V 1A power source (not supplied) along with the supplied USB-A to USB-C cable to charge the Turntable.
16. The USB-A to USB-C cable (supplied) only fits in one way, so don't try to force it in the wrong way.
17. Never operate the Turntable with wet hands, submerge under water or spill liquids into the unit.
18. Always turn the Turntable off and disconnect from the power source before cleaning. Never use liquid cleaners, use a soft dry (or slightly damp) cloth to wipe over.
19. Do not place the Turntable near a hot burner (gas or electric), heat sources or open flames.
20. Improper installation may result in the risk of fire, electric shock and/or injury to persons.

General Information and Safety Instructions (cont.)

21. If the USB-A to USB-C cable is damaged, do not use it to charge the Turntable. Please contact the After Sales Support line for assistance.
22. Always ensure that the USB-A to USB-C cable is placed in a safe location to ensure that it cannot be stepped on or cannot pose as a tripping hazard. Do not place any items on or against the USB-A to USB-C cable.
23. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
24. The Turntable and the supplied USB-A to USB-C cable have no user serviceable parts contained within (except for the stylus). Do not attempt to repair, disassemble or modify the Turntable.

NOTE: See page 17 for further details on how to replace the stylus.

25. This Turntable is not intended for use by persons (including children and the elderly) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Turntable by a person responsible for their safety. Children should be supervised to ensure they do not play with the Turntable.
26. Ensure that all packaging that is included in the Turntable gift box are kept out of reach from children to avoid potential danger of suffocation.
27. Do not use the Turntable on an unstable surface.
28. Be extremely careful when unpacking or relocating the Turntable. Ensure that the Turntable is not dropped, bumped or have excessive force applied to it. Impacts such as these can damage the product and its internal components.
29. We recommend that, where possible, to avoid moving the unit unnecessarily once placed.
30. For the protection of the Turntable, we recommend that it is placed on a protected surface to prevent any damage.
31. If the Turntable has been exposed to strong fluctuations in temperature (for example, after transport), do not switch it on immediately. Moisture and condensation could damage the equipment. Do not switch on the equipment until it has reached room temperature.
32. The Turntable should always be repacked in its original packaging whenever transporting to prevent any possible damage to the device.

NOTE: This appliance contains batteries that are non-replaceable.

NOTE: The Turntable comes partially charged, but for maximum performance, we recommend charging it fully before first use.

NOTE: If the Turntable is not being used regularly, it is recommended to fully charge it every 3 months to prevent damage to the battery.

General Information and Safety Instructions (cont.)

WARNING! This product contains a rechargeable lithium battery. Never throw the appliance into a fire and do not subject it to high temperatures. There is a risk of explosion!

WARNING! Do not dispose of the battery in fire or a hot oven, or subject it to mechanical crushing or cutting. Doing so may cause an explosion.

WARNING! Do not leave the battery in an environment with extremely high temperatures, as this may cause an explosion or the leakage of flammable liquid or gas.

WARNING! Do not expose the battery to extremely low air pressure, as this may result in an explosion or the leakage of flammable liquid or gas.

CAUTION! Risk of fire or explosion if the battery is replaced with an incorrect type.



The Regulatory Compliance Mark (RCM) shows that a product is safe to supply to the Australian market.




Read this instruction manual carefully before using the Vintage Turntable and keep it in a safe place for future reference.



This product must only be supplied at safety extra low voltage 5V  1A.

Product Overview


Front View

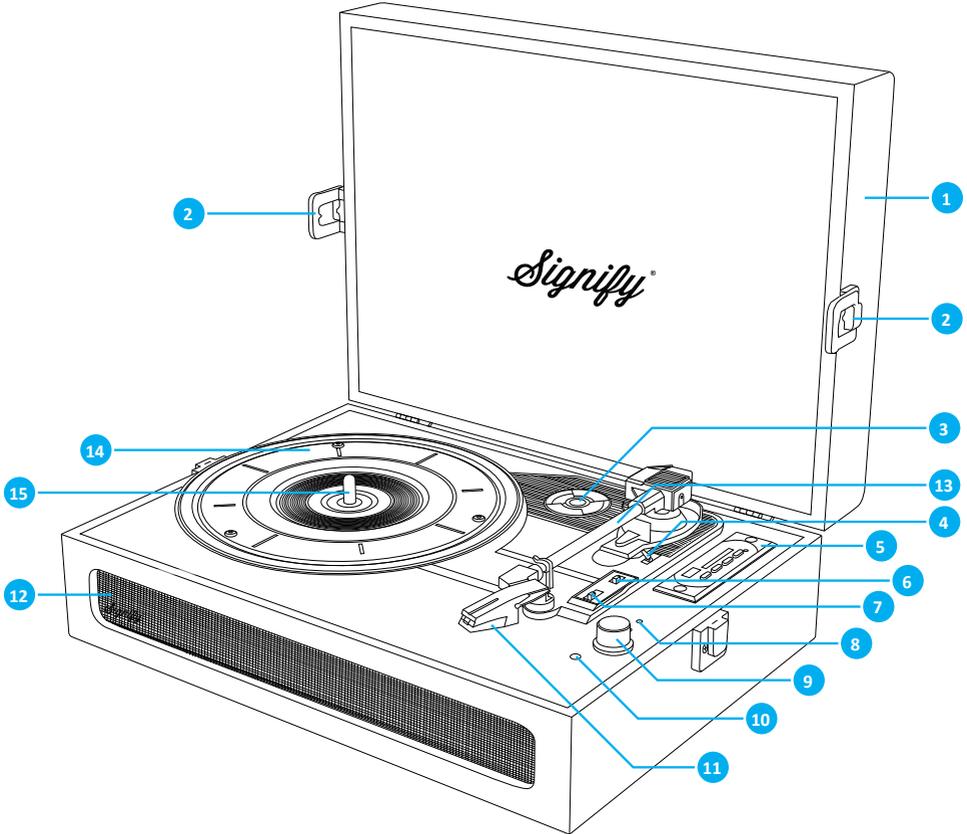

- | | |
|--|-----------------------|
| 1. Turntable Lid | 9. Power/Volume Dial |
| 2. Lock Latches | 10. Headphone Output |
| 3. 45 RPM Adaptor | 11. Stylus |
| 4. Cue Lever | 12. Speakers |
| 5. Front Control Panel | 13. Tone Arm |
| 6. AUTOSTOP ON/OFF Switch | 14. Turntable Platter |
| 7. Speed Selection Switch (33 ^{1/3} , 45, 78 RPM) | 15. Spindle |
| 8. Battery LED Indicator | |

Product Overview (cont.)

Front and Rear Control Panels

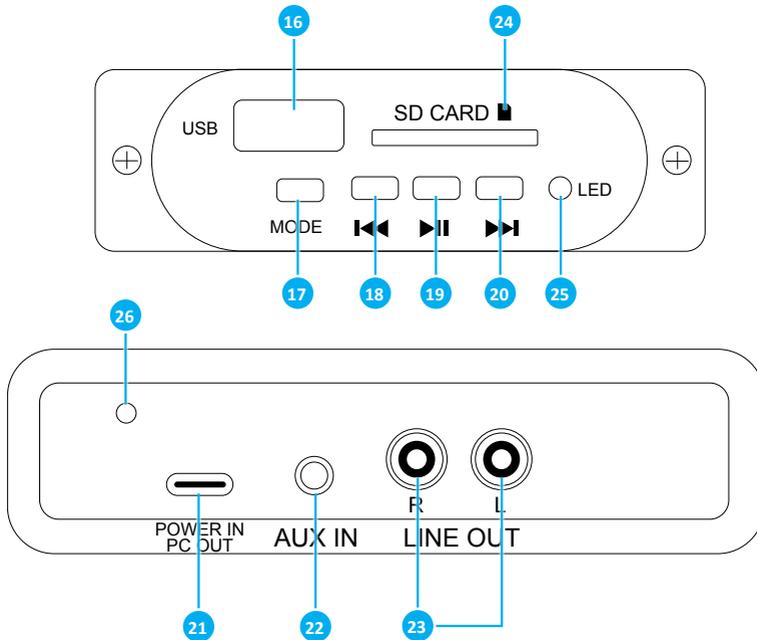

- 16. USB-C Input
- 17. MODE Button
- 18. ⏪ Button
- 19. ⏩ Button
- 20. ⏮ Button
- 21. Charging Port
- 22. AUX Input
- 23. RCA Audio Output
- 24. SD Card Input
- 25. LED Indicator Light
- 26. FM Antenna

Included (not pictured): USB-A to USB-C Cable, Instruction Manual, Warranty Certificate.

Getting Started

Before First Use

Prior to using your Turntable, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this device. We recommend you keep the original packaging for storing your Turntable when not in use.

Removing the Turntable Protective Packaging

1. Unlock the lock latches on the sides of the Turntable and lift the lid to reveal the turntable platter.
2. Peel off all the protective tape and remove the paper strip from the tone arm.
3. Remove the protective cover from the stylus. It is recommended to keep the protective cover on the stylus when the Turntable is not in use to protect it from dust and damage.

Charging your Turntable

Once all packaging has been removed, insert the USB-A end of the USB-A to USB-C cable into a 5V USB-A power source (not supplied).

Connect the USB-C end of the USB-A to USB-C cable to the USB-C Input (rear panel of the unit) and switch on at the power socket.

CAUTION: Do not overcharge the battery. While charging, the battery indicator will illuminate red. Once the indicator turns green, the battery is fully charged, and the Turntable is ready for use.

NOTE: It is recommended to charge the battery at a room temperature between 4°C and 30°C.

NOTE: Always switch off and unplug the Turntable from the power source when the Turntable isn't charging.

NOTE: The Turntable battery will take approximately 3.5 hours to fully charge before first use.

NOTE: The Turntable comes partially charged and must be fully charged before first use.

CAUTION: Do not place the Turntable in a location where it can easily fall while charging.

CAUTION: Only use a 5V 1A power source (not supplied) along with the supplied USB-A to USB-C cable to charge the Turntable.

NOTE: You can also charge the Turntable by connecting it to your PC with a compatible USB charging cable.

Instructions

Playback Modes

There are six playback options available for use in the Turntable - Turntable, USB, SD Card, FM Radio, Bluetooth® and AUX. Each playback mode is explained in the following pages allowing you to enjoy listening to your music from a wide variety of formats and sources.

Press the MODE button to scroll through the available playback modes, noting that some modes will not be selectable unless external media sources are connected (USB, SD card and AUX).

When an external source is connected such as a USB, SD card or AUX cable the Turntable will automatically select the relevant playback mode. If music on the USB drive or SD card is stored inside folders, the Turntable will not play it. To play music, ensure all audio files are saved directly on the USB drive or SD card and not inside any folders.

NOTE: If the tone arm is lifted from the tone arm rest and the turntable platter is rotating, the Turntable will automatically switch to Turntable mode, even if an external media source is connected.

Playback Controls

The below controls only apply to music playback through the USB drive and SD card formats.

Button	Function
⏮	Skip to previous track / rewind through track in progress
⏸	Play / pause or delete track
⏭	Skip to next track / fast forward through track in progress
MODE	Scroll through the available playback modes

Handling Vinyl Records

NOTE: Only handle vinyl records with clean hands and hold them by the edge or the label. Do not touch the record grooves.

- Keep your vinyl records in protective sleeves when not in use to avoid dust and scratches.
- Store vinyl records upright. Records stored horizontally may bend and warp.
- Avoid placing vinyl records in direct sunlight, close to any heat source (radiator, stoves etc.) or in a location that may be subject to vibration, excessive dust, heat, cold or moisture.
- To clean a vinyl record, gently wipe the surface in a circular motion using a soft anti-static cloth.

Instructions (cont.)

Playing Vinyl Records

To play a vinyl record, follow the steps below.

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.

IMPORTANT: Before playing a vinyl record, turn down the volume of the Turntable to avoid possible loud crackling noises. The crackling noises made by the stylus coming into contact with the vinyl record could damage the unit. Wait until the stylus is completely placed on the vinyl record and then turn up the volume.

2. Set the AUTOSTOP ON/OFF switch to the ON position. The unit will now be set to automatically stop after the completion of play of the vinyl record. If the AUTOSTOP ON/OFF switch is set to the OFF position, the unit will not stop automatically when the vinyl record is completed, and the turntable platter will constantly spin.

NOTE: While the turntable platter is spinning no other playback mode can be activated.

3. Choose the desired playing speed using the Speed Selection Switch. Select between 33, 45 and 78 RPM.

NOTE: When playing a 45 RPM record, use the included 45 RPM adaptor on the record spindle.

4. Carefully place the vinyl record on the turntable platter.
5. Unlock the tone arm lock by moving it up and away from the tone arm itself.
6. Raise the tone arm using the cue lever, or carefully with your hand.
7. Place the tone arm vertically over the first track or over the outer edge of the vinyl record. The turntable platter will start spinning if the AUTOSTOP ON/OFF switch is set to the ON position.
8. Lower the stylus onto the vinyl record using the cue lever.
9. Turn the **Power/Volume dial** clockwise to increase the volume or turn the **Power/Volume dial** anticlockwise to decrease the volume.
10. To stop playing, lift the tone arm using the cue lever or your hand and place it back into the tone arm rest.
11. Secure the tone arm once more by engaging the tone arm lock. Cover the stylus with the protective cover if needed.

NOTE: The Turntable features a recording function allowing for vinyl records to be recorded to USB drive or SD card. To start recording, when the vinyl record is playing, press and hold the MODE button for approximately 3 seconds

Playing a USB Drive/ SD Card

You can play digital music from a USB drive or SD card using the Turntable.

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.

NOTE: The tone arm must be in the tone arm rest, or the Turntable will automatically select the Turntable playback mode. Ensure that the AUTOSTOP ON/OFF switch is in the ON position.

Instructions (cont.)

IMPORTANT: Before playing music/media from a USB drive or SD card, turn down the volume of the Turntable to avoid a possible loud output from the speakers. Wait until the music/media is playing and then turn up the volume.

IMPORTANT: Before inserting a USB drive or SD card into the unit, ensure that the turntable platter is not spinning. While the turntable platter is spinning no other playback modes can be selected.

2. Insert a USB drive or SD card into USB input or SD card input.

NOTE: The SD card can only be inserted into the SD card slot in one direction, do not force the SD card into the SD card slot.

NOTE: If music on the USB drive or SD card is stored inside folders, the Turntable will not play it. To play music, ensure all audio files are saved directly on the USB drive or SD card and not inside any folders.

3. Any music loaded on the storage device will then begin to play automatically.
4. Use the playback controls to pause or skip forwards and backwards through the stored tracks. The playback controls can be seen on page 11 of the manual.
5. Once you have finished playback from a USB drive or SD card press the MODE button to scroll through the other available playback modes.

NOTE: Before removing the USB drive or SD card from the control panel, pause playback by short pressing the Play/Pause button once.

Using the Auxiliary Input

The Turntable features a 3.5mm AUX input which allows audio devices with a 3.5mm output such as CD players, Smartphones, Tablets or Computers to be played through the unit's inbuilt speakers. To use the AUX input, follow the steps below.

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.

NOTE: The tone arm must be in the tone arm rest, or the Turntable will automatically select the Turntable playback mode. Ensure that the AUTOSTOP ON/OFF switch is in the ON position.

IMPORTANT: Before playing music/media from the desired media device, turn down the volume of the Turntable to avoid a possible loud output from the speakers. Wait until the music/media is playing and then turn up the volume.

2. Connect one end of the AUX cable (not included) into the AUX input on the control panel of the Turntable.
3. Connect the other end of the AUX cable into the desired media device.
4. Use the media device (not the Turntable) to control playback.

NOTE: The volume can be controlled on both the connected media device and the Turntable itself.

Instructions (cont.)

Using the Bluetooth® Connection

The Turntable features a wireless Bluetooth® connection enabling music to be streamed directly from compatible devices such as Smartphones, Tablets or Computers. Before using the Bluetooth® connection, you must first pair your chosen device. Please follow the steps below to pair and use the Bluetooth® connection.

Pairing your Bluetooth® enabled device

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.

NOTE: The tone arm must be in the tone arm rest, or the Turntable will automatically select the Turntable playback mode. Ensure that the AUTOSTOP ON/OFF switch is in the ON position.

2. Press the MODE button to scroll through the available playback modes and select Bluetooth® playback mode. The LED indicator light will flash rapidly.
3. Switch on the Bluetooth® functionality on your device and scan for available connections. The Turntable will be shown in the available connections as EA0000140.
4. Select EA0000140 from the list. Depending on your device you may be prompted to enter a pass code. If requested enter the code '0000'.
5. Once your device is paired with the Turntable, you will hear a sound, and the indicator light will illuminate solid.

NOTE: When a previously paired device is found, it will automatically connect to the Turntable.

NOTE: The volume can be controlled on both the connected media device and the Turntable itself.

NOTE: Use playback controls on your connected device to navigate through your music selections.

Using your previously paired Bluetooth® enabled device

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.

NOTE: The tone arm must be in the tone arm rest, or the Turntable will automatically select the Turntable playback mode. Ensure that the AUTOSTOP ON/OFF switch is in the ON position.

2. Press the MODE button to scroll through the available playback modes and select Bluetooth® playback mode. The LED indicator light will flash rapidly.
3. Allow a few seconds for the Turntable to automatically connect to your previously paired Bluetooth® device.
4. Once your device is connected to the Turntable, you will hear a sound, and the indicator light will illuminate solid, and you can begin using your connected device.
5. To disconnect Bluetooth®, on your Bluetooth® device, select EA0000140 and choose 'Disconnect' or 'Forget This Device', or simply turn Bluetooth® OFF on the device.

Instructions (cont.)

NOTE: The Turntable can only connect to one Bluetooth® device at a time. To connect a new device, first disconnect or unpair the previously connected device.

Using the FM Radio

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.

NOTE: The tone arm must be in the tone arm rest, or the Turntable will automatically select the Turntable playback mode. Ensure that the AUTOSTOP ON/OFF switch is in the ON position.

IMPORTANT: Before playing music from the FM Radio, turn down the volume of the Turntable to avoid a possible loud output from the speakers. Wait until the music is playing and then turn up the volume.

2. Press the MODE button to scroll through the available playback modes and select FM Radio playback mode.
3. Fully uncoil the FM antenna found on the rear panel. Adjust the position of the antenna if required to acquire a clear signal.
4. Press and hold the **◀▶** or **▶▶** buttons for about two seconds for the Turntable to automatically search the FM radio stations.
5. Press and hold the **▶▶** for three seconds to search for and save radio stations automatically.

Using the Headphone Output

The Turntable features a 3.5mm headphone output. When headphones or external speakers with a 3.5mm connection are attached to the Turntable via the headphone output, all sound will be diverted to the headphones or external speakers, and no sound will be played via the inbuilt speakers. Ensure that the 3.5mm plug/jack is removed from the Turntable when required, to ensure that sound is played via the unit's inbuilt speakers once again.

NOTE: There will be no output from the inbuilt speakers while there is any connection present in the headphone output socket.

Using the RCA Audio Output

The Turntable features an RCA Audio Output located on the rear of the unit, which allows you to connect the Turntable to external speakers. To use the RCA Audio Output, follow the steps below.

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.
2. Plug the AV connections of the RCA cable (not included) into the RCA audio output.

NOTE: The red and white coloured AV connections should be connected to the matching red and white AV connection sockets.

Instructions (cont.)

3. Insert the other end/s of the RCA cable (not included) into the audio input of the external speakers.

Recording from the Turntable to USB Drive / Micro SD Card

The Turntable features a recording function allowing for vinyl records to be recorded to USB drive or SD card. To use the recording function, follow the steps below.

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.
2. Insert either a USB drive or SD card into the Control Panel.

NOTE: If there is any music already present on the storage device the Turntable will automatically select the relevant playback mode and begin playback automatically.

3. Prepare the Turntable and vinyl record for playback by following steps 1 through 7 starting on page 11. Do not lower the stylus at this point.

IMPORTANT: When the recording begins it will create a new track and retain the music already on the USB drive or SD card. Ensure there is adequate storage room for the length of your recording on the USB drive or SD card.

4. With the vinyl record spinning, press and hold the MODE button until the LED indicator light flashes.
5. Lower the stylus to the vinyl record using the cue lever. The audio output from the vinyl record will now be captured on either USB drive or SD card.
6. Once you have finished recording, lift the tone arm using the cue lever to stop the sound production.
7. Press and hold the MODE button once more until the LED indicator light stops flashing and the recording will immediately stop.

Deleting Music from USB Drive / Micro SD Card


You can manage the stored music on the USB drive and SD card directly from the Turntable. To clear the stored music from either a USB drive or SD card follow the steps below.

1. Turn the **Power/Volume dial** clockwise until you hear a 'click' sound.
2. Insert either a USB drive or SD card into the control panel. Playback will begin automatically.
3. Select the track you wish to delete. Wait for playback of the selected track to begin.
4. Once the track is playing press and hold the **▶▶** button until one beep is heard. The track that was playing has now been permanently deleted.
5. Repeat the above steps 3 through 4 until you have deleted the required tracks.


Instructions (cont.)

Replacing the Stylus


1. Unlock Tone Arm Lock by moving it up and away from the Tone Arm itself.

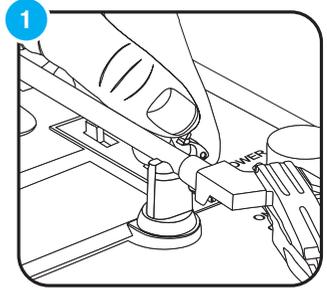


2. Remove the protective cover from the stylus cartridge to expose the needle.

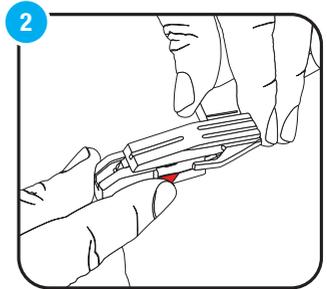

3. Separate the cartridge from the cartridge holder.

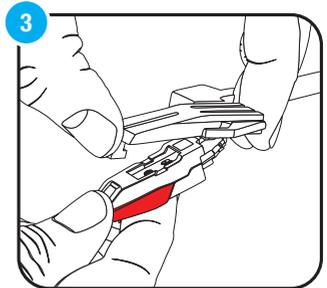

4. Gently pull the audio-lines from the cartridge, taking care to pull from the terminal connector and not the wire itself.

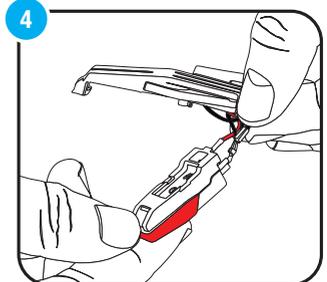


NOTE: Please exercise care whilst performing this operation so as to avoid damaging the Tone Arm and audio-lines.


NOTE: Please ensure the Turntable has been turned OFF and unplugged before attempting to replace the stylus.

Instructions (cont.)


5. Carefully insert the audio-lines into the new cartridge.

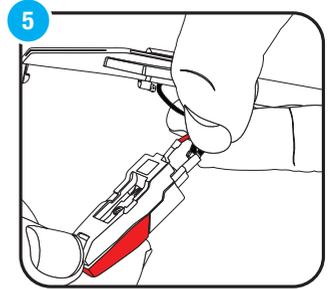


6. Make sure the audio-lines are not touching each other.

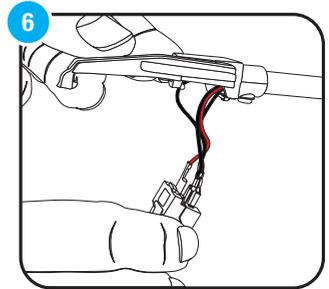

7. Carefully slide the cartridge into the cartridge holder.

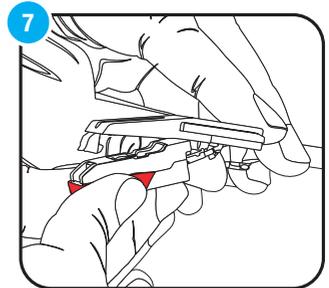

8. Gently clip the cartridge into the cartridge holder.

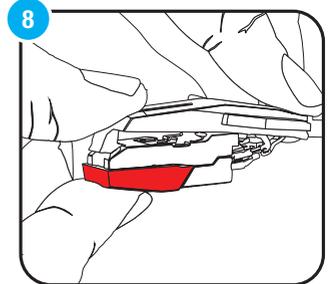

Frequently Asked Questions

Q: Why is the Turntable not powering on?

A: The Turntable doesn't have enough charge. Refer to the instructions on page 10 on how to charge your Turntable.

Q: Why is there no sound coming from the speakers?

A: Ensure there is no cable connected to the headphone input or the RCA audio output.

A: Check that the volume control is adjusted or that any connected digital devices have their volume adequately set.

Q: Why is the Turntable not spinning?

A: If the AUTOSTOP ON/OFF switch is set to the ON position the turntable platter will only spin once the tone arm has been moved from the tone arm rest.

Q: Why is the sound distorted when playing a vinyl record?

A: The stylus may be damaged. Remove and replace it with a new stylus (see page 17 for further details).

Q: Why can I not connect via Bluetooth®?

A: Check that your device has Bluetooth® switched on and that you are in range of the Turntable. Only one Bluetooth® connection can be made at any one time, so disconnect the other device first before pairing your new device (see page 14).

Other Useful Information

Cleaning and Maintenance

Before cleaning the Turntable, ensure the unit is switched off and disconnected from the power source.

The Turntable is likely only to require regular “dusting” to keep it clean. Use a standard duster, or dry soft microfibre cloth to remove the dust from the unit.

If the Turntable becomes soiled with anything other than dust on its exterior, clean the exterior of the unit by wiping over the surface with a slightly damp cloth and then polish with a soft dry cloth. Ensure that no moisture or liquid enters the Turntable, particularly around the control panel and dials.

Be careful when wiping over the Turntable, that you do not apply too much pressure, as there is a risk that you may break parts.

Do not use detergents or abrasive cleaners, and do not allow moisture, water or other liquid to enter the Turntable.

Storage

When the Turntable is not in use, disconnect it from the power source and store in a cool, dry and well ventilated location out of direct sunlight. Ensure that it is not subject to humidity.

Prolonged Storage

If you are not going to use the Turntable for an extended period, ensure the battery is at least half charged before storing, as prolonged storage of the Turntable with a flat or low battery may cause damage to the battery pack. During prolonged storage, we recommend that you use and recharge the Turntable at least every 3 months.

Other Useful Information (cont.)

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, email or DVD, please contact service@unclebills.com.au.

The Turntable has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 62368.1
AS/NZS 4268

Trademark

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by the manufacturer is under license. Other trademarks and trade names are those of their respective owners.

Specification Table

MODEL:	EA0000140
RECHARGEABLE BATTERY:	3.7V 1800mAh 6.66Wh (LI-ION)
POWER:	5W (MAX)
CHARGE THROUGH USB INPUT:	5V  1A
SPEAKERS:	2 X 5W STEREO SPEAKERS
RPM:	SUPPORTS PLAYBACK SPEEDS 33 1/3, 45, 78 RPM
RECORD SIZE SUPPORTED:	7" = 17.7CM 10" = 25.5CM SP 12" = 30CM LP
BLUETOOTH® VERSION:	BLUETOOTH® V5.4
DIMENSIONS:	17.7 x 25.5 x 30 CM
WEIGHT:	2.65KG
VERSION NO:	10
ISSUE DATE:	8 January, 2026

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT NOTICE.

Notes



Signify[®]

Rechargeable Vintage Turntable

Repair and Refurbished Goods or Parts Notice

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD
48B Egerton Street, Silverwater NSW 2128 Australia
1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)
service@unclebills.com.au www.signifyelectronics.com.au





ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China

ALDI STORES, 1 SARGENTS ROAD

MINCHINBURY NSW 2770

www.aldi.com.au

AFTER SALES SUPPORT



AU 1300 777 137



service@unclebills.com.au

MODEL: EA0000140

PRODUCT CODE: 717772

04/2026

1

YEAR WARRANTY