

Signify®

BLUETOOTH® SPEAKER WITH WHITE NOISE
WITH ALARM



Model Number: EA0000155

INSTRUCTION MANUAL



Welcome

Congratulations on choosing to buy a Signify® product.

All products brought to you by Signify® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty and customer technical support line.

This comprehensive instruction manual will provide you with a detailed guide on how to operate your product and will also assist you in troubleshooting any problems that you may encounter.

If you have any queries regarding the use of this product, please feel free to phone our technical support line for some friendly advice. If you are experiencing difficulties or believe that the product may have a technical fault, we will assist you in rectifying the issue. We can generally solve most problems simply and quickly over the phone, so please always phone us first!

We are sure that you will enjoy using this product and you can expect to gain years of service from this product when it is used and maintained in the correct manner.

Contents

Welcome	02
Warranty Details	04
General Information and Safety Instructions	05
Product Overview	09
Getting Started	12
Instructions	14
Frequently Asked Questions	25
Other Useful Information	26
Repair and Refurbished Goods or Parts Notice	29



Signify[®]

Bluetooth[®] Speaker with White Noise

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 (AU) 1300 777 137

04

 service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

1
YEAR
WARRANTY

General Information and Safety Instructions

RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock, and injury when followed correctly. Please keep this instruction manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

Electrical Safety and Cable Handling

1. Read all instructions before using the Speaker.
2. Do not pull or carry the Speaker by the USB-A to USB-C cable (supplied).
3. Check the USB-A to USB-C cable (supplied) regularly for visible damage. If it is damaged, please contact the After Sales Support for advice.
4. When the Speaker is not in use, switch it off and unplug from the 5V USB-A charging power source. Do not leave the product unattended when connected to power.
5. Do not attempt to open any part of the Speaker. This will void the warranty.
6. This product is not user-serviceable. Contact with high voltage components may cause a risk of electric shock. Do not attempt to repair, disassemble, or open any part of the Device.

General Information and Safety Instructions (cont.)

7. This Speaker is not intended for use by persons (including children and the elderly) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
8. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
9. Do not expose the Speaker to rain, moisture, liquids, or dust. Do not store or use the device anywhere near water, or where water drips and may come in contact with this product.
10. Unplug the Speaker during electrical storms to prevent damage from power surges.
11. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
12. Be extremely careful when unpacking or relocating the Speaker. Avoid dropping, bumping, or applying excessive force, as this may damage the device or the internal components.
13. The Speaker is not a toy. Supervise children to ensure they do not play with this product. Do not allow children to insert foreign objects into the USB-C port on the device.
14. Do not place objects filled with liquids, such as vases or jugs on or near the device.
15. Only charge the Speaker using the supplied USB-A to USB-C cable.
16. The Speaker is not intended to be operated by an external timer or separate remote control system.

General Information and Safety Instructions (cont.)

17. Do not expose the Speaker to microwaves.
18. Do not place the Speaker too close to ears, especially children, to avoid potential damage to the eardrums.
19. This Speaker is intended to be used indoors, for household use only and should not be used for any commercial purposes. If used outdoors, bring it inside after use.
20. Do not expose the device to excessive heat, direct sunlight, open flames, or other heat sources.
21. Never operate the Speaker with wet hands, submerge under water or spill liquids into or onto the device.
22. Before cleaning, servicing, maintenance, or moving the device, ensure it is switched off and disconnected from the 5V USB-A power source. Never use liquid or abrasive cleaners. See 'Cleaning and Maintenance' section on page 26 for details.
23. Do not place or store the Speaker near a hot burner (gas or electric), heat sources or near naked flame sources (such as candles, stoves, or BBQ's).
24. Always position and operate the Speaker on a dry, flat and stable surface. Avoid sinks or uneven surfaces.
25. Use the Speaker only for its intended purpose.
26. Do not use the Speaker if it has been dropped or damaged.
27. Do not cover the Speaker whilst in use.
28. The internal battery is not replaceable, do not attempt to replace it.

General Information and Safety Instructions (cont.)

Battery Safety

CAUTION! Disposal of a battery into fire or a hot oven, or mechanically crushing/cutting a battery, can result in an explosion.

CAUTION! Leaving a battery in an extremely high-temperature environment can cause an explosion or leakage of flammable liquid/gas.

CAUTION! A battery subjected to extremely low air pressure may result in an explosion or leakage of flammable liquid/gas.

WARNING: A battery should only be subjected to 0°C to 45°C during usage, storage, or transportation.



Read this instruction manual carefully before using the Bluetooth® Speaker with White Noise and keep it in a safe place for future reference.



The Regulatory Compliance Mark (RCM) shows that a product is safe to supply to the Australian market.

AFTER SALES SUPPORT


  1300 777 137

08

 service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

Product Overview

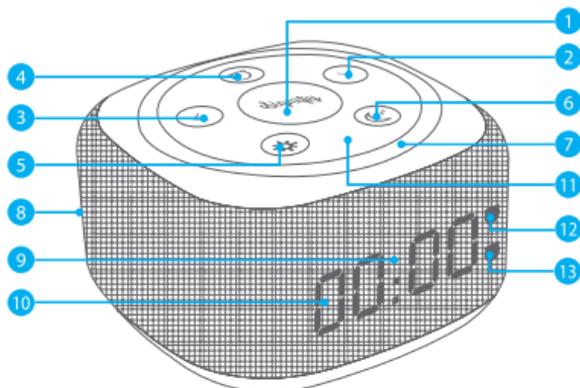

- | | |
|------------------------------------|--|
| 1. Power Button (Multi-functional) | 8. USB-C Charging Port (Located on the Back) |
| 2. Next/Increase Button | 9. Built-in Microphone |
| 3. Previous/Decrease Button | 10. Digital Display |
| 4. Clock/Alarm Button | 11. Status Indicator Light |
| 5. LED Light Button | 12. Alarm 1 Icon |
| 6. Mode Button | 13. Alarm 2 Icon |
| 7. LED Light | |

Included (not pictured): Instruction Manual, Warranty Certificate and USB-A to USB-C cable.

AFTER SALES SUPPORT

  1300 777 137

09

 service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

Product Overview (cont.)

Overview of the Buttons/ Digital Display and Functions

NOTE: The table below is a brief overview of the buttons and their functions. Please refer to the instructions starting on page 14 for further information.

Button / Display	Function
	<ul style="list-style-type: none">• Long press: Power On/Off.• Short press once: Play/pause music. Pick up/hang up phone call. Snooze alarm.• Short press twice (quick): Adjust the digital display brightness/turn off the display. Reject a call. Switch a call from the Speaker to your phone.
	<ul style="list-style-type: none">• Short press once: Previous white noise/track. Decrease hour/minute for clock/alarm setting.• Long press: Decrease volume (music/white noise).
	<ul style="list-style-type: none">• Short press once: Next white noise/track. Increase hour/minute for clock/alarm setting.• Long press: Increase volume (music/white noise).
	<ul style="list-style-type: none">• Short press: Cycle through alarm modes (Alarm 1 → Alarm 2 → Alarm 1 and 2 → Both off). Switch between hour (HH) and minute (MM) digits when adjusting the clock/alarm time.• Long press: Enter clock/alarm setting mode. Confirm final time selection.

NOTE: The alarm volume cannot be adjusted.

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

Product Overview (cont.)

Button / Display	Function
	<ul style="list-style-type: none">• Short press: Cycle through the LED light colour modes.• Long press: Turn the LED light On/Off.
	<ul style="list-style-type: none">• Short Press: Cycle between modes (Bluetooth® → White Noise → Power Saving Mode → PC).• Long press: To cycle through the 4 playback time options (15/30/60 and continuous play ("OFF")).
	<ul style="list-style-type: none">• Digital display shows the clock and alarm time in HH:MM format, Alarm 1/Alarm 2 status, volume level, sleep sound track number and sleep sound timer.• Alarm 1: Top alarm icon illuminates.• Alarm 2: Bottom alarm icon illuminates.
	<ul style="list-style-type: none">• Flashing Red: Battery energy is low.• Solid Red: Charging.• Flashing Blue: Bluetooth® pairing mode.• Solid Blue: Connected to Bluetooth®.

Getting Started

Before First Use

Prior to using your Speaker, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product. We recommend you keep the original packaging for storing the device when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Speaker is undamaged and in good working order. Protective wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.
2. Remove the paper strip which is securing the USB-A to USB-C cable. Uncoil the cable and straighten it to remove any kinks. Do not use the product if the USB-A to USB-C cable is damaged, please reach out to the After Sales Support for further advice.

Charging the Speaker

1. Connect the supplied USB-A to USB-C cable to the DC 5V USB-C charging port (located on the back of the device) and to a 5V USB-A power source (not supplied). Switch on the 5V USB-A power source. The charging indicator light will illuminate solid red while charging.
2. Once the Speaker is fully charged the indicator light will turn off.

NOTE: Once the device is fully charged, it is recommended to switch off the 5V USB-A power source (not supplied) and disconnect the USB-A to USB-C cable from both the power source and the device. This will help extend the life of the device's internal lithium rechargeable battery.

Getting Started (cont.)

NOTE: The device can operate while charging. If you are using a USB AC adaptor (not included) to charge, you may notice some noise interference in the audio output. This is not a product fault. It is recommended to wait until charging is complete before using the Speaker.

NOTE: Once the Speaker is fully charged the indicator light will turn off.

Instructions

Power On/Off

1. Place the device on a flat, stable surface. Ensure it is not subject to vibrations or movement.
2. It is recommended to fully charge the device before first use. See 'Charging the Speaker' on page 12.
3. Long press the  button to turn on the device.
4. Long press the  button again to turn off the device.

NOTE: The device may take up to 3 hours to fully charge. It will arrive partially charged, but for maximum operating time, it is recommended to fully charge the Speaker before first use.

NOTE: When the battery is low and requires charging, the indicator light will flash (red).

NOTE: You can charge your Speaker using any 5V USB-A power source, such as a power bank, computer, or car USB port. The supplied USB-A to USB-C cable fits only one way—do not force it.

NOTE: Once the Speaker is fully charged, it can be used portably.

Instructions (cont.)

Setting the Time (Manually)

1. Long press the  button to power on the device. The time will display in HH:MM format.
2. Long press the  button and the hour digits will flash on the digital display.
3. Short press the  or  buttons to increase or decrease the hour digits.
4. Once the desired hour is set and the hour digits are still flashing on the digital display, short press the  button again; the minute digits will begin to flash on the display.
5. Short press the  or  buttons to increase or decrease the minute digits.
6. Once the desired time is set, long press the  button to confirm.



NOTE: If no buttons are pressed for approximately 5 seconds, the digits will stop flashing, and the time setting mode will exit automatically.

Instructions (cont.)

Alarm Clock Modes

After powering on the device, short press the  button to cycle through the alarm options:

Alarm 1  08:00 → Alarm 2  08:00 → Alarm 1 and 2  08:00 → Time /No Alarm
 08:00 (both alarm icons will disappear from the clock display).



Alarm Clock Set Up

NOTE: You can set up to two alarms on your Speaker.

NOTE: The default time setting for both alarms is 08:00am.

1. After powering on the device, short press the  button until Alarm 1  appears on the display. Follow steps 2-6 from 'Setting the Time (Manually)' on page 15 to set the time for Alarm 1.

Instructions (cont.)

- Short press the  button until Alarm 2  appears on the display. Follow steps 2-6 from 'Setting the Time (Manually)' on page 15 to set the time for alarm 2.

Display	Function
08:00 	Alarm 1 is on and will sound at the set time.
08:00 	Alarm 2 is on and will sound at the set time.
08:00 	Both Alarm 1 and 2 are on and will sound at their set times.
08:00	No alarms are on.

NOTE: Ensure the alarm icon for the alarm you wish to sound is illuminated on the display. If the icon is not visible, that alarm will not sound.

Snooze Function

When the alarm sounds, short press the  button to snooze the alarm for approximately 3 minutes.

NOTE: To turn off the alarm, short press any other button.

NOTE: If the alarm isn't snoozed or turned off, it will continue to sound for approximately 15 minutes before turning off automatically.

Instructions (cont.)

NOTE: The alarm volume will gradually increase until it reaches the maximum level and will remain on until it is snoozed, turn off manually, or turns off automatically after approximately 15 minutes.

Mode Settings

Once powered on, short press the  button to cycle through the available modes. Refer to the table on page 11 for more information.

Bluetooth® Mode - When powered on, the default mode is Bluetooth® mode. Use this mode to connect the Speaker to your Bluetooth® enabled devices. When the Bluetooth® mode is selected the status indicator light will flash (blue).

White Noise Mode – In this mode, short press the  or  buttons to cycle through the 15 available sound options. There are 4 playback time options - 15/30/60 minutes and continuous play "OFF". Long press the  button for approximately 2 seconds, the current playback time will show on the display. Long press the  button each time to cycle through the options until your desired playback time shows on the display.

Power Saving Mode – In this mode, only the time and alarm icons are displayed. The LED light function will automatically turn off to conserve battery power.

PC Mode – This mode is only available when the Speaker is connected to a PC via the USB-A to USB-C cable (supplied). In this mode, you can edit or customise the white noise options on the device.

Instructions (cont.)



NOTE: The Speaker will automatically enter power saving mode when white noise playback has finished, or if no Bluetooth connection is made for approximately 10 minutes (when in Bluetooth® pairing mode).

Bluetooth® Mode

The Speaker features a Bluetooth® receiver, enabling it to connect wirelessly to compatible Bluetooth® devices such as smartphones and MP3 players. This mode also allows you to control tracks and volume directly from the Speaker. To pair the device with a compatible Bluetooth® device, follow the steps below:

1. Long press the  button to turn on the device.
2. The indicator light will flash (blue), indicating that the device is in pairing mode.

AFTER SALES SUPPORT

  1300 777 137


19

 service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

Instructions (cont.)

3. On your device, turn on Bluetooth® and search for nearby devices. When the device discovers 'EA0000155', select it to connect. This process usually takes a few seconds. No PIN or passcode is required.
4. Once the Speaker and your Bluetooth® device are connected, the indicator light will stop flashing and remain illuminated (solid blue). Your Bluetooth® device should display 'EA0000155' as connected.
5. Open your Bluetooth® device (e.g., smartphone or MP3 player) and stream the desired audio through the Speaker.

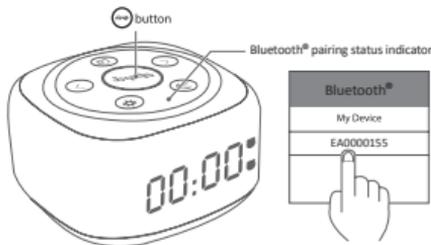

NOTE: Once the Speaker is connected to an iOS or Android device, the time displayed on the Speaker will automatically synchronise with the time on your phone. Sometimes, due to firmware updates or similar issues, this feature may not work. This is not a product fault.

Below are the functions you can control on your Bluetooth® device via the Speaker:

AFTER SALES SUPPORT

  1300 777 137

20

 service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

Instructions (cont.)

Button	Function/Action
	Short press to play; short press again to pause.
	Short press to skip to the next track; long press to increase volume.
	Short press to skip to the previous track; long press to decrease volume.

NOTE: When listening to audio via Bluetooth®, you may need to adjust the volume on both the Speaker and your Bluetooth® device to reach the desired level. Failure to do so may result in little or no sound. Always check both volume settings before use.

Disconnecting the Bluetooth® Enabled Device

To end the connection between your Bluetooth® device and the Speaker, follow one of the methods below:

- Short press the  button 3 times to disconnect.
- Short press the  button to switch to a different mode.
- Long press the  button to turn off the Speaker.
- On your Bluetooth® device, select 'EA0000155' and choose 'Disconnect' or 'Forget This Device'.
- Turn off Bluetooth® on your Bluetooth® device.

Instructions (cont.)

PC Mode (Customise White Noise Sounds)

There are 15 white noise sounds pre-programmed on the Speaker. You can also customise the white noise sounds by adding your own.

1. Power on the Speaker and your PC.
2. Attach the USB-A to USB-C cable (supplied) to the Speaker and your PC.
3. Short press the  button until "PC" shows on the display.
4. Open 'USB Drive (D:)' on your PC.
5. Add or remove the white noise sounds.
6. Once finished, select 'EJECT' to safely disconnect the Speaker from your PC.

NOTE: The Speaker only supports audio files in MP3 format.

NOTE: The recommended maximum length of the white noise track is 5 minutes. The track will repeat the length of playback time selected.

NOTE: The maximum memory capacity of the Speaker is 128MB.

WARNING: If you remove any of the pre-programmed white noise sounds – it is recommended to save them on your PC or another source in case you wish to re-instate the white noise sound later.

Instructions (cont.)

NOTE: The white noise sounds will cycle in the order they are saved in the Speaker's memory 'USB Drive (D:)'. The order cannot be changed; new files will be added to the end of the list. When files are deleted, or added, the tracks will play in the order they appear in the Speaker's memory.

Built-in Microphone

The Speaker features a built-in microphone so you can make and receive calls while your phone is connected to the Speaker via Bluetooth®.


Make a Call – when connected via Bluetooth®, simply make a call as you normally would; the audio will play through the Speaker.

Answer an Incoming Call – short press the  button once.

Reject an Incoming Call – short press the  button twice.

End a Call – short press the  button once.


Switch Call Audio from the Speaker to Your Phone – short press the  button twice.

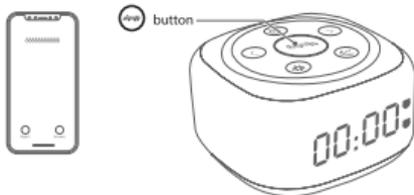

Instructions (cont.)

LED Light Modes

There are 8 LED light modes (7 different ambient LED lights and off). Once powered on, short press the ☀️ button to turn the LED light on. Then short press the ☀️ button again to cycle through the LED light modes (1-8). To turn the LED light on/off, long press the ☀️ button.

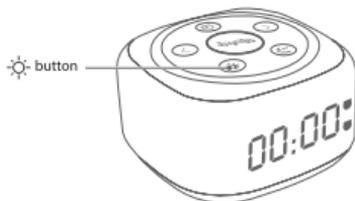

Adjusting the Display Brightness

The default brightness setting is 100%. Once powered on, short press the ☹️ button twice to adjust the brightness to 50%. Short press the ☹️ button twice again to turn the display off. Short press the ☹️ once more to return the brightness to 100%.



Frequently Asked Questions

Problem	Solution
Can I use another USB-A to USB-C cable instead of the one supplied?	Most standard USB-A to USB-C and USB-C to USB-C cables can be used (5V/1A or above). However, we recommend using only the USB-A to USB-C cable supplied with the device.
There is unusual noise or interrupted sound during playback.	Ensure the Speaker is within 10 metres of the connected Bluetooth® enabled device and that there are no obstructions between them.
The Speaker automatically enters power saving mode after power on without any operation.	If Bluetooth® pairing is not completed within 10 minutes of powering on, the device will automatically enter power saving mode to conserve battery power. This is not a product fault.
The device doesn't automatically reconnect to a previously paired Bluetooth® enabled device.	Check that another device isn't already connected. Remove the Speaker from your Bluetooth® device list, then pair it again.
The Speaker isn't powering on.	The battery may be too low. Charge the device using the supplied USB-A to USB-C cable.

Other Useful Information

Cleaning and Maintenance

1. Before cleaning the Speaker, always unplug the USB-A to USB-C cable from the charging port.
2. The Speaker requires regular dusting to keep it clean. Use a standard duster or a dry, soft microfibre cloth to remove the dust from the surface. Clean the device regularly to maintain its appearance and performance.

WARNING: Do not use detergents or abrasive cleaners, and do not allow moisture, water, or other liquid to enter the device.

Storage

- Before storing the Speaker, ensure it is clean and free of dust.
- We recommend storing the device in its original carton, along with the supplied USB-A to USB-C cable, to protect it from dust.
- Store the device in a clean, dry place, out of reach of children.
- Do not place heavy objects on top of the device during storage.

Prolonged Storage

- If the device will not be used for an extended period, ensure the battery is at least half charged before storing.
- Prolonged storage with a flat or low battery may damage the battery pack.
- During prolonged storage, it is recommended to use and recharge the device at least once every 3 months.

Other Useful Information (cont.)

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and are for compatibility purposes only. Other trademarks and trade names are those of their respective owners. These brands are not associated with this product and are not related to Uncle Bill's Australia Pty Ltd.

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, email, or DVD, please contact service@unclebills.com.au.

The Speaker has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 62368.1

AS/NZS 4268

AFTER SALES SUPPORT

  1300 777 137

27

 service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

Other Useful Information (cont.)

Specification Table

MODEL:	EA0000155
BATTERY CAPACITY:	3.7V / 1500mAh
BLUETOOTH® VERSION:	5.3
INPUT VOLTAGE:	5V  0.8A (charge through USB input)
DIMENSIONS:	10 x 10 x 5.6cm
NET WEIGHT:	280g (approximately) - excluding USB-A to USB-C cable
WARRANTY:	1 Year
VERSION NO:	16
ISSUE DATE:	19 December 2025

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.



Signify[®]

Bluetooth[®] Speaker with White Noise

Repair and Refurbished Goods or Parts Notice

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair. Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

48B Egerton Street, Silverwater NSW 2128 Australia

1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

service@unclebills.com.au

www.signifyelectronics.com.au

AFTER SALES SUPPORT

1300 777 137

29

service@unclebills.com.au

MODEL: EA0000155 SELLABLE ID: 719821 04/2026

1

YEAR
WARRANTY



ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China

ALDI STORES, 1 SARGENTS ROAD

MINCHINBURY NSW 2770

www.aldi.com.au

AFTER SALES SUPPORT



1300 777 137



service@unclebills.com.au

MODEL: EA0000155

SELLABLE ID: 719821

04/2026

1

YEAR WARRANTY