

Signify[®]

MINI BLUETOOTH[®] SPEAKER

WITH MAGNETIC CLIP



Read this instruction manual carefully before using the Mini Bluetooth[®] Speaker and keep it in a safe place for future reference.

Model Number: EA0000151

INSTRUCTION MANUAL



Contents

General Information and Safety Instructions	03
Product Overview	04
Operating Instructions	05
Other Useful Information	09
Frequently Asked Questions	11
Warranty Details	12
Repair and Refurbished Goods or Parts Notice	13

General Information and Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock, and injury when followed correctly. Please keep this instruction manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

 
 
Electrical Safety and Cable Handling

- Read all instructions before use. Use only as intended for indoor household use.
- Do not open, disassemble, repair, or modify the Speaker. No user-serviceable parts inside.
- Use only the supplied USB-A to USB-C charging cable and a 5V USB-A power source (not supplied). Do not use if cable or device is damaged.
- Do not pull, carry, or unplug the device by the cable.
- Do not use attachments not recommended by the manufacturer.
- Switch off and unplug when not in use, during storms, and before cleaning or moving. Do not leave unattended while connected to power.
- Keep away from water, rain, moisture, splashing, dripping liquids, dust, heat sources, direct sunlight, open flames, and microwaves.
- Do not operate with wet hands or immerse in water.
- Place on a stable, dry, flat surface. Do not cover during use or place heavy objects on it.
- Avoid dropping, impact, or excessive force. Do not use if damaged.
- Keep out of reach of children. Not a toy. Supervise use by children or persons with reduced capabilities.
- Do not insert objects into ports or place liquid-filled objects near the device.
- Do not place near ears at high volume, especially for children.
- The manufacturer is not responsible for damage caused by improper use.

Battery Safety

- Do not crush, cut, disassemble, or dispose of in fire or hot ovens. Do not expose to extreme temperatures or very low air pressure.
- Use, store, and transport between 0°C and 45°C.
- The battery is not replaceable.

Product Overview

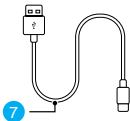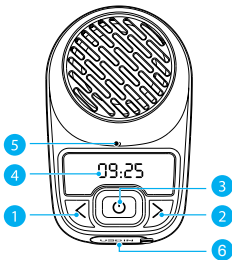

- | | |
|-------------------------------|--|
| 1. < Previous/Decrease Button | 5. Built-in Microphone |
| 2. > Next/Increase Button | 6. USB-C Charging Port (with Dust Cover) |
| 3. ⏻ Power On/Off/Mode Button | 7. USB-A to USB-C Charging Cable |
| 4. Digital Display | |

Included (not pictured): Instruction Manual and Warranty Certificate.

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

 
MODEL: EA0000151 SELLABLE ID: 750391 09/2026 **04**

Operating Instructions

Charge

Connect the USB-A to USB-C charging cable (supplied) to the Speaker's USB-C charging port and a 5V USB-A power source. ---- will cycle on the display while charging. Once ---- stops cycling, it is fully charged.

Low Battery Alert

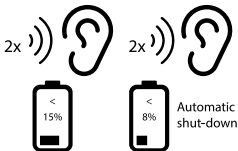

Snap-n-Go!

The Speaker has a removable magnet to enable you to "snap" the Speaker onto your clothing.

- Remove the magnet on the clip.
- Position the Speaker on your clothing.
- Place the magnet on the other side of the fabric to secure into place.

NOTE: If the material is too thick the magnet may not work.



Operating Instructions (cont.)

Power On/Off and Bluetooth® Mode

Button	Action
	Power On/Off: Long Press NOTE: Once on, 'bBLUE' will flash on the display. The Speaker is now in pairing mode.
	Connect: Select 'EA0000151' After approximately 5s the time will show on the display. NOTE: Time displayed will be the same as your connected smart device.
	Disconnect: Short Press x 4 NOTE: 'bBLUE' will continue to flash until powered off or paired to another device.

Audio Playback

Button	Action
	Play/Pause: Short Press x 1
	Increase Volume: Short Press NOTE: The maximum audio volume is 'U30'.
	Decrease Volume: Short Press
	Next Track: Long Press
	Previous Track: Long Press

Operating Instructions (cont.)

Call Function

Button	Action
	Answer Incoming Call/Disconnect Call: Short Press x 1
	Reject Incoming Call: Short Press x 2

Set the Time Manually

Button	Action
	Set the Time: Short Press x 3 The HH digits will flash.
	Select the Hour: Short Press To increase/decrease.
	Set the Minutes: Short Press x 1 The MM digits will flash.
	Select the Minutes: Short Press To increase/decrease.
	Confirm: Short Press x 1

Operating Instructions (cont.)

Voice Assistant

Button	Action
	Activate/Deactivate: Short Press x 2

Set Alarm1/Alarm2

Button	Action
	Access: Press and Hold Both Buttons for 3s 'AL01' will show on the display.
	Select Alarm 1 or Alarm 2: Short Press Cycle between 'AL01' and 'AL02'.
	Activate the Alarm: Short Press x 1 'on' or 'OFF' will show on the display depending on the last status of the alarm.
	Select the Alarm Status: Short Press Cycle between 'on' and 'OFF'. Select 'on'. Note: Refer to 'Setting the Time Manually' section for how to set the alarm time.
	Set the Alarm Volume: Short Press Note: The maximum alarm volume is 'U16'.

Other Useful Information

Cleaning and Maintenance

- Unplug the USB-A to USB-C charging cable before cleaning.
- Dust regularly with a dry, soft cloth.
- Do not use detergents or abrasives.
- Do not let moisture or liquids enter the device.

Storage

- Ensure the Speaker is clean before storing.
- Store in original carton with cable where possible.
- Keep in a clean, dry place, out of reach of children.
- Do not place heavy objects on top.

Prolonged Storage

- Charge battery to at least 50% before storing.
- Avoid storing with a low/flat battery.
- Recharge and use at least once every 3 months.

Restore Factory Settings

Button	Action
	Access: Press and Hold Both Buttons for >5s '0000' will flash briefly before returning to Bluetooth® pairing mode.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and are for compatibility purposes only. Other trademarks and trade names are those of their respective owners. These brands are not associated with this product and are not related to Uncle Bill's Australia Pty Ltd.

Other Useful Information (cont.)

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, email, or DVD, please contact service@unclebills.com.au.

The Speaker has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 62368.1
AS/NZS 4268

Specification Table

MODEL:	EA0000151
BATTERY CAPACITY:	3.7V / 600mAh
BLUETOOTH® VERSION:	5.3
INPUT VOLTAGE:	5V  0.3A (charge through USB input)
DIMENSIONS:	7 x 4.4 x 3.1 cm
NET WEIGHT:	56g (approximately) - excluding USB-A to USB-C charging cable
WARRANTY:	1 Year
VERSION NO:	8
ISSUE DATE:	15 May 2026

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

Frequently Asked Questions

Problem	Solution
Can I use another USB-A to USB-C cable instead of the one supplied?	Most standard USB-A to USB-C and USB-C to USB-C cables can be used (5V/1A or above). However, we recommend using only the USB-A to USB-C cable supplied with the device.
There is unusual noise or interrupted sound during playback.	Ensure the Speaker is within 10 metres of the connected Bluetooth® enabled device and that there are no obstructions between them.
The Speaker automatically enters power saving mode after power on without any operation.	If Bluetooth® pairing is not completed within 10 minutes of powering on, the device will automatically enter power saving mode to conserve battery power. This is not a product fault.
The device doesn't automatically reconnect to a previously paired Bluetooth® enabled device.	Check that another device isn't already connected. Remove the Speaker from your Bluetooth® device list, then pair it again.
The Speaker isn't powering on.	The battery may be too low. Charge the device using the supplied USB-A to USB-C cable.



Signify[®]

Mini Bluetooth[®] Speaker with Magnetic Clip

Warranty Details

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 777 137 MODEL: EA0000151  service@unclebills.com.au SELLABLE ID: 750391 09/2026





Signify®

Mini Bluetooth® Speaker with Magnetic Clip

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

48B Egerton Street, Silverwater NSW 1811 Australia

1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

service@unclebills.com.au

www.signifyelectronics.com.au

AFTER SALES SUPPORT

 **1300 777 137**

MODEL: EA0000151



service@unclebills.com.au

SELLABLE ID: 750391

09/2026

1

YEAR WARRANTY



ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China

**ALDI STORES, 1 SARGENTS ROAD
MINCHINBURY NSW 2770**

www.aldi.com.au

AFTER SALES SUPPORT



1300 777 137



service@unclebills.com.au

MODEL: EA0000151

SELLABLE ID: 750391

09/2026

1

YEAR WARRANTY