

*Signify*<sup>®</sup>

**BLUETOOTH<sup>®</sup>  
NECKBAND SPEAKER**



Model Number: EA0000152

**INSTRUCTION MANUAL**



# Welcome

Congratulations on choosing to buy a Signify® product.

All products brought to you by Signify® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty and customer technical support line.

This comprehensive instruction manual will provide you with a detailed guide on how to operate your product and will also assist you in troubleshooting any problems that you may encounter.

If you have any queries regarding the use of this product, please feel free to phone our technical support line for some friendly advice. If you are experiencing difficulties or believe that the product may have a technical fault, we will assist you in rectifying the issue. We can generally solve most problems simply and quickly over the phone, so please always phone us first!

We are sure that you will enjoy using this product and you can expect to gain years of service from this product when it is used and maintained in the correct manner.

# Contents

|                                              |    |
|----------------------------------------------|----|
| Welcome                                      | 02 |
| Warranty Details                             | 04 |
| General Information and Safety Instructions  | 05 |
| Product Overview                             | 07 |
| Overview of the Buttons and Functions        | 08 |
| Getting Started                              | 09 |
| Before First Use                             | 09 |
| Instructions                                 | 10 |
| Power On-Off                                 | 10 |
| Bluetooth® Mode                              | 10 |
| Disconnecting the Bluetooth® Enabled Device  | 11 |
| Built-in Microphone                          | 11 |
| Frequently Asked Questions                   | 12 |
| Other Useful Information                     | 13 |
| Cleaning and Maintenance                     | 13 |
| Storage                                      | 13 |
| Prolonged Storage                            | 13 |
| Trademarks                                   | 13 |
| Responsible Disposal                         | 14 |
| Specification Table                          | 14 |
| Repair and Refurbished Goods or Parts Notice | 15 |



*Signify®*

Bluetooth® Neckband Speaker

# Warranty Details

---

REGISTER YOUR PURCHASE AT [www.aldi.com.au/en/about-aldi/product-registration/](http://www.aldi.com.au/en/about-aldi/product-registration/)  
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

---

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

# General Information and Safety Instructions

## RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire; electric shock and injury when correctly adhere to. Please keep this instruction manual in a safe place along with your purchase receipt, warranty card and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

## Electrical Safety and Cable Handling

1. Read all instructions before using the Neckband Speaker.
2. Do not pull or carry the Neckband Speaker by the USB-A to USB-C cable (supplied).
3. Check the USB-A to USB-C cable (supplied) regularly for visible damage. If it is damaged, please contact the After Sales Support for advice.
4. When the Neckband Speaker is not in use, switch it off and unplug from the 5V USB-A charging power source (not included). Do not leave the product unattended when connected to power.
5. Do not attempt to open any part of the Neckband Speaker. This will void the warranty.
6. This product is not user-serviceable. Contact with high voltage components may cause a risk of electric shock. Do not attempt to repair, disassemble, or open any part of the device.
7. The Neckband Speaker is not intended for use by persons (including children and the elderly) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
8. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
9. Do not expose the Neckband Speaker to rain, moisture, liquids, or dust. Do not store or use the device anywhere near water, or where water drips and may come in contact with this product.
10. Unplug the Neckband Speaker during electrical storms to prevent damage from power surges.
11. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
12. Be extremely careful when unpacking or relocating the Neckband Speaker. Avoid dropping, bumping, or applying excessive force, as this may damage the device or the internal components.
13. The Neckband Speaker is not a toy. Supervise children to ensure they do not play with this product. Do not allow children to insert foreign objects into the USB-C port on the device.
14. Do not place objects filled with liquids, such as vases or jugs on or near the device.
15. Only charge the Neckband Speaker using the supplied USB-A to USB-C cable.
16. The Neckband Speaker is not intended to be operated by an external timer or separate remote control system.
17. Do not expose the Neckband Speaker to microwaves.

# General Information and Safety Instructions (cont.)

18. Do not place the Neckband Speaker too close to ears, especially children, to avoid potential damage to the eardrums.
19. This Neckband Speaker is intended to be used indoors, for household use only and should not be used for any commercial purposes. If used outdoors, bring it inside after use.
20. Do not expose the device to excessive heat, direct sunlight, open flames, or other heat sources.
21. Never operate the Neckband Speaker with wet hands, submerge underwater or spill liquids into or onto the device.
22. Before cleaning, servicing, maintenance, or moving the device, ensure it is switched off and disconnected from the 5V USB-A power source (not included). Never use liquid or abrasive cleaners. See 'Cleaning and Maintenance' section on page 13 for details.
23. Do not place or store the Neckband Speaker near a hot burner (gas or electric), heat sources or near naked flame sources (such as candles, stoves, or BBQ's).
24. Wear the Neckband Speaker securely around your neck during use. Keep the device dry and avoid using it near sinks or in areas where it may be exposed to water or excessive moisture.
25. Use the Neckband Speaker only for its intended purpose.
26. Do not use the Neckband Speaker if it has been dropped or damaged.
27. Do not cover the Neckband Speaker whilst in use.
28. The internal battery is not replaceable, do not attempt to replace it.

## Battery Safety

**CAUTION!** Disposal of a battery into fire or a hot oven, or mechanically crushing/cutting battery, can result in an explosion.

**CAUTION!** Leaving a battery in an extremely high-temperature environment can cause an explosion or leakage of flammable liquid/gas.

**CAUTION!** A battery subjected to extremely low air pressure may result in an explosion or leakage of flammable liquid/gas.

**WARNING:** A battery should only be subjected to 0°C to 45°C during usage, storage, or transportation.




Read this instruction manual carefully before using the Bluetooth® Neckband Speaker and keep it in a safe place for future reference.



The Regulatory Compliance Mark (RCM) shows that a product is safe to supply to the Australian market.

# Product Overview

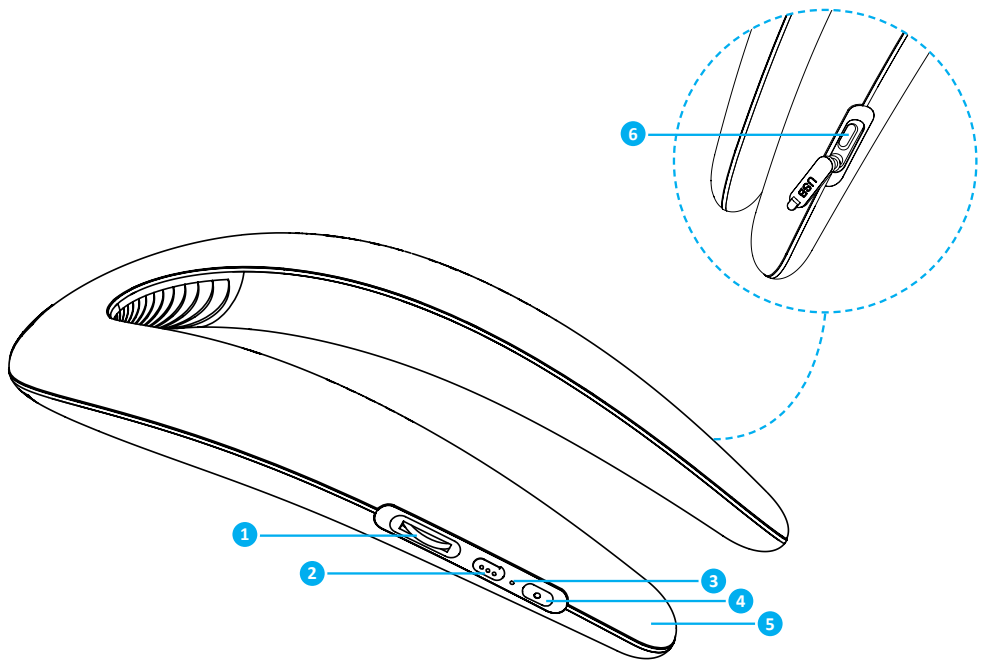

1. Volume Control Dial
2. Next/Back Button (Multi-functional)
3. Power/Charge Indicator Light
4. Power Button (Multi-functional)
5. Built-in Microphone
6. USB-C Charging Port (with Dust Cover)

**Included (not pictured):** USB-A to USB-C Charging Cable, Instruction Manual, Warranty Certificate.

# Product Overview (cont.)

## Overview of the Buttons and Functions

**NOTE:** The table below is a brief overview of the buttons and their functions. Please refer to the instructions starting on page 10 for further information.

| Button / Display                                                                  | Function                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"><li>• <b>Long press:</b> Power On/Off. To connect the Neckband Speaker to your smart device via Bluetooth*.</li><li>• <b>Short press once:</b> Play/pause music. Pick up/hang up phone call.</li><li>• <b>Short press twice (quick):</b> Reject a call. To change the EQ mode (Normal/ Bass/3D: in order to cycle through).</li></ul>               |
|  | <ul style="list-style-type: none"><li>• <b>Short press once:</b> To activate smart device voice assistants ("Siri" etc.).</li><li>• <b>Long press:</b> To disconnect from the smart Bluetooth* device (when the Neckband Speaker is on).</li><li>• <b>Short press twice:</b> To skip to next song.</li><li>• <b>Short press three times:</b> To skip back to previous song.</li></ul> |
|  | <ul style="list-style-type: none"><li>• <b>Slide Up (towards the back of the Neckband Speaker):</b> Volume Up.</li><li>• <b>Slide Down:</b> Volume Down.</li></ul>                                                                                                                                                                                                                    |

# Getting Started

## Before First Use

---

Prior to using your Neckband Speaker, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product. We recommend you keep the original packaging for storing the device when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Neckband Speaker is undamaged and in good working order. Protective wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.
2. Remove the USB-A to USB-C cable from the cardboard box, usually found in the middle of the packaging.
3. Remove the paper strip which is securing the USB-A to USB-C cable. Uncoil the cable and straighten it to remove any kinks. Do not use the product if the USB-A to USB-C cable is damaged, please reach out to the After Sales Support for further advice.

## Charging the Neckband Speaker

1. Connect the supplied USB-A to USB-C cable to the USB-C charging port (located on the side of the device) and to a 5V USB-A power source (not supplied). Switch on the 5V USB-A power source. The charging indicator light will illuminate solid red while charging.
2. Once the Neckband Speaker is fully charged the indicator light will turn off.

**NOTE:** Once the device is fully charged, it is recommended to switch off the 5V USB-A power source (not supplied) and disconnect the USB-A to USB-C cable from both the power source and the device. This will help extend the life of the device's internal lithium rechargeable battery.

**NOTE:** The device can operate while charging. If you are using a USB AC adaptor (not included) to charge, you may notice some noise interference in the audio output. This is not a product fault. It is recommended to wait until charging is complete before using the Neckband Speaker.

**NOTE:** Once the Neckband Speaker is fully charged the indicator light will turn off.

# Instructions

## Power On-Off

1. The Neckband Speaker can be powered on while worn securely around your neck or when placed on a dry, flat, and stable surface.
2. It is recommended to fully charge the device before first use.
3. Long press the  button to turn on the device.
4. Long press the  button again to turn off the device.

**NOTE:** The device may take up to 3 hours to fully charge. It will arrive partially charged, but for maximum operating time, it is recommended to fully charge the Neckband Speaker before first use.

**NOTE:** When the battery is low and requires charging, the indicator light will flash (red).

**NOTE:** You can charge your Neckband Speaker using any 5V USB-A power source, such as a power bank, computer, or car USB port. The supplied USB-A to USB-C cable fits only one way—do not force it.


**NOTE:** Once the Neckband Speaker is fully charged, it can be used portably.

**NOTE:** When the Neckband Speaker is in Bluetooth® connected mode and no music is playing, it will remain powered on until the battery runs out or it is manually turned off. When the Neckband Speaker is in Bluetooth® pairing mode and no Bluetooth® connection is established within approximately 10 minutes, it will automatically power off to reduce power consumption.

## Bluetooth® Mode

The Neckband Speaker features a Bluetooth® receiver, enabling it to connect wirelessly to compatible Bluetooth® devices such as smartphones and MP3 players. This mode also allows you to control tracks and volume directly from the Neckband Speaker. To pair the device with a compatible Bluetooth® device, follow the steps below:

1. Long press the  button to turn on the device.
2. The indicator light will flash (blue), indicating that the device is in pairing mode.
3. On your device, turn on Bluetooth® and search for nearby devices. When the device discovers 'EA0000152', select it to connect. This process usually takes a few seconds. No PIN or passcode is required.
4. Once the Neckband Speaker and your Bluetooth® device are connected, the indicator light will stop flashing and remain illuminated (solid blue). Your Bluetooth® device should display 'EA0000152' as connected.
5. Open your Bluetooth® device (e.g., smartphone or MP3 player) and stream the desired audio through the Neckband Speaker.

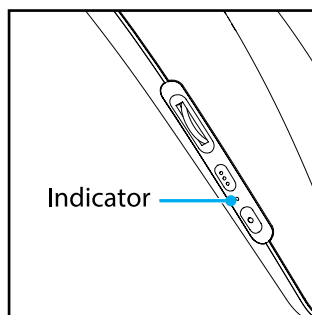

# Instructions (cont.)

Below are the functions you can control on your Bluetooth® device via the Neckband Speaker.

| Button                                                                            | Function/Action                                                                       |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  | Short press to play, short press again to pause.                                      |
|  | Short press twice to change the EQ mode (Normal/Bass/3D: in order, to cycle through). |
|  | Short press once to activate smart device voice assistant ("Siri").                   |
|  | Short press twice to skip to next track.                                              |
|  | Short press three times to skip back to previous track.                               |
|   | Slide up (towards the back of the Neckband Speaker) to increase the volume.           |
|   | Slide down to decrease the volume.                                                    |

## Disconnecting the Bluetooth® Enabled Device

To end the connection between your Bluetooth® device and the Neckband Speaker, follow the method below:

- Long press the  button on the Neckband Speaker to end the connection.
- On your Bluetooth® device, select ‘EA0000152’ and choose ‘Disconnect’ or ‘Forget This Device’.
- Turn off Bluetooth® on your Bluetooth® device.

## Built-in Microphone

The Neckband Speaker features a built-in microphone so you can make and receive calls while your phone is connected to the Neckband Speaker via Bluetooth®.

**Make a Call** – when connected via Bluetooth®, simply make a call as you normally would; the audio will play through the Neckband Speaker.

**Answer an Incoming Call** – short press the  button once.

**Reject an Incoming Call** – short press the  button twice.

**End a Call** – short press the  button once.

# Frequently Asked Questions

| Problem                                                                                      | Solution                                                                                                                                                                                                                                           |
|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Can I use another USB-A to USB-C cable instead of the one supplied?                          | Most standard USB-A to USB-C and USB-C to USB-C cables can be used (5V/1A or above). However, we recommend using only the USB-A to USB-C cable supplied with the device.                                                                           |
| There is unusual noise or interrupted sound during playback.                                 | Ensure the Neckband Speaker is within 10 metres of the connected Bluetooth® enabled device and that there are no obstructions between them.                                                                                                        |
| Neckband Speaker is not connecting.                                                          | Ensure that the devices are close to each other. When the Neckband Speaker is in Bluetooth® pairing mode and no Bluetooth® connection is established within approximately 10 minutes, it will automatically power off to reduce power consumption. |
| The device doesn't automatically reconnect to a previously paired Bluetooth® enabled device. | Check that another device isn't already connected. Remove the Neckband Speaker from your Bluetooth® device list, then pair it again.                                                                                                               |
| The indicator light is flashing red. The battery is too low. Charge the device using         | The battery is too low. Charge the device using the supplied USB-A to USB-C cable.                                                                                                                                                                 |
| The Neckband Speaker isn't powering on.                                                      | The battery may be too low. Charge the device using the supplied USB-A to USB-C cable.                                                                                                                                                             |

# Other Useful Information

## Cleaning and Maintenance

---

1. Before cleaning the Neckband Speaker, always unplug the USB-A to USB-C cable from the charging port.
2. The Neckband Speaker requires regular dusting to keep it clean. Use a standard duster or a dry, soft microfibre cloth to remove the dust from the surface. Clean the device regularly to maintain its appearance and performance.

**WARNING:** Do not use detergents or abrasive cleaners, and do not allow moisture, water, or other liquid to enter the device.

## Storage

---

- Before storing the Neckband Speaker, ensure it is clean and free of dust.
- We recommend storing the device in its original carton, along with the supplied USB-A to USB-C cable, to protect it from dust.
- Store the device in a clean, dry place, out of reach of children.
- Do not place heavy objects on top of the device during storage.

## Prolonged Storage

---

- If the device will not be used for an extended period, ensure the battery is at least half charged before storing.
- Prolonged storage with a flat or low battery may damage the battery pack.
- During prolonged storage, it is recommended to use and recharge the device at least once every 3 months.

## Trademarks

---

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and are for compatibility purposes only. Other trademarks and trade names are those of their respective owners. These brands are not associated with this product and are not related to Uncle Bill's Australia Pty Ltd.

# Other Useful Information (cont.)

## Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, email, or DVD, please contact [service@unclebills.com.au](mailto:service@unclebills.com.au).

The Neckband Speaker has been fully tested and meets all requirements as set out by the below testing standards:

- AS/NZS 62368.1
- AS/NZS 4268
- AS/NZS CISPR 32
- AS/NZS 2772.2

## Specification Table

|                     |                                                                                                                        |
|---------------------|------------------------------------------------------------------------------------------------------------------------|
| MODEL:              | EA0000152                                                                                                              |
| BATTERY CAPACITY:   | 3.7V  900mAh                          |
| BLUETOOTH® VERSION: | 5.0                                                                                                                    |
| INPUT VOLTAGE:      | 5V  0.5A (charge through USB-C input) |
| DIMENSIONS:         | 243 x 204 x 43 mm                                                                                                      |
| NET WEIGHT:         | 300g (approximately) - excluding USB-A to USB-C cable                                                                  |
| WARRANTY:           | 1 Year                                                                                                                 |
| VERSION NO:         | 5                                                                                                                      |
| ISSUE DATE:         | 30 June, 2026                                                                                                          |

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.



*Signify®*

Bluetooth® Neckband Speaker

# Repair and Refurbished Goods or Parts Notice

---

REGISTER YOUR PURCHASE AT [www.aldi.com.au/en/about-aldi/product-registration/](http://www.aldi.com.au/en/about-aldi/product-registration/)  
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

**We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

48B Egerton Street, Silverwater NSW 2128 Australia

1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

[service@unclebills.com.au](mailto:service@unclebills.com.au)

[www.signifyelectronics.com.au](http://www.signifyelectronics.com.au)

---

AFTER SALES SUPPORT

1300 777 137

[service@unclebills.com.au](mailto:service@unclebills.com.au)

MODEL: EA0000152 SELLABLE ID: 758863 10/2026





ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



**Made in China**

**ALDI STORES, 1 SARGENTS ROAD**

**MINCHINBURY NSW 2770**

**[www.aldi.com.au](http://www.aldi.com.au)**

#### **AFTER SALES SUPPORT**



**1300 777 137**



**[service@unclebills.com.au](mailto:service@unclebills.com.au)**

**MODEL: EA0000152**

**SELLABLE ID: 758863**

**10/2026**

**1**

**YEAR WARRANTY**