

Signify®

PORTABLE BLUETOOTH® SPEAKER

WITH TWS FUNCTION



Read this instruction manual carefully before using the Portable Bluetooth® Speaker and keep it in a safe place for future reference.

Model Number: EA0000154

INSTRUCTION MANUAL



Contents

Warranty Details	03
General Information and Safety Instructions	04
Product Overview	06
Getting Started	07
Operating Instructions	08
Other Useful Information	11
Cleaning & Maintenance	11
Storage	11
Prolonged Storage	11
Trademarks	11
Frequently Asked Questions	13
Repair and Refurbished Goods or Parts Notice	14



Signify®

Portable Bluetooth® Speaker With TWS Function

Warranty Details

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

1300 777 137

service@unclebills.com.au

MODEL: EA0000154 SELLABLE ID: 750391 09/2026



03

General Information and Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock, and injury when followed correctly. Please keep this instruction manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

Electrical Safety and Cable Handling


- Read all instructions before use. Use only as intended for indoor household use.
- Do not open, disassemble, repair, or modify the Speaker. No user-serviceable parts inside.
- Use only the supplied USB-A to USB-C charging cable and a 5V USB-A power source (not supplied). Do not use if cable or device is damaged.
- Do not pull, carry, or unplug the device by the cable.
- Do not use attachments not recommended by the manufacturer.
- Switch off and unplug when not in use, during storms, and before cleaning or moving. Do not leave unattended while connected to power.
- Keep away from water, rain, moisture, splashing, dripping liquids, dust, heat sources, direct sunlight, open flames, and microwaves.
- Do not operate with wet hands or immerse in water.
- Place on a stable, dry, flat surface. Do not cover during use or place heavy objects on it.
- Avoid dropping, impact, or excessive force. Do not use if damaged.
- Keep out of reach of children. Not a toy. Supervise use by children or persons with reduced capabilities.
- Do not insert objects into ports or place liquid-filled objects near the device.
- Do not place near ears at high volume, especially for children.
- The manufacturer is not responsible for damage caused by improper use.

General Information and Safety Instructions (cont.)

Battery Safety

- Do not dispose of a battery in fire or a hot oven, or mechanically crush or cut the battery, as this may result in an explosion.
- Do not leave a battery in an extremely high temperature surrounding environment, as this can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Use, store, and transport between 0°C and 45°C.
- The battery is not replaceable.

Product Overview

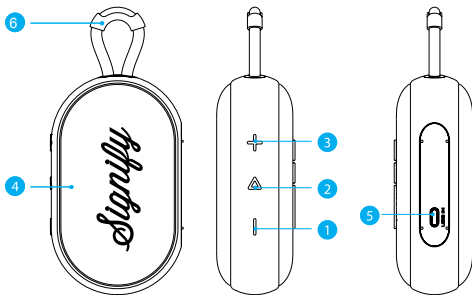

- 1. — Button (Decrease Volume / Previous Track)
- 2. ► Button (Play / Pause / TWS Function)
- 3. + Button (Increase Volume / Next Track)
- 4. Indicator Light
- 5. Type-C Charging Port
- 6. Carry Loop

Indicator Light Status

Bluetooth® Pairing Mode	Flashing Blue
Bluetooth® Connected	Solid Blue
Charging	Solid Red
Low Battery Alert	Flashing Red
Fully Charged	OFF (no light)

Included (not pictured): Instruction Manual, Warranty Certificate and USB-A to USB-C Charging Cable.

Getting Started

Before First Use

Prior to using your Speaker, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product. We recommend you keep the original packaging for storing the device when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Speaker is undamaged and in good working order. Protective wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.
2. Remove the paper strip which is securing the USB-A to USB-C cable. Uncoil the cable and straighten it to remove any kinks. Do not use the product if the USB-A to USB-C cable is damaged, please reach out to the After Sales Support for further advice.

Charging the Speaker

1. Connect the supplied USB-A to USB-C cable to the DC 5V USB-C charging port (located on the bottom of the device) and to a 5V USB-A power source (not supplied). Switch on the 5V USB-A power source. The charging indicator light will illuminate solid red while charging.
2. Once the Speaker is fully charged the indicator light will turn off.

NOTE: Once the device is fully charged, it is recommended to switch off the 5V USB-A power source (not supplied) and disconnect the USB-A to USB-C cable from both the power source and the device. This will help extend the life of the device's internal lithium rechargeable battery.

NOTE: The device can operate while charging. If you are using a USB AC adaptor (not included) to charge, you may notice some noise interference in the audio output. This is not a product fault. It is recommended to wait until charging is complete before using the Speaker.

NOTE: Once the Speaker is fully charged the indicator light will turn off.

NOTE: The device may take up to 4 hours to fully charge. It will arrive partially charged, but for maximum operating time, it is recommended to fully charge the Speaker before first use.

NOTE: When the battery is low and requires charging, the indicator light will flash (red).

NOTE: You can charge your Speaker using any 5V USB-A power source, such as a power bank, computer, or car USB port. The supplied USB-A to USB-C cable fits only one way—do not force it.

NOTE: Once the Speaker is fully charged, it can be used portably.

Operating Instructions

Power Saving

If no devices are connected via Bluetooth® to the Speaker, it will automatically power off after approximately 10 minutes.

Power On/Off and Bluetooth® Mode

Once powered on the Speaker automatically enters Bluetooth® pairing mode and the indicator light will flash blue.

Power On/Off: Long press the ► button.

Connect Bluetooth®: Select 'EA0000154' on your Bluetooth® enabled device. The Speaker will make an audio prompt when connected and the indicator light will be solid blue.



Disconnect Bluetooth®: Short press the ► button 3 times.

NOTE: Once disconnected the Speaker will make an audio prompt and revert to Bluetooth® pairing mode and the indicator light will flash blue until it is paired again, powered off or automatically shuts down (after approximately 10 minutes).

NOTE: You can also disconnect the Bluetooth® connection on your Bluetooth® enabled device, select 'EA0000154' and choose 'Disconnect' or 'Forget This Device'. Alternatively, Turn off Bluetooth® on your Bluetooth® enabled device.

Audio Playback

Once Bluetooth® is connected, you can stream music from your Bluetooth® enabled device to the Speaker.

Play/Pause: Short press the ► button.

Increase the Volume: Short press the + button.

Decrease the Volume: Short press the — button.

Next Track: Long press the + button.

Previous Track: Long press the — button.

Operating Instructions (cont.)

Call Function

The Speaker features a built-in microphone so you can make and receive calls while your Bluetooth® enabled device is connected to the Speaker via Bluetooth®.

Make a Call: When connected via Bluetooth®, simply make a call as you normally would; the audio will play through the Speaker.

Answer Incoming Call: Short press the ► button once.

Reject Incoming Call: Short press the ► button twice.

Transfer Call from the Speaker to Your Phone: Short press the ► button twice.

Disconnect Call: Short press the ► button once.

TWS Function (Pairing 2 Speakers)


How to pair two speakers using TWS:

1. Power on each Speaker. Make sure both are powered on and in Bluetooth® pairing mode (flashing blue light).
2. To activate TWS pairing, on one Speaker short press the ► button twice.
3. You should hear an audio prompt confirming pairing.
 - One speaker becomes the main speaker → flashing blue light
 - The other becomes the secondary speaker → solid blue light
4. Connect your phone - go to your phone's Bluetooth® settings and connect to the main speaker.
5. Play music - audio will now play through both speakers in stereo.

Operating Instructions (cont.)

Quick tips if it doesn't work:

- Make sure both speakers are the same model and support TWS
- Keep them close together during pairing
- Disconnect from your phone before starting TWS pairing
- If it fails, turn both speakers off and try again

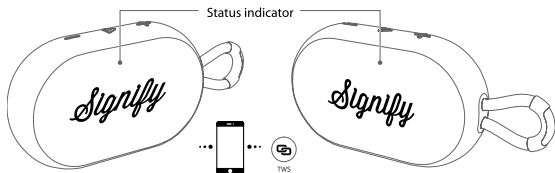

Other Useful Information

Cleaning & Maintenance

- Unplug the USB-A to USB-C cable before cleaning.
- Dust regularly with a dry, soft cloth.
- Do not use detergents or abrasives.
- Do not let moisture or liquids enter the device.

Storage

- Ensure the Speaker is clean before storing.
- Store in original carton with cable where possible.
- Keep in a clean, dry place, out of reach of children.
- Do not place heavy objects on top.

Prolonged Storage

- Charge battery to at least 50% before storing.
- Avoid storing with a low/flat battery.
- Recharge and use at least once every 3 months.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and are for compatibility purposes only. Other trademarks and trade names are those of their respective owners. These brands are not associated with this product and are not related to Uncle Bill's Australia Pty Ltd.

Other Useful Information (cont.)

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, email, or DVD, please contact service@unclebills.com.au.

The Speaker has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 62368.1

AS/NZS 4268

Specification Table

MODEL:	EA0000154
BATTERY CAPACITY:	3.7V / 1500mAh
BLUETOOTH® VERSION:	5.3
INPUT VOLTAGE:	5V  0.8A (charge through USB input)
DIMENSIONS:	12.2 x 4.2 x 7.3 cm
NET WEIGHT:	204g (approximately) - excluding USB-A to USB-C cable
WARRANTY:	1 Year
VERSION NO:	10
ISSUE DATE:	15 May 2026

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

Frequently Asked Questions

Problem	Solution
Can I use another USB-A to USB-C cable instead of the one supplied?	Most standard USB-A to USB-C and USB-C to USB-C cables can be used (5V/1A or above). However, we recommend using only the USB-A to USB-C cable supplied with the device.
There is unusual noise or interrupted sound during playback.	Ensure the Speaker is within 10 metres of the connected Bluetooth® enabled device and that there are no obstructions between them.
The Speaker automatically enters power saving mode after power on without any operation.	If Bluetooth® pairing is not completed within 10 minutes of powering on, the device will automatically enter power saving mode to conserve battery power. This is not a product fault.
The device doesn't automatically reconnect to a previously paired Bluetooth® enabled device.	Check that another device isn't already connected. Remove the Speaker from your Bluetooth® device list, then pair it again.
The Speaker isn't powering on.	The battery may be too low. Charge the device using the supplied USB-A to USB-C cable.



Signify®

Portable Bluetooth® Speaker With TWS Function Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

48B Egerton Street, Silverwater NSW 1811 Australia

1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

service@unclebills.com.au

www.signifyelectronics.com.au

AFTER SALES SUPPORT

 service@unclebills.com.au

14   1300 777 137

MODEL: EA0000154 SELLABLE ID: 750391 09/2026

1

YEAR WARRANTY

Notes



ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China
ALDI STORES, 1 SARGENTS ROAD
MINCHINBURY NSW 2770

www.aldi.com.au

AFTER SALES SUPPORT



1300 777 137



service@unclebills.com.au

MODEL: EA0000154

SELLABLE ID: 750391

09/2026

1

YEAR WARRANTY