 


Signify[®]

BLUETOOTH[®] SOUND TUBE SPEAKER

WITH TWS FUNCTION

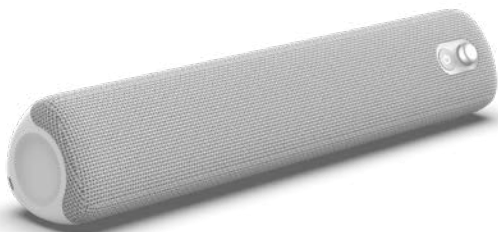

Model Number: EA0000157

INSTRUCTION MANUAL





Signify®

Bluetooth® Sound Tube Speaker with TWS Function

Warranty Details

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

1300 777 137

service@unclebills.com.au

MODEL: EA0000157 SELLABLE ID: 758863 10/2026

1

**YEAR
WARRANTY**

General Information and Safety Instructions

RETAIN FOR FUTURE USE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock, and injury when followed correctly. Please keep this instruction manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions on to the next owner of the product. Always follow basic safety precautions and accident prevention measures when using an electrical product.

Electrical Safety and Cable Handling

1. Read all instructions before using the Speaker.
2. Do not pull or carry the Speaker by the USB-A to USB-C cable (supplied).
3. Check the USB-A to USB-C cable (supplied) regularly for visible damage. If it is damaged, please contact the After Sales Support for advice.
4. When the Speaker is not in use, switch it off and unplug from the 5V USB-A charging power source (not supplied). Do not leave the product unattended when connected to power.
5. Do not attempt to open any part of the Speaker. This will void the warranty.
6. This product is not user-serviceable. Contact with high voltage components may cause a risk of electric shock. Do not attempt to repair, disassemble, or open any part of the device.
7. This Speaker is not intended for use by persons (including children and the elderly) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
8. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
9. Do not expose the Speaker to rain, moisture, liquids, or dust. Do not store or use the device anywhere near water, or where water drips and may come in contact with this product.
10. Unplug the Speaker during electrical storms to prevent damage from power surges.
11. The manufacturer and retailer are not responsible for any eventual damages caused by improper or faulty use.
12. Be extremely careful when unpacking or relocating the Speaker. Avoid dropping, bumping, or applying excessive force, as this may damage the device or the internal components.
13. The Speaker is not a toy. Supervise children to ensure they do not play with this product. Do not allow children to insert foreign objects into the USB-C port on the device.
14. Do not place objects filled with liquids, such as vases or jugs on or near the device.
15. Only charge the Speaker using the supplied USB-A to USB-C cable.
16. The Speaker is not intended to be operated by an external timer or separate remote control system.
17. Do not expose the Speaker to microwaves.
18. Do not place the Speaker too close to ears, especially children, to avoid potential damage to the eardrums.
19. This Speaker is intended to be used indoors, for household use only and should not be used for any commercial purposes. If used outdoors, bring it inside after use.

20. Do not expose the device to excessive heat, direct sunlight, open flames, or other heat sources.
21. Never operate the Speaker with wet hands, submerge under water or spill liquids into or onto the device.
22. Before cleaning, servicing, maintenance, or moving the device, ensure it is switched off and disconnected from the 5V USB-A power source (not supplied). Never use liquid or abrasive cleaners. See 'Cleaning and Maintenance' section on page 9 for details.
23. Do not place or store the Speaker near a hot burner (gas or electric), heat sources or near naked flame sources (such as candles, stoves, or BBQ's).
24. Always position and operate the Speaker on a dry, flat and stable surface. Avoid sinks or uneven surfaces.
25. Use the Speaker only for its intended purpose.
26. Do not use the Speaker if it has been dropped or damaged.
27. Do not cover the Speaker whilst in use.
28. The internal battery is not replaceable, do not attempt to replace it.

Battery Safety

CAUTION! Disposal of a battery into fire or a hot oven, or mechanically crushing/cutting battery, can result in an explosion.

CAUTION! Leaving a battery in an extremely high-temperature environment can cause an explosion or leakage of flammable liquid/gas.

CAUTION! A battery subjected to extremely low air pressure may result in an explosion or leakage of flammable liquid/gas.

WARNING: A battery should only be subjected to 0°C to 45°C during usage, storage, or transportation.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. (If battery cannot be replaced, please ignore).



Read this instruction manual carefully before using the Bluetooth® Sound Tube Speaker and keep it in a safe place for future reference.



The Regulatory Compliance Mark (RCM) shows that a product is safe to supply to the Australian market.

Getting Started

Before First Use

Prior to using your Speaker, please read all safety and operating instructions thoroughly. Please ensure you follow the steps below before using this product. We recommend you keep the original packaging for storing the device when not in use.

1. Unpack the product but keep all packaging material until you have made sure your new Speaker is undamaged and in good working order. Protective wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.
2. Remove the paper strips which are securing the USB-A to USB-C cable and the AUX cable. Uncoil the cable and straighten it to remove any kinks. Do not use the product if the USB-A to USB-C cable or the AUX cable is damaged, please reach out to the After Sales Support for further advice.

Charging the Speaker

1. Connect the supplied USB-A to USB-C cable to the DC 5V USB-C charging port (located on the bottom of the device) and to a 5V USB-A power source (not supplied). Switch on the 5V USB-A power source. The indicator light will illuminate red while charging.
2. Once the Speaker is fully charged the indicator light will turn off.

NOTE: Once the device is fully charged, it is recommended to switch off the 5V USB-A power source (not supplied) and disconnect the USB-A to USB-C cable from both the power source and the device. This will help extend the life of the device's internal lithium rechargeable battery.

NOTE: The device can operate while charging. If you are using a USB AC adaptor (not included) to charge, you may notice some noise interference in the audio output. This is not the product's fault. It is recommended to wait until charging is complete before using the Speaker.

NOTE: Once the Speaker is fully charged the indicator light will turn off.


NOTE: The device may take up to 4 hours to fully charge. It will arrive partially charged, but for maximum operating time, it is recommended to fully charge the Speaker before first use.

NOTE: When the battery is low and requires charging, the indicator light will flash (red).

NOTE: You can charge your Speaker using any 5V USB-A power source, such as a power bank, computer, or car USB port. The supplied USB-A to USB-C cable connects only one way, do not force it.

NOTE: Once the Speaker is fully charged, it can be used portably.

Product Overview

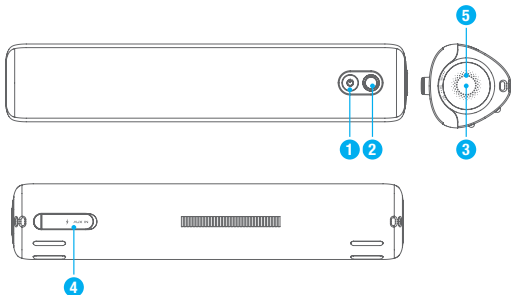

1. Power Button
2. Volume Control Dial
3. Touch Control Panel
4. Charging and AUX Port
5. Indicator Light

Included (not pictured): USB-A to USB-C Charging Cable, AUX Cable, Warranty Certificate and Instruction Manual.

Operating Instructions

Power Saving

If no devices are connected via Bluetooth® to the Speaker, it will automatically power off after approximately 10 minutes.

Power On/Off and Bluetooth® Mode

Power On/Off: Long press the  button.

Connect Bluetooth®: Once powered on the Speaker automatically enters Bluetooth® pairing mode and the indicator light will flash blue. Select 'EA0000157' on your Bluetooth® enabled device. The Speaker will make an audio prompt when connected and the indicator light will be solid blue.

Disconnect Bluetooth®: Press the  button 3 times.

NOTE: Once disconnected the Speaker will make an audio prompt and revert to Bluetooth® pairing mode and the indicator light will flash blue until it is paired again, powered off or automatically shut down (after approximately 10 minutes).

NOTE: You can also disconnect the Bluetooth® connection on your Bluetooth® enabled device, select 'EA0000157' and choose 'Disconnect' or 'Forget This Device'. Alternatively, Turn off Bluetooth® on your Bluetooth® enabled device.

Audio Playback

Once Bluetooth® is connected, you can stream music from your Bluetooth® enabled device to the Speaker.

Play/Pause: Tap the touch control panel once.

Play Next Track: Tap the touch control panel twice.

Play Previous Track: Tap the touch control panel 3 times.

Increase/Decrease Volume: Rotate the volume control dial clockwise and anticlockwise respectively.

Call Function

The Speaker features a built-in microphone so you can make and receive calls while your Bluetooth® enabled device is connected to the Speaker via Bluetooth®.

Make a Call: When connected via Bluetooth®, simply make a call as you normally would; the audio will play through the Speaker.

Answer Incoming Call: Tap the touch control panel once.


Reject Incoming Call: Long press the touch control panel for 3s.

Disconnect Ongoing Call: Tap the touch control panel once.

TWS Function (Pairing 2 Speakers)

How to pair two Speakers using TWS:

1. Power on each Speaker. Make sure both are powered on and in Bluetooth® pairing mode (flashing blue light).
2. To activate TWS pairing, on one Speaker short press the  button twice.
3. In a few seconds you should hear an audio prompt confirming pairing.
 - a. One Speaker becomes the main Speaker → flashing blue light
 - b. The other becomes the secondary Speaker → solid blue light
4. Connect your phone - go to your phone's Bluetooth® settings and connect to the main Speaker.
5. Play music - audio will now play through both Speakers in stereo.
6. To deactivate TWS pairing, simply short press the  button twice on one Speaker.

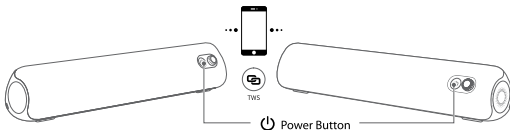


Quick tips if it doesn't work:

- Make sure both Speakers are the same model and support TWS
- Keep them close together during pairing
- Disconnect from your phone before starting TWS pairing
- If it fails, turn both Speakers off and try again

NOTE: Ensure that either of these Speakers are not connected to any Bluetooth® device before pairing them using the TWS function.

AUX

This Speaker supports audio playback via an AUX cable connection. Simply connect one end of the AUX cable into the AUX port of the Speaker and the other end into the suitable AUX supporting device.

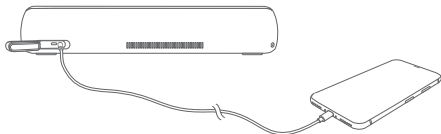

Switch between AUX Playback to Bluetooth®

To switch from AUX to Bluetooth®, short press the  button once. To switch back to AUX, short press the  button again.

EQ Switch

Your Speaker has 3 modes to choose from – Music, Movie and Gaming. To switch between modes, simply long press the touch control panel for 3s. The default mode is music.

Frequently Asked Questions

Problem	Solution
Can I use another USB-A to USB-C cable instead of the one supplied?	Most standard USB-A to USB-C and USB-C to USB-C cables can be used (5V/1A or above). However, we recommend using only the USB-A to USB-C cable supplied with the device.
There is unusual noise or interrupted sound during playback.	Ensure the Speaker is within 10 metres of the connected Bluetooth® enabled device and that there are no obstructions between them.
The Speaker automatically enters power saving mode after power on.	If Bluetooth® pairing is not completed within 10 minutes of powering on, the device will automatically enter power saving mode to conserve battery power. If no devices are connected via Bluetooth® to the Speaker, it will automatically power off after approximately 10 minutes. This is not a product fault.
The device doesn't automatically reconnect to a previously paired Bluetooth® enabled device.	Check that another device isn't already connected. Remove the Speaker from your Bluetooth® device list, then pair it again.
The Speaker isn't powering on.	The battery may be too low. Charge the device using the supplied USB-A to USB-C cable.

Other Useful Information

Cleaning and Maintenance

Before cleaning the Speaker, always unplug the USB-A to USB-C cable from the charging port.

The Speaker requires regular dusting to keep it clean. Use a standard duster or a dry, soft microfibre cloth to remove the dust from the surface. Clean the device regularly to maintain its appearance and performance.

WARNING: Do not use detergents or abrasive cleaners, and do not allow moisture, water, or other liquid to enter the device.

Storage

- Before storing the Speaker, ensure it is clean and free of dust.
- We recommend storing the device in its original carton, along with the supplied USB-A to USB-C cable, to protect it from dust.
- Store the device in a clean, dry place, out of reach of children.
- Do not place heavy objects on top of the device during storage.

Prolonged Storage

- If the device will not be used for an extended period, ensure the battery is at least half charged before storing.
- Prolonged storage with a flat or low battery may damage the battery pack.
- During prolonged storage, it is recommended to use and recharge the device at least once every 3 months.

DISPOSE OF USED BATTERIES

1. Do not dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
2. Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
3. Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and are for compatibility purposes only. Other trademarks and trade names are those of their respective owners. These brands are not associated with this product and are not related to Uncle Bill's Australia Pty Ltd.

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

If you require an alternative format of this instruction manual such as website, email, or DVD, please contact service@unclebills.com.au.

The Sound Tube Speaker has been fully tested and meets all requirements as set out by the below testing standards:

AS/NZS 62368.1
AS/NZS 4268
AS/NZS CISPR 32
AS/NZS 2772.2

Specification Table

MODEL:	EA0000157
BATTERY CAPACITY:	3.7V --- 2000mAh
BLUETOOTH® VERSION:	5.3
INPUT VOLTAGE:	5V --- 1A (charge through USB-C input)
INGRESS PROTECTION:	IPX5
DIMENSIONS:	343 x 68 x 68 mm
NET WEIGHT:	687g (approximately) - excluding USB-A to USB-C charging cable
WARRANTY:	1 Year
VERSION NO:	9
ISSUE DATE:	14 July 2026



Signify®

Bluetooth® Sound Tube Speaker with TWS Function

Repair and Refurbished Goods or Parts Notice

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 777 137 or write to us at:

UNCLE BILL'S AUSTRALIA PTY LTD

48B Egerton Street, Silverwater NSW 1811 Australia

1300 777 137 Opening Hours - 9:00am - 4:30pm (Mon-Fri), 9:00am - 3:00pm (Sat)

service@unclebills.com.au www.signifyelectronics.com.au

AFTER SALES SUPPORT

1300 777 137

MODEL: EA0000157

service@unclebills.com.au

SELLABLE ID: 758863 10/2026

1

**YEAR
WARRANTY**



ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to your nearest ALDI store within 60 days from the date of purchase for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China
ALDI STORES, 1 SARGENTS ROAD
MINCHINBURY NSW 2770

www.aldi.com.au

AFTER SALES SUPPORT



1300 777 137



service@unclebills.com.au

MODEL: EA0000157

SELLABLE ID: 758863

10/2026

1

YEAR WARRANTY